




**SHIRE** WORK BOAT ENGINE MANUAL

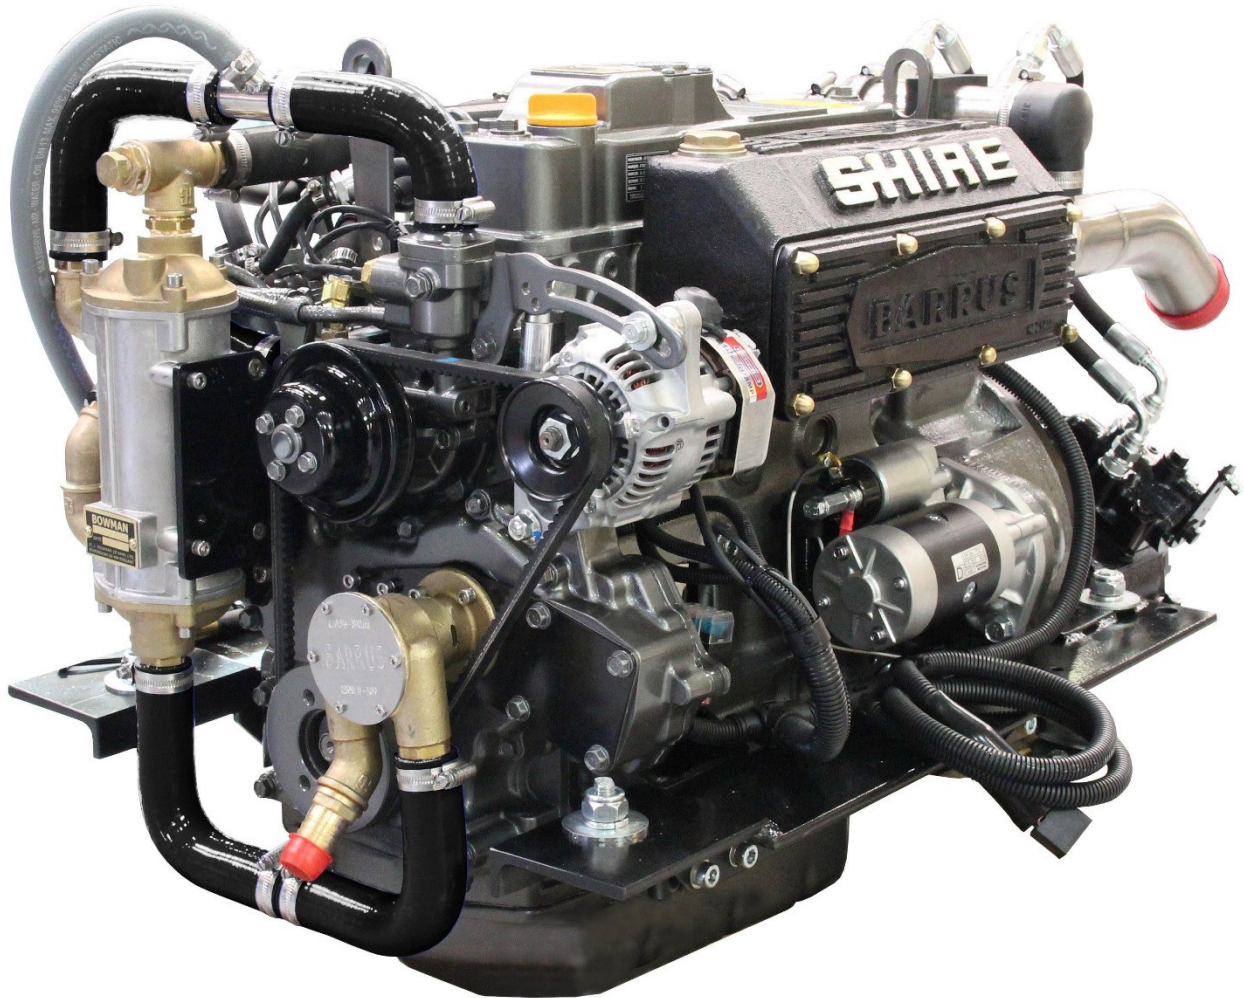

For the following engine models\*:

SHIRE 40 WB

SHIRE 50 WB

**(Corresponding to the condensed paper copy Manual – RDG603A22)**





\*Standard Model, there may be a number of optional extras, or alternative components, that might be fitted to an engine that are not shown in this book.

## SAFETY

E.P. Barrus is concerned for your safety. We use safety statements throughout the manual to call your attention to the potential hazards associated with the operation of your Shire engine.

Follow the precautions listed throughout the manual before operation, during operation and during servicing/maintenance procedures for your safety, the safety of others and to protect the performance of your engine.

Safety alert symbol appears throughout the manual. It means attention, be alert as your safety is involved. Please read and follow the message that appears after the safety alert symbol.


 <p><b>NOTICE:</b></p>	<p>This indicates a situation which can cause damage to the machine, personal property and/or the environment or cause the equipment to operate improperly</p>
 <p><b>CAUTION:</b></p>	<p>This indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.</p>
 <p><b>WARNING:</b></p>	<p>This indicates a hazardous situation which, if not avoided, could result in death or serious injury.</p>
 <p><b>DANGER:</b></p>	<p>This indicates a hazardous situation which, if not avoided, will result in death or serious injury.</p>

## Engine Details

Engine Serial Number:

Please enter your engine serial number in the space provided above. Please quote the engine identification number during any enquiry or when ordering spare parts. Information about the engine serial number and its location on the engine can be found in **SECTION 2** of the manual.

### Shire Engine Manuals and Shire Parts Books

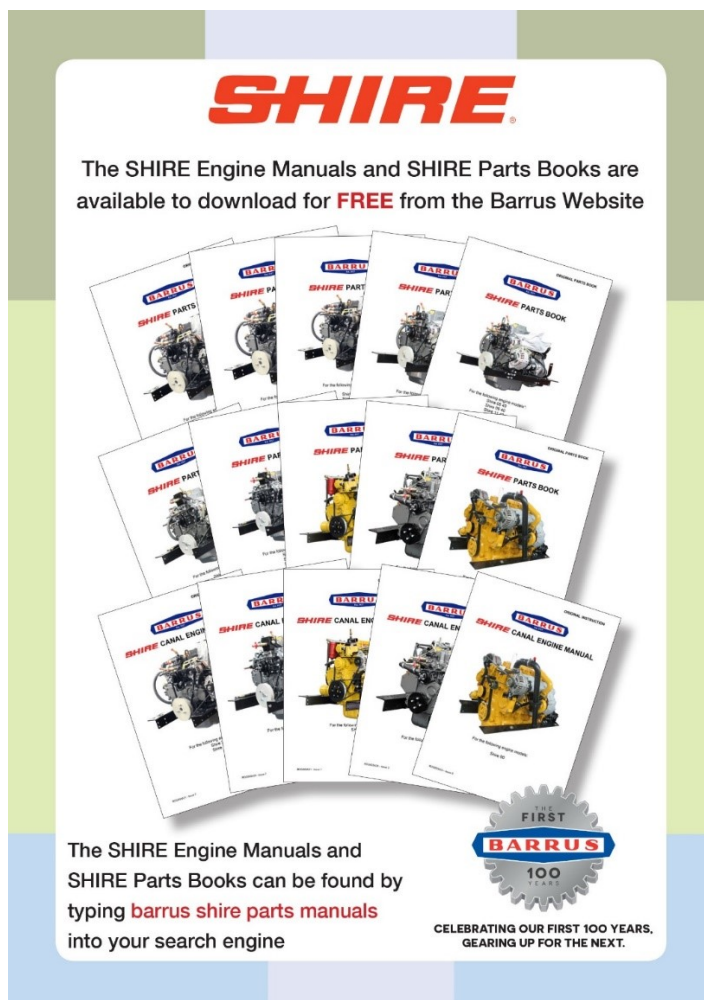

To access the complete Shire Engine Manuals and Shire Parts Books on the internet type the following short links into your search engine or just scan the QR code above.

<https://shireshop.co.uk/> - Shire Shop

<https://www.barrus.co.uk/shire-manuals/> - Complete Shire Engine Manuals

<https://www.barrus.co.uk/shire-parts/> - Shire Parts Books

## Operators Manual

**NOTICE:**

THIS MANUAL FORMS AN INTEGRAL PART OF THE ENGINE IT ACCOMPANIES, IF A TRANSFER OF TITLE OCCURS, IT MUST ALWAYS BE HANDED OVER TO THE NEW OWNER.

Thank you for purchasing this Shire Work Boat Engine from E.P.Barrus. This manual has been compiled to help you to operate your engine and its associated parts with safety and pleasure. Please read it carefully in conjunction with the Yanmar and PRM Gearbox Manuals and familiarise yourself with the engine and its parts before operation. The PRM Gearbox Manual is also available from the PRM website:

[www.prm-newage.com](http://www.prm-newage.com)

If the engine is fitted with an E-Kit and/or Hybrid options, please also read the supplied manuals for them carefully.

The information and recommendations given in this manual are based on the latest information available at the time of publication. E.P.Barrus reserve the right to change the specification of its products and manuals without prior notice.

Depending upon the equipment specification of the engine and accessories fitted, there may be discrepancies with the information presented in this handbook. No claims may be pursued in this respect.

## WARRANTY

The Shire UK Limited Warranty provides coverage for up to five years or 2000 hours (whichever occurs first) for recreational users and three years or 2000 hours (whichever occurs first) for commercial users from the date of warranty commencement. This is dependent on the following conditions.

This covers the majority of Shire Engine components with the exception of the items as stated in this document.

To ensure that you have been registered for your warranty, please detach and fill in the form on the back of this manual.

Return it to the address given or email it to [Richard.Cooke@barrus.co.uk](mailto:Richard.Cooke@barrus.co.uk)

The Warranty will only apply if the following have been carried out and the registration form has been completed and returned to Barrus.

The warranty period begins when either the owner registers the engine or it is triggered automatically. A discretionary period of 6 months is given following the delivery of the engine (to allow for installation and commissioning), following this the warranty period will automatically start.

The repair or replacement of parts, or the performance of service under this warranty, does not extend the life of this warranty beyond its original expiry date.

### TERMS

It is the responsibility of the boat builder or owner to ensure the Shire Engine is registered for warranty.

The Warranty will only apply if the following have been carried out:

- The installation is in full compliance with the requirements defined in the manual and the checklist completed and signed by the engine installer.
- A copy of completed engine installation checklist accompanies the warranty registration form.
- The boat builder or engine installer has completed the Boat Builder Section on the Service Record Card (located at the back of the manual) regarding hand over and commissioning of boat.
- The engine and ancillary systems are installed in compliance with current and applicable national and international standards.
- The maintenance has been completed to the full requirements, using genuine parts and recorded in the manual.

**SAFETY**

E.P Barrus staff or their representatives can only carry out warranty repairs if there is suitable and safe access to the boat and engine room.

**PRM GEARBOXES**

PRM Gearboxes are covered by a three year warranty for recreation users and two years for commercial users.

**ELECTRICAL SYSTEMS**

Shire Engine alternator, starter motor and electrical components are subject to a limited one year warranty.

**FUEL SYSTEMS**

Fuel injection and supply equipment including the injectors and pump(s) are subject to a limited one year warranty.

It is a condition of the warranty that a separate water trap is fitted between the fuel tank and the engine fuel lines (in addition to the filters fitted to the engine). The fuel tank should always be kept clear of dirt, water and any other contamination. It is not recommended that the fuel tank be run completely empty as this will induce air into the fuel system and can cause fuel injection or starting system damage- which would not be covered by the warranty.

Upon installation the fuel system should be pressure or vacuum tested to ensure no leaks are present. Poor quality fuel systems can cause engine fuel injection system damage which is not covered by the warranty. The fuel system should be fully primed ahead of engine starting- failure to do so can cause damage to the engine starting system and fuel system- this damage is not covered by the warranty.

**POOR QUALITY FUEL**

Poor running (including smoking) engines that are being run (or have been run) on low quality or contaminated fuel are not covered by the warranty. Any replacement parts that are required as a consequence of using incorrect or low quality fuel are not covered by warranty.

Engine and fuel equipment is not covered by warranty if bio-diesel that does not comply with EN15940 is used (See 5. Refuelling of Section 6 – Operation).

Only fuel fully compliant with EN590 or EN15940 should be used in Shire Engines. Failure to comply with this may invalidate the warranty.

**WATER PUMPS**

Seawater and raw water pumps and their components are wearing parts. The pump body and bearings are covered for the duration of one year. Cover seals, shaft seals and impellers are not covered by warranty.

**CONDITIONS THAT MUST BE MET IN ORDER TO OBTAIN WARRANTY COVERAGE**

Warranty coverage is only available from EP Barrus Ltd. Routine maintenance outlined in the Owner's Manual must be performed using genuine parts in order to maintain warranty coverage. If the customer performs maintenance to an insufficient level, Barrus reserves the right to withdraw warranty coverage.

## **WARRANTY CLAIMS**

Warranty claims must be made by either an authorised dealer or directly to EP Barrus.

The dealer or boat builder will arrange for the inspection and any necessary repairs. If the repairs carried out are not covered by the warranty, the purchaser shall pay for all related labour and material, and any other expenses associated with that service.

Any claim should be made as soon as possible, and no later than two weeks after the initial discovery of the defect. No agent outside the EP Barrus Ltd network should be instructed before the defect has been reported and agreement made with EP Barrus Ltd.

## **WHAT IS NOT COVERED**

This limited warranty does not cover the following:

- Routine maintenance and service items,
- Adjustments,
- Normal wear and tear,
- Damage caused by abnormal or incorrect use,
- Operation of the product in a manner inconsistent with the recommended operation/duty cycle,
- Accident, submersion,
- Improper installation (i.e. an installation not consistent with the requirements laid out),
- Systems using or affected by an accessory or part not manufactured or sold by EP Barrus Ltd,
- Systems that have been altered or modified (including addition of electrical systems such as charge boosters or other electrical management products),
- Expenses related to crane-out, launch, towing, storage, telephone, rental, inconvenience, slip fees, insurance coverage, loan payments, loss of time, loss of income, or any other types of accidental or consequential loss or damages,

Engine and engine starting systems are not covered by warranty if it is found that the engine start battery or supply circuit/system is not of the correct specification. Or if the engine start battery is partially or fully discharged.

Damage due to rust or corrosion, submersion, or unreasonable exposure to the environment, such as exposure to high humidity, rain fall, or seawater, or conditions resulting in the freezing of cooling water are not covered.

Water ingress of any kind into the engine via any means (other than the cooling system) will void the warranty. It is the responsibility of the owner/installer to ensure that no water can enter the engine during use or storage.

The standard alternators fitted to Shire Engines are not suitable for charging lithium-ion batteries. If the standard alternators are used for charging lithium-ion batteries, they will not be covered under warranty. If lithium-ion batteries are to be used a specialist alternator will be required.

### **FREQUENT RUNNING**

To ensure ongoing and reliable operation, Engines should not be left without running for periods of more than two weeks at any one time. If not required to run, every two weeks the engine should be started and run under load until correct operating temperature is reached- this should then be maintained for a minimum of 15 minutes.

### **TRANSFER OF WARRANTY**

The warranty is valid for the first owner of the Shire engine and is transferrable only at the discretion of EP Barrus Ltd.

### **DELIVERY**

Damage caused during transport (or before delivery) must be reported to the courier and the delivery signed for highlighting it. Failure to do so may result in the damage not being covered.

Any parts missing from a delivery should be reported to EP Barrus within 3 working days. Photographs of the shipment including packaging will be required.

Note. Engines and ancillary parts are photographed, recorded and stored prior to shipment to the customer.

### **River Canal Rescue Membership**

RCR offer a number of support packages and services to give the inland boater peace of mind in the event of an incident, breakdown or emergency. They offer year round 24/7 national breakdown and recovery assistance for members on the inland waterways.



Please see RCR leaflet included with the other engine documents for more details. The leaflet is stamped and RCR will offer a first year 20% discount to all new Shire engine owners. To gain this discount please call RCR on 01785785680. Please have ready to hand your Shire warranty registration date.

**Note:** This does not affect the normal Shire engine warranty arrangement.



## Index

	Page
<b>SECTION 1 – Safety Precautions .....</b>	<b>13</b>
1. General.....	13
2. Lifting .....	13
3. Rotating Shafts and Belts .....	14
4. Exhaust System.....	14
5. Launching and Lifting Boats.....	15
6. Batteries.....	15
<b>SECTION 2 – Engine Identification.....</b>	<b>16</b>
<b>SECTION 3 – Component Identification.....</b>	<b>17</b>
1. Shire 40 Work Boat.....	17
2. Shire 50 Work Boat (Shire 40 WB Optional).....	18
<b>SECTION 4 – Control Panel .....</b>	<b>19</b>
1. Standard Control Panel.....	19
2. Deluxe Control Panel .....	19
3. Control Panel Overview .....	20
4. Warning Light Procedure .....	20
5. Overall Dimensions of the Standard Control Panel.....	22
6. Overall Dimensions of the Deluxe Control Panel .....	22
<b>SECTION 5 – Installation.....</b>	<b>23</b>
1. Ventilation .....	23
2. Engine Beds .....	23
3. Pressurised Water Header Tank.....	23
4. Shaft Connection and Propeller Selection .....	24
5. Engine Anti-Vibration Mounts .....	24
6. Engine Alignment.....	27
7. Engine Inclination .....	27
8. Electrics .....	28
9. Electrical Options.....	29

10.	Engine Oil .....	29
11.	Fuel.....	30
12.	Coolant .....	31
13.	Control Cables .....	32
14.	Domestic Battery Bank .....	33
15.	Seawater Strainer .....	34
16.	Control Panel.....	34
17.	Seawater Pump Hose Minimum Inlet Size.....	35
18.	Exhaust System.....	36
19.	Hydraulic Drive Transmissions .....	39
20.	Hydraulic Pump Drive Option.....	40
21.	Calorifiers.....	40
22.	Control Cables .....	40
23.	Front Power Take Stub Shaft Option .....	40
24.	PRM 280DP Gearbox with Power Take Off (Option).....	41
25.	Engine Start Battery.....	41
26.	Additional Wiring Connection.....	41
27.	Installation Check List.....	42
	<b>SECTION 6 – Operation.....</b>	<b>43</b>
1.	Starting the engine for the first time .....	43
2.	Starting Procedure.....	43
3.	Stopping Procedure .....	44
4.	Full Load Running.....	44
5.	Refuelling.....	44
6.	Diesel Fuel Additive .....	45
7.	Exhaust Back Pressure (Work Boat with dry exhaust).....	45
8.	Single Shift Control Lever Side Mount Operation - Optional (RDG9210055).....	45
	<b>SECTION 7 – Service Procedure .....</b>	<b>46</b>
1.	Engine Oil and Filter Change.....	46
2.	Air Filter Check and Change.....	47

3.	Gearbox Oil Change .....	47
4.	Disposal of Oil and Related Items.....	48
5.	Primary Fuel Filter Drain .....	49
6.	Primary and Secondary Fuel Filter Change.....	50
7.	Fuel System Bleeding .....	50
8.	Cooling System.....	51
9.	Belt Adjustment.....	52
10.	Belt Maintenance .....	52
11.	Belt Replacement .....	53
12.	Control Panel Maintenance.....	54
13.	Sacrificial Anode Change.....	54
14.	Raw Water Pump Impellor Change .....	55
15.	Engine Heat Exchanger Tube Stack Flushing .....	55
16.	Winterization of Seawater Cooling System .....	55
<b>SECTION 8 – Service Schedule .....</b>		<b>56</b>
1.	Specifications and Capacities .....	56
2.	Service Intervals .....	57
<b>SECTION 9 – Wiring Diagrams .....</b>		<b>58</b>
1.	Engine Wiring Diagram Shire 40, & 50 .....	58
2.	Standard Control Panel Wiring Diagram .....	59
3.	Deluxe Control Panel Wiring Diagram .....	60
4.	Prestolite 24 Volt 120 Amp Alternator Wiring Diagram .....	61
<b>SECTION 10 – Technical Data .....</b>		<b>63</b>
1.	Engine Data .....	63
2.	Return Diesel System .....	63
3.	Dry Weight of Engine Data .....	64
<b>SECTION 11 – Dealer List .....</b>		<b>65</b>
<b>SECTION 12 – Shire Parts.....</b>		<b>67</b>
<b>SECTION 13 – Afterlife Recycling .....</b>		<b>70</b>
<b>SECTION 14 - Declarations .....</b>		<b>71</b>

1. Declaration of Conformity for Recreational Craft Propulsion Engine with the requirements of Directive 2013/53/EU.....	71
2. Declaration of Conformity for Recreational Craft Propulsion Engine with the requirements of the Recreational Craft Regulations 2017 (UKCA Marking).....	72
3. Declaration of Incorporation of Partly Completed Machinery.....	73
4. EU Declaration of Conformity with the Exhaust Emissions Requirements of Directive 2013/53/EU.....	77
<b>SECTION 15 – Lubricant Safety Data Sheets .....</b>	<b>78</b>
1. Golden Film Running In Oil.....	78
2. Ground Force 10W-40 .....	86
3. Liquimatic Super ATF .....	95
<b>SECTION 16 – Shire Service Record Card.....</b>	<b>104</b>

## SECTION 1 – Safety Precautions

### 1. General



**NOTICE:**

NEVER PERMIT ANYONE TO OPERATE THE ENGINE WITHOUT PROPER TRAINING.

It is the responsibility of the installer/operator to ensure that the finished installation complies with CE Marking, UKCA Marking, relevant Health & Safety requirements, the Recreational Craft Directive and or any other legislative requirements before commissioning.

Ensure that the engine battery isolator switch is in the off position and the key removed from the control panel before carrying out any maintenance or repairs.

Ensure that all installations and boat alterations comply with any appropriate local, regional, national or international regulations. When installing new propulsion systems (that are not identical to the original ones) into existing craft, a new vessel Post Construction Assessment will be required, and carried out by an independent notified body.

### 2. Lifting



**DANGER:**

**CRUSH HAZARD!** NEVER STAND UNDER A HOISTED ENGINE. IF THE HOIST MECHANISM FAILS, THE ENGINE WILL FALL ON YOU, CAUSING SERIOUS INJURY OR DEATH.

The Lifting points supplied with the engine are for lifting the engine/gearbox only. A suitable spreader bar must be employed to prevent over-stressing either bracket during any lift.

### 3. Rotating Shafts and Belts



**WARNING:**

**SEVERE HAZARD!** KEEP HANDS AND OTHER BODY PARTS AWAY FROM MOVING/ROTATING PARTS. WEAR TIGHT FITTING CLOTHING AND KEEP YOUR HAIR SHORT OR TIE BACK. REMOVE ALL JEWELLERY BEFORE COMMENCING WORK. CHECK BEFORE STARTING THE ENGINE THAT ANY TOOLS OR RAGS USED DURING MAINTENANCE HAVE BEEN REMOVED FROM THE AREA.

The engine and its accessories are not intended to be put into operation until they are integrated into the boat as a whole. No person should be in the engine compartment and the engine cover or deck hatches should be closed whilst the engine is running.

### 4. Exhaust System



**WARNING:**

**EXHAUST HAZARD!** NEVER OPERATE ENGINE IN A BOATS ENGINE BAY WITHOUT PROPER VENTILATION. NEVER BLOCK VENTS OR OTHER MEANS OF VENTILATION. ALL COMBUSTION ENGINES CREATE CARBON MONOXIDE GAS DURING OPERATION. ACCUMULATION OF THIS GAS COULD CAUSE ILLNESS OR EVEN DEATH.



**WARNING:**

**BURN HAZARD!** WAIT UNTIL THE EXHAUST COOLS BEFORE YOU TOUCH IT.

Exhaust gases may have temperatures as high as 650°C and contain elements which are harmful if ingested.

It is therefore essential that exhaust systems are gas tight and lagged to prevent accidental burning and inhalation of exhaust gases when inside the boat cabin.

## 5. Launching and Lifting Boats

Care must be taken when launching or craning new boats into or out of the waterway, so that water does not enter the engine via the exhaust system or air vents. It is recommended that these are blocked temporarily whilst undertaking this procedure.

## 6. Batteries



**DANGER:**

**EXPLOSION HAZARD!** NEVER SHORT OUT THE BATTERY TERMINALS, INCLUDING WHEN CHECKING THE REMAINING BATTERY CHARGE THIS WILL RESULT IN A SPARK AND MAY CAUSE AN EXPLOSION OR FIRE.



**WARNING:**

**BURN HAZARD!** BATTERIES CONTAIN SULPHURIC ACID. NEVER ALLOW BATTERY FLUID TO COME IN CONTACT WITH SKIN, EYES OR CLOTHING. SEVERE BURNS COULD RESULT. MAKE SURE THE CORRECT PERSONAL PROTECTION EQUIPMENT IS WORN.

- Batteries can produce explosive gases; keep sparks and flames away from the battery.




**NO SMOKING**

- Batteries contain sulphuric acid; if splashed on skin or eyes, flush well with water and seek medical advice.
- Keep battery tops and battery compartment ventilated at all times.
- If disconnecting the battery; remove the earth lead **FIRST**; and re-connect it last.
- If charging the battery; ensure that the charger is switched off before connecting and disconnecting.
- Do not tip the battery on its side.
- Please see label on battery or manufacturer's instructions for specific information.

## SECTION 2 – Engine Identification

The engine serial number can be found engraved into the brass plate on the top of the engine rocker cover and stamped to the crankcase next to the starter motor.

An example of the engine identification plate is shown below (**Figure 1**):

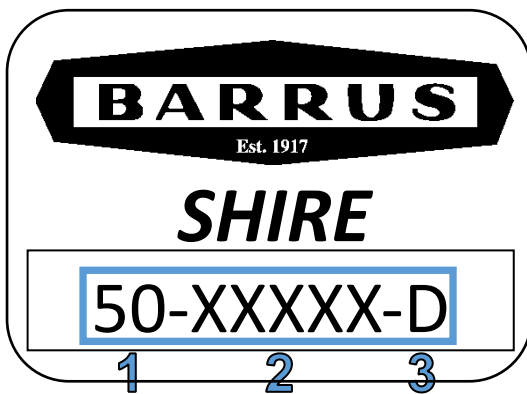

Description	
1	Engine Model
2	Serial Number
3	Indicates Model Type or Optional Extras: WB = Work Boat D = Deluxe Panel 3 = 3:1 Ratio Gearbox

**Figure 1: Engine Identification Badge**

Description of Models:

Abbreviation	Type of Engine	Description*
CB	Canal Boat	Keel cooled dry exhaust manifold
40 WB	Work Boat	Seawater/Heat Exchanger cooled, dry exhaust manifold with either a dry exhaust system (same as a Canal Boat) or water injected exhaust system. Can also be used for sea going applications
50 WB	Work Boat	Seawater/Heat Exchanger cooled, water cooled (WM) exhaust manifold with either a dry exhaust system (same as a Canal Boat) or water injected exhaust system. Can also be used for sea going applications

**\*Note:** There are a number of other optional extras that may be fitted to an engine that are not listed here.

A list of common item service part numbers can be found in **Section 12**, Shire Parts.



## SECTION 3 – Component Identification

### 1. Shire 40 Work Boat

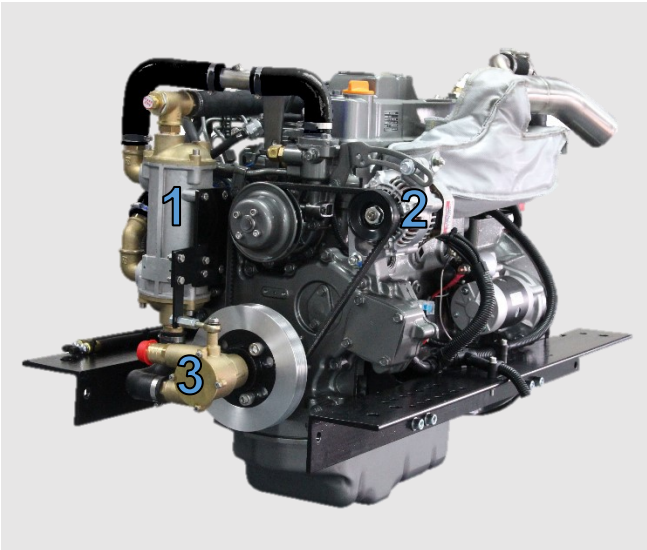


Figure 2: Shire 40 Left Side (Viewed from front)

	Description*
1	Coolant Heat Exchanger
2	50 Amp 12 Volt Alternator
3	Seawater Pump (Crankshaft Driven)

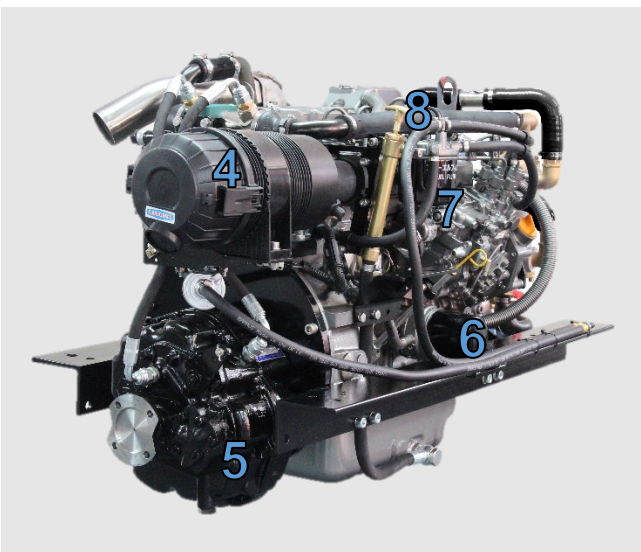


Figure 3: Shire 40 Right Side (Viewed from rear)

	Description*
4	Air Filter
5	Gearbox
6	Oil Filter
7	Secondary Fuel Filter
8	Engine Sump Pump

**\*Note:** There are a number of other optional extras that may be fitted to an engine that are not shown here.

## 2. Shire 50 Work Boat (Shire 40 WB Optional)



Figure 4: Shire 50 Left Side (Viewed from front)

	Description*
1	Coolant Heat Exchanger
2	50 Amp 12 Volt Alternator
3	Seawater Pump (Camshaft Driven)
4	Water Cooled Manifold



Figure 5: Shire 50 Right Side (Viewed from rear)

	Description*
5	Air Filter
6	Gearbox
7	Oil Filter
8	Secondary Fuel Filter
9	Engine Sump Pump

**\*Note:** There are a number of other optional extras that may be fitted to an engine that are not shown here.

## SECTION 4 – Control Panel

### 1. Standard Control Panel



Figure 6: Standard Control Panel

	Description
1	Tachometer Gauge
2	Hour Meter
3	Water Temperature Warning Light
4	Oil Pressure Warning Light
5	50A Alternator Charge Warning Light
6	150/240A Alternator Charge Warning Light
7	Glow Plug Light
8	Key Flap and Ignition Switch

### 2. Deluxe Control Panel



Figure 7: Deluxe Control Panel

	Description
1	Tachometer Gauge
2	Hour Meter
3	Water Temperature Warning Light
4	Oil Pressure Warning Light
5	50A Alternator Charge Warning Light
6	150/240A Alternator Charge Warning Light
7	Glow Plug Light
8	Key Flap and Ignition Switch
9	50A Alternator Output Gauge
10	Oil Pressure Gauge
11	Water Temperature Gauge

### 3. Control Panel Overview

- All Shire engines are supplied with a control panel.
- Depending on the model of Shire engine, the control panel will either be a standard control panel or a deluxe control panel. The following table shows which panel comes with each type of engine as standard. Please note that on certain Shire engines a different type of control panel can be ordered as an option.

Engine	Control Panel Supplied*
Shire 40	Standard Control Panel
Shire 50	Deluxe Control Panel

\* Panel supplied as standard. On certain engines a different control panel may be supplied as an option

### 4. Warning Light Procedure

- When the ignition is first turned on, the control panel warning lights will come on as a bulb check. When the engine is started the warning lights will go out. Please note that the water temperature warning light and glow plug light operate slightly differently.
- The water temperature warning light will only come on for a brief period of time when the ignition is first turned on as a bulb check. It will then only illuminate in the case of the engine coolant temperature exceeding the maximum safety level.
- The glow plug light will come on when the ignition is first turned on for 5 – 8 seconds to indicate the heating system is operational. When the light goes out the engine can be started.
- Whilst the control panel is in operation all the gauges are backlit. This does not indicate a fault and is a normal function for the control panel.
- If any of the warning lights on the control panel come on **whilst** the engine is running, please follow the correct procedure as shown in the following table.




**In the event of a fault, only trained and qualified personnel should undertake repairs on the engine.**

	Description	Procedure for Warning Light
1	Tachometer Gauge	-
2	Hour Meter	-
3	Water Temperature Warning Light	Reduce the engine revs and stop the engine within one or two minutes. Check the coolant level (refer to <b>8. Cooling System of SECTION 7 - SERVICE PROCEDURE</b> ). If the coolant level is incorrect, fill it to the correct level (refer to <b>8. Cooling System of SECTION 7 - SERVICE PROCEDURE</b> ) and restart the engine. If the coolant level is correct and the fault is still present, or there is a coolant leak, please contact your local dealer.
4	Oil Pressure Warning Light	Stop the engine immediately. Contact your local dealer. Failure to stop the engine may result in permanent engine damage.
5	50A Alternator Charge Warning Light	This indicates that the alternator has stopped charging. The engine can still be operated for a short period of time. Contact your local dealer.
6	150/240A Alternator Charge Warning Light*	This indicates that the alternator has stopped charging. The engine can still be operated for a short period of time. Contact your local dealer.
7	Glow Plug Light	This indicates that the cold start system is operating. If the light fails to illuminate during the starting procedure contact your local dealer.
8	Key Flap and Ignition Switch	-
9	50A Alternator Output Gauge	-
10	Oil Pressure Gauge	-
11	Water Temperature Gauge	-

\*Only applicable if a second alternator is fitted to the engine.

**5. Overall Dimensions of the Standard Control Panel**


(All Dimensions are in mm)

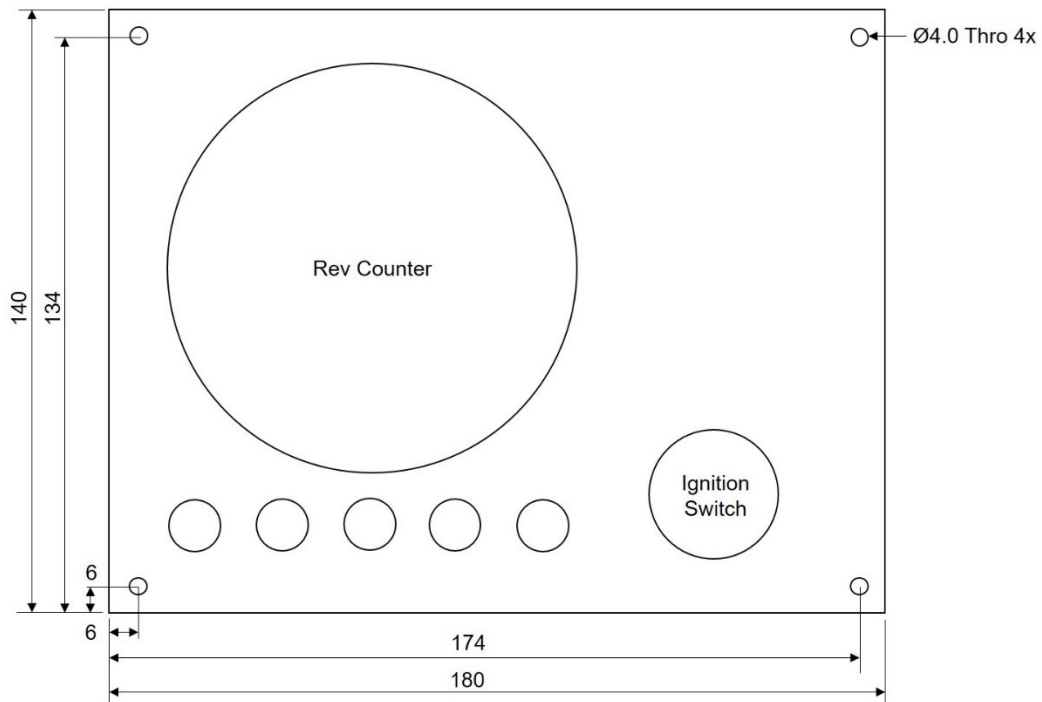

**Figure 8: Standard Control Panel Dimensions**

**6. Overall Dimensions of the Deluxe Control Panel**

(All Dimensions are in mm)

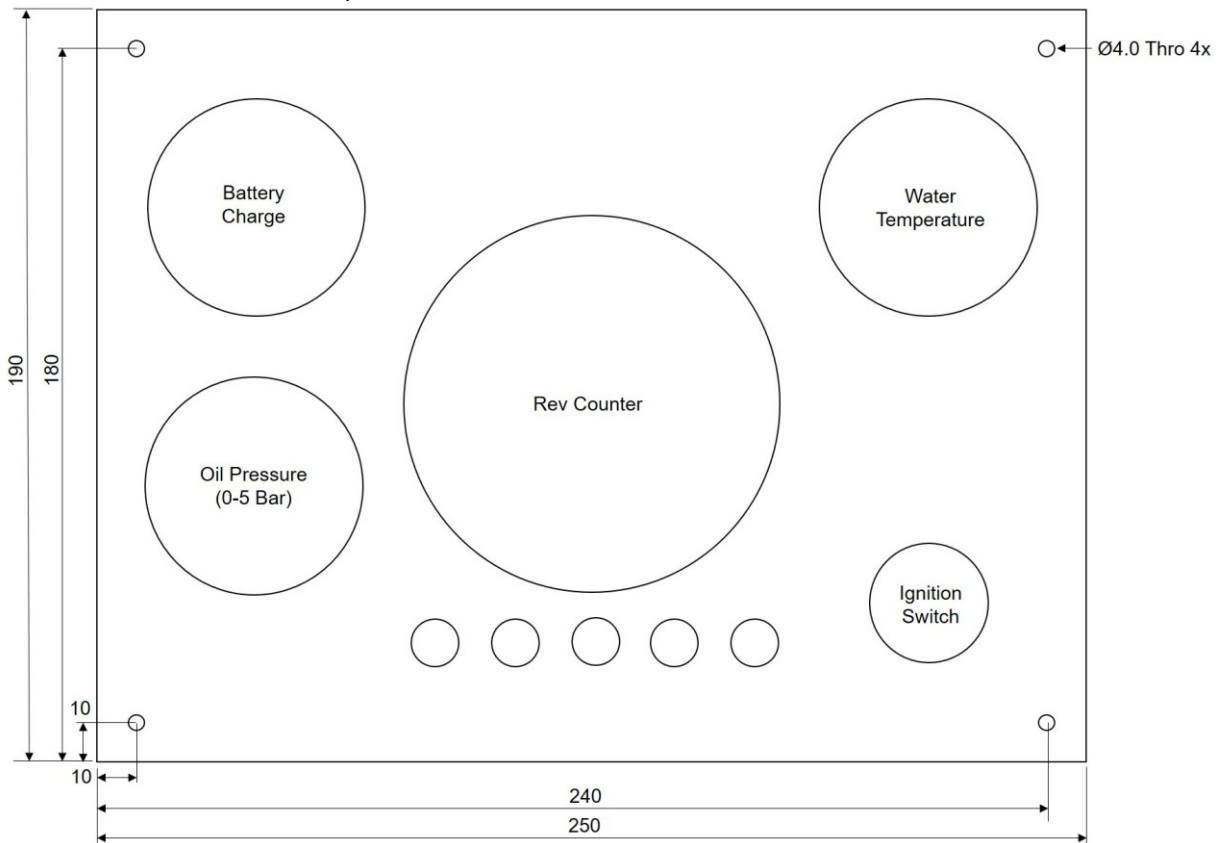

**Figure 9: Deluxe Control Panel Dimensions**

## SECTION 5 – Installation

**NOTICE:**

REFER TO THE SHIRE AND YANMAR MANUALS PRIOR TO INSTALLING THE ENGINE.

### 1. Ventilation

- All internal combustion engines radiate heat and require cool, clean air to aid complete combustion.
- Please ensure that adequate engine room ventilation is provided, by fitting at least two vents of an aperture of not less than 10,000mm<sup>2</sup> each (16in<sup>2</sup>).



An allowance must be made for any grills, louvres or bends placed in the airflows and generally an increase of 25% in area is sufficient to overcome any restriction problems.

### 2. Engine Beds

- These should be a minimum of 10mm thick, extended rearward and be welded to the hull and forward to the bulkhead. Webs or gussets must be welded in place midway to prevent flexing.

### 3. Pressurised Water Header Tank

**WARNING:**

**SCALD HAZARD!** NEVER REMOVE THE HEADER TANK CAP IF THE ENGINE IS HOT. STEAM AND HOT COOLANT MAY SPURT OUT AND CAUSE INJURY. TIGHTEN THE HEADER TANK CAP SECURELY AFTER BEING REMOVED. STEAM CAN SPURT OUT DURING ENGINE OPERATION IF THE CAP IS LOOSE.

- The pressurised header tank should be mounted higher than the level of the engine and no more than 1 metre from the engine. This is to prevent cooling system air locks.


#### 4. Shaft Connection and Propeller Selection

- Some type of flexible coupling must be used to connect the gearbox output flange to the propeller shaft flange. Various coupling flanges are widely available to assist with this.
- Please note, underperforming engines will not be covered under warranty if the cause of the poor performance is found to be due to the use of an inappropriate propeller.


#### 5. Engine Anti-Vibration Mounts

- Ensure that the engine feet do not end up at the top of the thread on the engine mounts, this puts undue pressure on them and can result in excessive engine movement and premature mount failure. If this is a problem, put steel packing plates under the mounts. Packing plates 25mm thick are available: Order RDG3906 Engine mount spacer. Alternatively, they can be manufactured locally.
- Ensure that the engine has been installed for at least 24 hours before shaft alignment is checked, to allow the mounts time to settle under the engine weight.
- Ensure that the anti-vibration mount centre screw is sufficiently raised so as not to touch the engine bed. If this occurs, excessive engine vibration will be experienced through the hull.
- For best results, fit the front AV mounts into the front holes in the engine rails. If the engine room space is a problem the mounts can be fitted slightly further back in the alternative holes and the front of the rail cut off – leaving 50mm of material to retain strength (measuring from the centre of the mount hole to the front end of the rail). Note: This procedure is only possible on non- 'E' Kit engines and may result in a very slight increase in vibration. AV mount installation points are shown on (**Figure 12**).




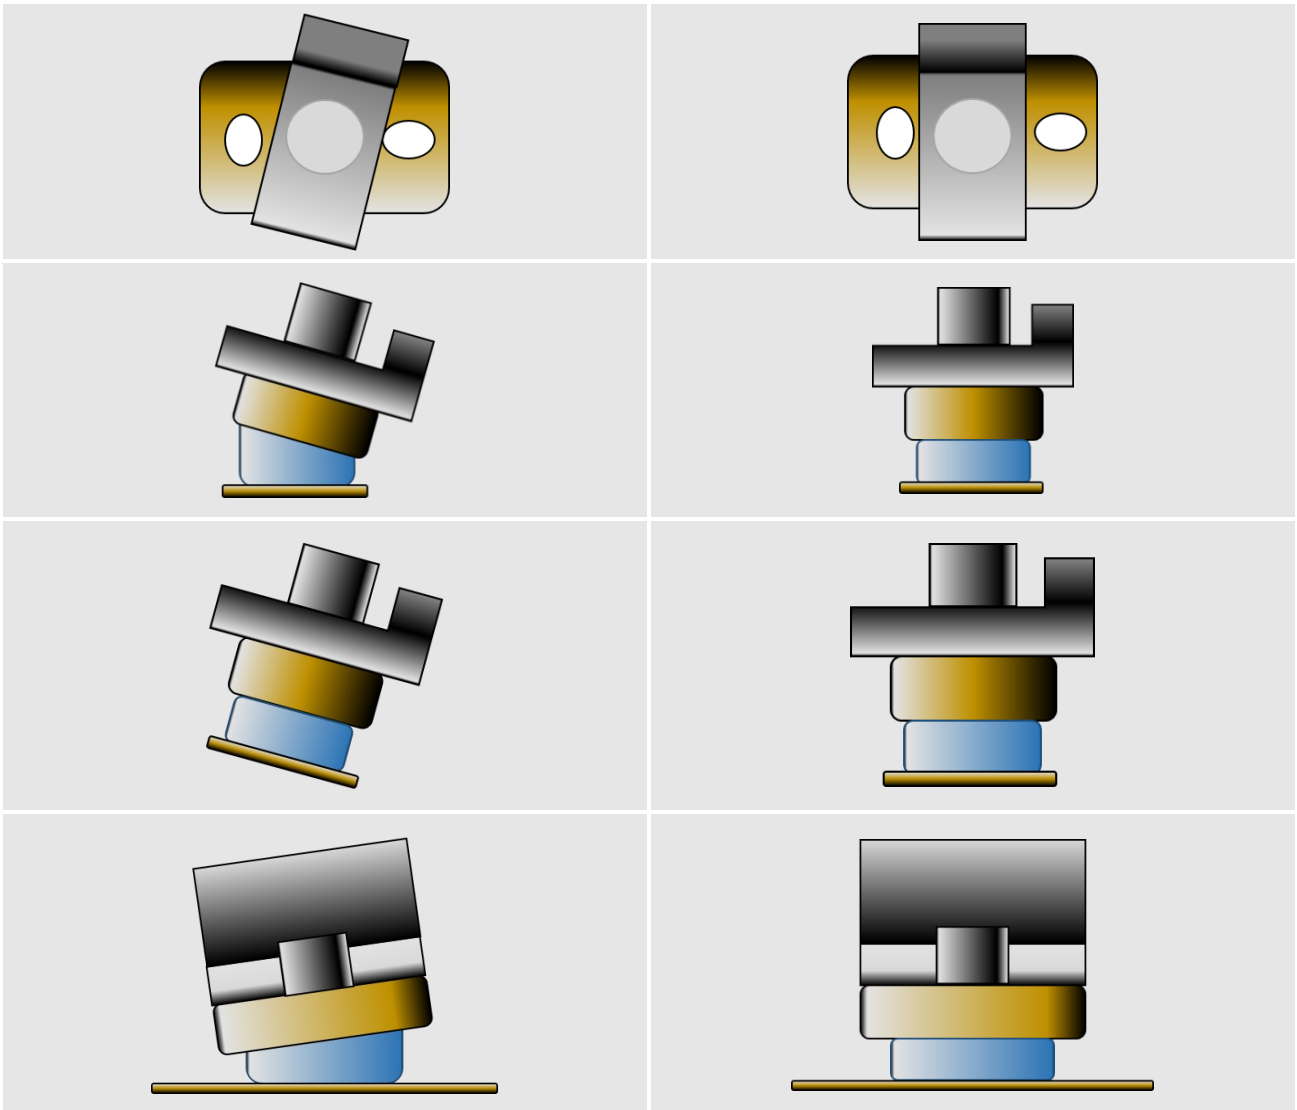

**Figure 10: Correct Anti-Vibration Mount Installation**

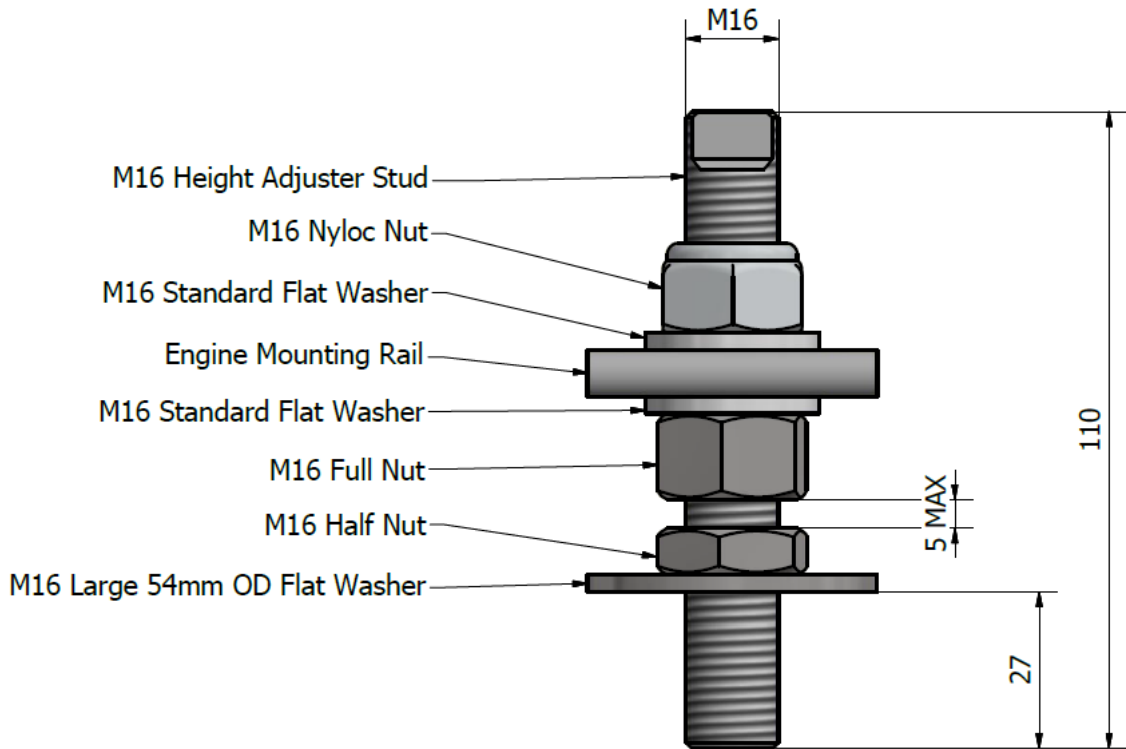

**Figure 11: Correct Anti-Vibration Mount Installation**

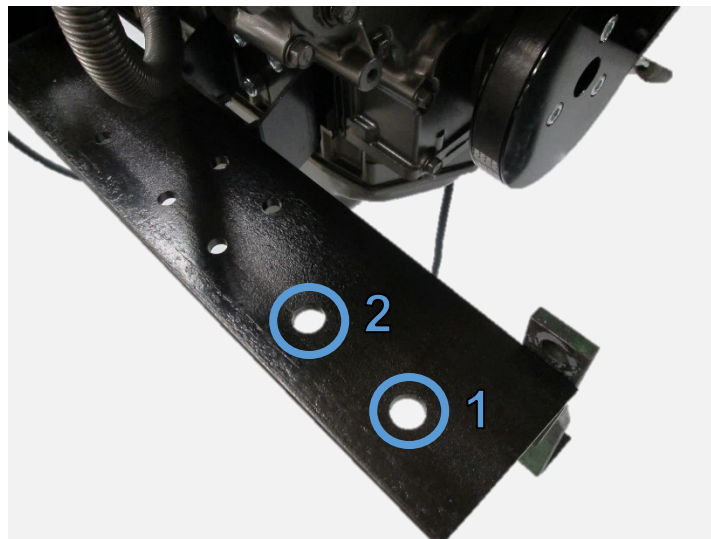

Description	
1	Normal mounting position
2	Alternative mounting position if engine compartment space is restricted

**Figure 12: Anti-Vibration Mount Installation Points**

## 6. Engine Alignment

- The gearbox output shaft flange and propeller shaft input flange must be almost perfectly aligned. A maximum of 0.05mm (0.002”) misalignment in any plane is acceptable. Ensure alignment is recheck after the first 4 hours of running, after the first month and thereafter annually.
- If the engine is out of alignment it will result in excessive vibration and possible damage to the stern tube and propeller shaft.
- Boats that are fitted with fully flexible drive couplings should still have the engine and shaft alignment as close as possible. A dummy shaft may be required for this purpose.




**Some types of flexible shaft couplings require the input and output to be misaligned, check with the coupling manufacturer’s installation instructions.**

- Minimum clearance of 25mm between rails and engine beds.

## 7. Engine Inclination

- The engine installation angle is the angle of the crankshaft centre to the water line (**Figure 13**).
- The propulsion efficiency decreases as the engine installation angle increases.
- The **maximum** engine installation angle is 15°

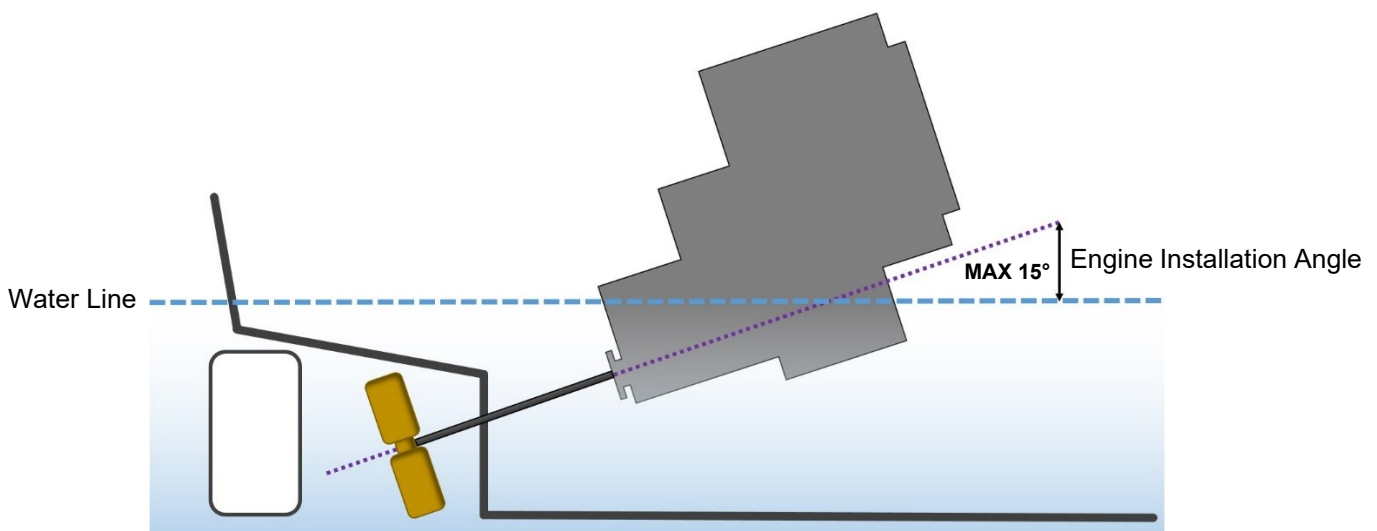

**Figure 13: Maximum Engine Installation Angle**

## 8. Electrics



- Do not attach any part, hose or cable to the engine wiring harness. There is a warning label attached to the harness to remind you of this.
- Connect the wiring extension harness multi plug to the panel plug and the other end to the engine.
- Connect the start battery positive cable to the starter motor solenoid terminal.
- The starter motor battery cable must have a cross sectional area of at least 50mm<sup>2</sup>.
- The engines are fitted with a single 50A alternator as standard.
- A single 70A Alternator can be fitted in place of the 50A Alternator as an option.
- There is a further option to have two separate alternators fitted to the engine. The standard 50A alternator and either an additional 12V 150A alternator or 240A alternator can be fitted. This option is used to charge the batteries for the domestic electrical system.
- For twin alternator engines, connect the domestic battery positive cable to the 150A or 240A Alternator. The 150A alternator has a B+ terminal and the 240A alternator has a “pos out” terminal (see wiring diagram). This ensures that the 50A alternator charges the start battery and the 150A or 240A alternator charges the domestic battery. This removes the requirement for a split charging system or relay.
- The engine is supplied with the domestic alternator belt not fitted. This is so that domestic alternator damage does not occur if the engine is run without the domestic battery back connected. The belt should only be fitted when the domestic battery bank has been connected to the domestic alternator. Belt fitting and tensioning instructions are in **Section 7 – Service Procedure**. Make sure the alignment is correct.
- A cable will need to be manufactured locally and fitted between either the lower 12V 125A, 12V 150A, 12V 240A or 24V 120A alternator and domestic battery positive terminal. The cable should have a minimum cross-sectional area of:

	Cross Sectional Area
Shire 40	40mm <sup>2</sup>
Shire 50	70mm <sup>2</sup>
24v 120amp Alternator	40mm <sup>2</sup>

- Both negative battery terminals can be connected to a common earth point.

Note: The 240A alternator is of the insulated earth design and requires a heavy-duty earth cable installed at all times.

Note: If an optional larger output alternator is fitted to either a new engine, or fitted to an old engine as an upgrade, ensure that all cables, master switches, terminals, split charge relays etc. are of sufficient capacity for the increased current.

## 9. Electrical Options



- If the engine is fitted with the optional 230V 'E' Kit System, refer to the manual supplied with it for correct wiring, control box installation and operation.
- The Shire range can be supplied with other optional additional 12V or 24V or 48V alternators. This will be supplied fitted but not wired. It is the responsibility of the boat builder to ensure that this is correctly wired to the boats electrical system.

## 10. Engine Oil



**BURN HAZARD!** WAIT UNTIL THE ENGINE COOLS BEFORE YOU DRAIN THE ENGINE OIL. HOT ENGINE OIL MAY SPLASH AND BURN YOU.



**NOTICE:**

ENGINE OIL WITH A HIGHER API CLASS THAN CD IS UNSUITABLE FOR CANAL BOAT OPERATION AND WILL CAUSE ENGINE DAMAGE IF USED.

- All Shire engines are supplied fully run in.
- Check oil levels in engine and gearbox before starting
- Use good quality engine oil SAE 10W / 40 API class CD.

## 11. Fuel



**WARNING:**

DIESEL FUEL IS FLAMMABLE AND EXPLOSIVE UNDER CERTAIN CONDITIONS.



**WARNING:**

DIESEL FUEL IS HARMFUL TO SKIN. MAKE SURE THE RELEVANT PERSONAL PROTECTION EQUIPMENT IS WORN.

- Ensure the main fuel tank is clear of dirt and water.
- A separate water trap must be fitted to all engine installations. The Shire 40 and 50 engines are supplied with an additional fuel pre-filter water trap as standard.
- Connect fuel feed return hoses from engine to main supply and return lines to main fuel tank, ensuring they are connected the correct way around. The hose to the electric fuel pump is the inlet.
- The engine hoses are supplied with 8mm (5/16") OD metal hometails and should be securely fitted to the main supply and return pipes with compression fittings.
- The engine hoses should have sufficient slack to absorb engine movement without placing strain on the hoses and be securely clipped to prevent accidental damage and chafing.
- Initially fill the fuel system by turning the ignition on to operate the electric fuel pump. Loosen the bleed screw on the top of the primary fuel filter / water trap and close when fuel begins to flow clearly (no bubbles). The rest of the process is done automatically by the engine. It is rarely necessary to bleed the injection pump or injectors upon installation as the engine will already have fuel in it from the engine run in and test procedure.



**NOTICE:**

THE PART CIRCLED IN Figure 14 IS NOT A BLEED SCREW. ATTEMPTS TO UNDO OR REMOVE IT WILL CAUSE DAMAGE TO THE PART.



Figure 14: Secondary Fuel Filter Head (129004-55612-9)

## 12. Coolant



**WARNING:**

**SCALD HAZARD!** NEVER REMOVE THE COOLANT BOTTLE CAP IF THE ENGINE IS HOT. STEAM AND HOT COOLANT WILL SPURT OUT AND CAUSE INJURY. TIGHTEN THE CAP SECURELY AFTER BEING REMOVED. STEAM CAN SPURT OUT DURING ENGINE OPERATION IF THE CAP IS LOOSE.



**WARNING:**

**BURN HAZARD!** WAIT UNTIL THE ENGINE COOLS BEFORE YOU DRAIN THE ENGINE COOLANT. HOT ENGINE COOLANT MAY SPLASH AND BURN YOU.



**WARNING:**

**BURN HAZARD!** THE WATER COOLED EXHAUST MANIFOLD IS HOT AND MAY BURN YOU.

- Prepare coolant mix of 50% clean tap water and 50% antifreeze.

**For Workboats:**

- Ensure the top header tank connection goes to the small hole connection on the tank.
- To fill the engine cooling system for the first time:
  - For the Shire 40 Work Boat fill the system through the header tank filler cap.
  - For the Shire 50 Work Boat fill the system through the exhaust manifold filler cap and then through the header tank. Note: The water-cooled exhaust manifold is an option for the Shire 40WB.



After running the engine for the first time, stop the engine and monitor the water level frequently as trapped air bubbles may be expelled. Top up the system as necessary.

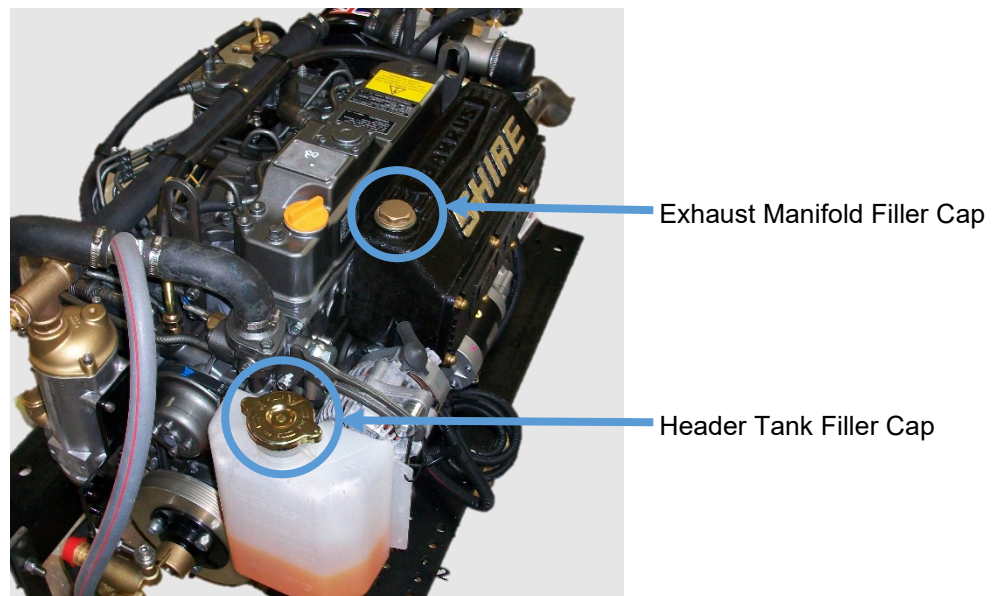


Figure 15: Shire 50 Coolant Filling Points

**13. Control Cables**

- Connect engine speed control cable. With the engine off, ensure that the engine speed control lever achieves full travel from idle to full speed. Adjust if necessary.
- Check the gearbox shift lever selects positively and that the drive direction corresponds with the gearshift control lever. Ensure that the gearbox control lever and the gearshift lever are both in neutral before connection. Adjust if necessary.



## 14. Domestic Battery Bank



**DANGER:**

**EXPLOSION HAZARD!** NEVER SHORT OUT THE BATTERY TERMINALS, INCLUDING WHEN CHECKING THE REMAINING BATTERY CHARGE THIS WILL RESULT IN A SPARK AND MAY CAUSE AN EXPLOSION OR FIRE.



**WARNING:**

**BURN HAZARD!** BATTERIES CONTAIN SULPHURIC ACID. NEVER ALLOW BATTERY FLUID TO COME IN CONTACT WITH SKIN, EYES OR CLOTHING. SEVERE BURNS COULD RESULT. MAKE SURE THE CORRECT PERSONAL PROTECTION EQUIPMENT IS WORN.

Domestic battery banks that are too large create excessive loads on the domestic alternator. Alternators running at maximum output for prolonged periods of time will eventually fail prematurely; alternators that fail due to the battery bank being over the maximum recommended size will not be covered by warranty.

Higher output additional alternators, or 'E' kits are available: if larger battery banks are required discuss your individual power requirements with the boat builder or engine supplier.

- The maximum domestic battery bank is calculated using the following:
  - Live aboard, three times domestic alternator, maximum output current.
  - Weekend cruising or hire fleet use, three and a half times domestic alternator, maximum output current.

Example 1:

Live aboard application fitted with a 150amp domestic alternator

$$3 \times 150 = 450 \text{ ampere/hour maximum battery bank size}$$

Example 2:

Weekend cruising or hire fleet application fitted with a 240amp domestic alternator

$$3.5 \times 240 = 840 \text{ ampere/hour maximum battery bank size.}$$



The standard alternators fitted to Shire engines are not suitable for charging lithium-ion batteries. If the standard alternators are used for charging lithium-ion batteries, they will not be covered under warranty. If lithium-ion batteries are to be used a specialist alternator will be required.

### 15. Seawater Strainer

- A bulkhead mounted seawater strainer or similar is **NOT** supplied with the engine. We recommend that one is fitted between the seawater inlet (seacock) and the sea water pump inlet.

### 16. Control Panel



All Shire engines are supplied with an engine control panel that shows RPM and hours run and include warning lights and a warning buzzer. The deluxe panels also have additional gauges for the water temp, oil pressure and battery charging. The panels are designed to be splash proof and are correctly installed with the gauges vertical. Do not install so that they remain out in the open, or cover up when not on use.

The control panel engine tachometer is supplied already calibrated to measure correct engine speed. If a new control panel, tachometer or alternative alternator is fitted, the tacho will require re-calibrating.

Control Panel Calibration Procedure:

- Connect control panel plug to engine wiring loom plug.
- Turn ignition on (do not start engine).
- Press and hold black button on rear of tacho until “H-“appears on the digital display at the bottom of the tacho (on the front).
- When pressing and holding the black button on rear of tacho, the value displayed will increase / decrease until the button is released. Then when pressing again it will increase / decrease in the other direction. Keep doing this until the digitally displayed value on the bottom of tacho reaches the correct value, according to the type of alternator (see below table). This must be set to the alternator with blue and black wire connected to it.
- Confirm settings to tacho meter reader.
- An optical tachometer is required to check the reading.

Barrus Alternator (Amps)	Barrus Tacho reading
50	10.50 – 11.00
70	15.00
150	19.50 – 20.00
240	22.00

Alternative or non-standard alternators will require calibrating and checking by trial and error, with a handheld tacho until the engine speed and indicated tachometer speed are the same. For the majority of the engines, the tacho is driven by the 50A alternator. Engine energise to stop systems are available as an optional extra.

### 17. Seawater Pump Hose Minimum Inlet Size

	Cross Sectional Area
Shire 40/50	25mm (1")

Note: A Suitable reinforced, non-collapsible hose must be used.

## 18. Exhaust System



**WARNING:**


**EXHAUST HAZARD!** NEVER OPERATE ENGINE WITHOUT PROPER VENTILATION. NEVER BLOCK VENTS OR OTHER MEANS OF VENTILATION. ALL COMBUSTION ENGINES CREATE CARBON MONOXIDE GAS DURING OPERATION. ACCUMULATION OF THIS GAS COULD CAUSE ILLNESS OR EVEN DEATH.

### Work Boat with Dry Exhaust:

The exhaust outlet size on the engine is 1½” BSP female. There must be a flexible exhaust hose of suitable exhaust grade between the engine and the silencer or hull outlet. The outlet must be a minimum of 300mm and above the waterline at all times. The exhaust fittings and silencer (if fitted) must not be smaller than 1½” BSP. Exhaust silencers, flexible exhaust hose connections and lagging blanket are all available as optional extras:

Part Description	Part Number
Exhaust Coupling 1½” x 1½” BSP	RDG1916
Exhaust Silencer DSA-38	RDG1911
Flexible Exhaust Hose (18”)	RDG1879
Blanket 18” Flexy Exhaust	RDG2477
Hospital Silencer 1½” BSP	RDG6536
1 ½”F x 1 ½”F BSP 90 Elbow	RDG5898

Make sure the exhaust increases then decreases in height as shown in (Figure 16).

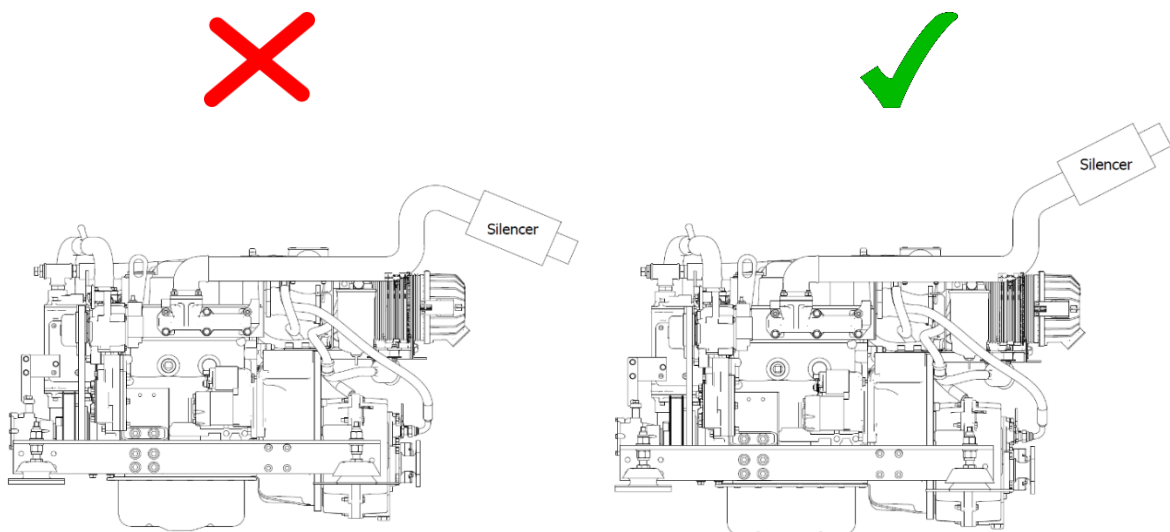

**Figure 16: Correct Exhaust Installation**

### Work Boat with Water Injected Exhaust:


If the engine is installed low down in the boat, below the outside water level, a system such as a Lift Silencer with a siphon break system, must be used to prevent sea water from flowing back down the exhaust and into the engine.

Ideal internal exhaust hose diameter is 60mm ID on engines fitted with optional PRM 280 gearbox, or a minimum of 50mm (2") on engines with a PRM150 gearbox.

The maximum engine exhaust back pressure is 12.75 kPa (1.85 psi) initially for the 4TNV88 block.

- **Lift Silencer**

The correct installation of the lift silencer is vital to safety, and to avoid back flooding of the engine. **Figure 17** shows how to install the lift silencer correctly (Note: Halyard (M&I) Limited have given Barrus permission to use the diagram).

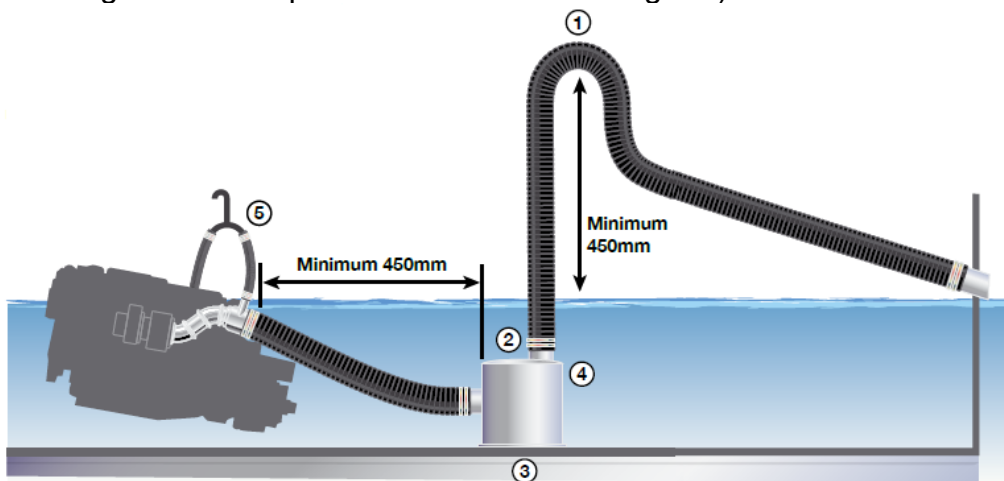

**Figure 17: Correct Installation of the Lift Silencer**

1. The swan neck must reach at least 450mm (18") above the waterline, when installed on hull centreline.
2. The top of the silencer should be at least 300mm (12") below the water injection point.
3. The silencer must be installed as near as possible to the centreline of the hull, particularly where severe angles of heel are expected. The swan neck must be 450mm above heeled water line.
4. Remember that 15% of the volume of the exhaust hose may be water. The size of the silencer selected must be such that water draining into it will fit it by no more than one third.
5. A siphon break must be used.



The silencer may only be used in a Water Injected marine exhaust system. The overall design of the system, and choice of components, will have a result on the back pressure in the exhaust which is vital to the performance and life of the engine. **Barrus recommend that Halyard (M&I) Limited are used for the Lift Silencer, Siphon Break and other components. Contact Halyard (M&I) Limited for further information.** The silencer must be drained before the boat is craned or transported and during the winter.

There must be at least 450mm distance between the water injection point and the position of the silencer to allow adequate cooling of the exhaust gases. Maximum temperature during continuous operation of the silencer is limited to 85 degrees centigrade. Normally in a well-designed system, the temperature of the silencer should be between 50-70 degrees centigrade. Such operation will result in longer exhaust life.

Connections to the silencer should be made using suitable exhaust hose, which is type approved by Lloyds and DNV. Do not use oil or grease to lubricate hoses when installing, wetting the inside of the hoses with water will help them slip more easily over the silencer spigots. A minimum of 2 hose clips must be used. Securely tighten all hose clamps, but be careful not to overtighten.

The silencer should be positioned within 300mm of the centre line of the vessel, or to the engine on which it is installed. This is particularly important on sailing vessels where a substantial angle of heel can be encountered. On systems where the exhaust manifold is near or below the water line. A siphon break should be used to prevent the water flow continuing after the engine shut down.

In all installations the silencer should be at the lowest point of the entire exhaust system. The top of the silencer should be at least below the exhaust manifold outlet for the best performance. If a distance less than is allowed, the margin of safety for preventing reverse flow of water toward the manifold will decrease.

- **Siphon Breaker Fitting Instructions**

1. The unit must be positioned upright, well above waterline. The height above waterline will vary from vessel to vessel but will be between 150mm and 2 metres. Please seek guidance on this if you are unsure, or if you are not familiar with the correct way to incorporate a siphon breaker into your particular exhaust system.

2. The inverted “U” bend at the top must be connected to a hose draining into the bilge, or over the side of the vessel. In no circumstances must this drain into a sealed container, such as a bottle due to the risk of back siphoning. After fitting, run the engine and check the unions for leaks. Check again after 5 running hours.
3. The siphon break is equally suitable for use with a marine toilet water inlet.
4. The ½” unit may also be used with 5/8” systems. The 3/4” and 1” units may only be used with the correct hose.

- **Siphon Breaker Maintenance**

1. On commercial vessels achieving in excess of 150 engine hours per year, the unit should have the small valve removed from the top and this should be thoroughly washed in warm soapy water to remove salt encrustation.
2. On a pleasure vessel this should be done twice a year.
3. On reassembly the engine should be run and the unit checked for leaks. The hose junctions should also be checked for leaks as part of the daily inspection procedure for sea cocks, water pipes, oil levels, etc.

## 19. Hydraulic Drive Transmissions

If an engine is to have a hydraulic drive transmission attached to it instead of a conventional marine gearbox, a number of points must be observed.

- Bobtail engines (i.e. Engines supplied without a marine gearbox), normally do not have a gearbox oil cooler fitted however if a cooler is supplied, this will only be suitable to cool a conventional marine gearbox.
- Hydraulic drive transmissions generate far more heat than a conventional marine gearbox. Therefore the size of the oil cooler installed must be calculated by the hydraulic drive transmission supplier. This is to ensure it has sufficient cooling capacity and is sized appropriately taking into account:
  - Maximum engine power.
  - High ambient summer air temperature.
  - Summer River/Canal/Sea temperature.
  - No additional restriction to engine coolant flow is present.



**Hydraulic oil coolers should be installed in the seawater cooling system after the engine and before the water cooled exhaust injection elbow. They must not be installed before the engine. Coolers that are installed before the engine will invalidate the engine warranty.**

## 20. Hydraulic Pump Drive Option

For SAE pump (9T)

If a hydraulic pump is required to drive items such as bow thrusters or hydraulic winches, then the following parts are required to enable drive to be taken from the engine power take off:

Part Number 129484-26200 incorporates:

- Packing (on gear case side): 171353-26081
- Cover: 121023-26070
- Cover packing: 121023-26061

Ratio: 0.90:1

## 21. Calorifiers

- These are not fitted as standard but are available as an option.
- If calorifiers are fitted the following instructions must be complied with:

The temperature of coolant flowing to the calorifier from the engine can be between 85 and 90°C. A blender valve must be incorporated in the calorifier / hot water system outlet to lower the hot water temperature for domestic use.

## 22. Control Cables

- Connect engine speed control cable. With the engine off, ensure that the engine speed control lever achieves full travel from idle to full speed. Adjust if necessary.
- Check the gearbox shift lever selects positively and that the drive direction corresponds with the gearshift control lever. Ensure that the gearbox control lever and the gearshift lever are both in neutral before connection. Adjust if necessary.

## 23. Front Power Take Stub Shaft Option

If a front power take stub shaft is required, the part number RDG912A9 can be ordered as an option. If a different size of stub shaft is required contact Barrus as other sizes are available.

The stub shaft is 95mm in length with a 32mm diameter. The key way slot is 10mm wide with a 5mm depth.



#### **24. PRM 280DP Gearbox with Power Take Off (Option)**

The PRM 280 with power take off is designed for driving hydraulic pumps made to SAEJ77 Series B specification. The maximum power which can be transmitted is 22kW (29.5hp) per 1000rpm.



The power take off operates in the opposite direction to the gearbox input shaft. The output of the live power take off is the same speed as the engine.

#### **25. Engine Start Battery**

For the required specification of the Engine Start Battery please refer to **Section 10 – Technical Data**.

#### **26. Additional Wiring Connection**

An additional grey wire tag is fitted which is found coming out of the loom near the relay. This is live only when the ignition is energised and can be used to trigger a circuit that may be required to operate only when the engine is running such as a bow thruster, calorifier / heating system circulation pump, engine cover microswitch operated magnet, etc. This wire is labelled on the wiring loom diagram as “Not Connected”.

Note, this wire should only be used to operate an electrical relay in conjunction with a separate fused supply.

## 27. Installation Check List

Please tick box ✓	
Engine alignment correct, clearance all round, check propeller turns by hand (Ensure ignition is off battery and battery master switch is off)	
Anti-Vibration mounts correct height, spacers if necessary. Make sure all nuts are tight	
Exhaust system as specified	
Check the correct size of start battery has been fitted	
Battery leads are of correct size, tightened and start battery is charged	
Check tension of alternator belts, wiring connected and belt alignment checked if removed	
Check fuel system is connected correctly and primed	
Fuel line water trap installed and water drained off	
Check header tank connections are correct way round, constant pipework rise to header tank	
Check level of coolant in header tank or manifold and correct ratio of antifreeze to water	
All air has been bled from skin tank, calorifier and pipework (If applicable)	
Engine and gearbox oil levels are as specified	
Throttle and gear cables correctly adjusted and operating smoothly	
All pipework and cabling supported and not chaffing, slack to allow movement of engine	
Engine control panel installed in a position where it is not out in the open	
Confirm engine control panel, gauges and warning lights are all operational	
Suitable specification of hose between seacock and seawater pump with no restrictions is fitted	
Run the engine for 20 minutes with the boat tied up and in gear (at ½ speed). Check for leaks and that all systems operate correctly	
Check & Set the Engine Idle Speed to 850-875 rpm	
Check for leaks	
Explain/Demonstrate daily/weekly/periodic maintenance checks	
Explain/Demonstrate off season storage and maintenance	
'E' Kit 230v AC systems installed by qualified electrician and to BMEA code of practice for Electrical and Electronic installation in Boats: BS EN ISO 13297 (ac)	
Installer's signature	
Installer name/company	

## SECTION 6 – Operation

**NOTICE:**

REFER TO THE YANMAR MANUAL PRIOR TO STARTING THE ENGINE.

### 1. Starting the engine for the first time

- Remove ignition key.
- Ensure all oil and coolant levels are checked.
- Ensure both the engine and domestic batteries are connected. Both battery master switches must be turned on. Failure to do so may damage the domestic alternator.
- Ensure that the raw water seacock is turned on.

### 2. Starting Procedure

- Ensure there is no one in the engine compartment.
- Ensure the engine compartment door is closed.
- Ensure the gearshift control level is set to neutral and that all persons are clear of any moving parts.
- Insert ignition key.
- Turn key to on position. The glow plug light will illuminate.
- Observe warning lights (and gauges on deluxe panel). Note: The engine water temperature overheat warning light will only come on for a brief period of time when the ignition is first turned on as a bulb check. It will then only illuminate in the case of the engine coolant temperature exceeding the maximum safety level.
- Wait for the glow plug warning light to go out.
- Turn key to start and hold to crank.
- Crank the engine for no more than 15 seconds.
- Upon engine start, immediately release the key.
- Key will return to on position.
- The warning buzzer will stop and on the deluxe panel, the oil pressure gauge will show an oil pressure of 3.5 - 4.5 bar (51 – 61 psi).
- Should any warning light not go out, or if there is no reading on the oil pressure gauge, the buzzer will continue sounding. In this case, stop the engine immediately and check the relevant system (Note: If the charge light does not go out, briefly increase the engine speed).
- Once started check that sea water is coming out of the water cooled exhaust outlet in the hull of the boat.

- Stop engine if any abnormal noises are detected.
- Visually check the engine for oil, fuel and coolant leaks, after initial start-up and at regular intervals. Note: Engine must be stopped, with ignition key removed, to carry out this check).

### 3. Stopping Procedure

- Move speed control lever to idle position.
- Turn key to off position.

### 4. Full Load Running

- Running diesel engines near their rated output (maximum load) regularly will disperse accumulated carbon and condensation, enhancing engine life and reducing emissions.
- Running the engine at, or near maximum speed whilst in gear may not be possible on inland waterways with speed limits in place. If this is possible, ensure that the water is deep enough not to damage the propeller. It is recommended that the engine is run at or near full load for 15 minutes (maximum revs, in gear) every 50 hours.

### 5. Refuelling



**WARNING:**

DIESEL FUEL IS FLAMMABLE AND EXPLOSIVE UNDER CERTAIN CONDITIONS.



**WARNING:**

DIESEL FUEL IS HARMFUL TO SKIN. MAKE SURE THE RELEVANT PERSONAL PROTECTION EQUIPMENT IS WORN.

- All Shire boat engines run on diesel fuel.
- Please note that when the vessel is to be left for any period of time, the fuel tank should be left full to eliminate the build-up of condensation and formation of water in the fuel tank.
- Engine to be turned off while refuelling.
- The use of renewable and alternative fuels that comply with the EN15940 standard is permitted.
- This refers to GTL (Gas to Liquid), BTL (Biomass to Liquid) and HVO (Hydrotreated

Vegetable Oil) fuels.

- If an alternative fuel that does not comply with EN15940 is used, problems such as seizure of the fuel injection pump may occur due to deterioration of fuel lubricity. This will NOT be covered by warranty.
- Alternative fuels that comply with EN15940 have lower density and lower calorific values per unit capacity than those of ordinary diesel fuels, thus it is expected that the engine output will decrease.

## **6. Diesel Fuel Additive**

The use of diesel fuel additive is recommended on Shire engines. The quality of the fuel available when cruising is often unknown. Also, the fuel may have been in storage for long periods of time. The use of additives will ensure that your engine fuel injection system is in top condition which should result in many years of smooth reliable operation, without the cost and inconvenience of expensive breakdowns due to poor quality fuel. It has also been found that improvements in fuel consumption and start ability are an added benefit of using this product. Diesel fuel additive is available from your Shire dealer in a handy 500ml container, Part Number RDG80210219.

## **7. Exhaust Back Pressure (Work Boat with dry exhaust)**

- The engine exhaust outlet must be at least 300mm (12") above the outside seawater level of the hull. If not an exhaust high rise kit and/or lock box/swan neck must be used to prevent sea water flowing back up the exhaust and causing engine damage.

The back pressure falls within the manufacturers recommended range when using the optional exhaust system (see **19. Exhaust System** from **Section 5 – Installation**) with the engine.

## **8. Single Shift Control Lever Side Mount Operation - Optional (RDG9210055)**

To engage forward or reverse gear:

- Lift the safety latch under the handle before shifting.

To rev the engine in neutral:

- Pull the lever out sideways from the main body.
- Lift the safety latch under the handle then shift.

## SECTION 7 – Service Procedure



**NOTICE:**

REFER TO THE YANMAR MANUAL PRIOR TO CARRYING OUT ANY SERVICE OR MAINTENANCE WORK.



**WARNING:**

PRIOR TO CARRYING OUT ANY SERVICE OR MAINTENANCE WORK MAKE SURE THE RELEVANT PERSONAL PROTECTION EQUIPMENT IS WORN.

### 1. Engine Oil and Filter Change



**WARNING:**

**BURN HAZARD!** WAIT UNTIL THE ENGINE COOLS SLIGHTLY BEFORE YOU DRAIN THE ENGINE OIL. HOT ENGINE OIL MAY SPLASH AND BURN YOU.

- Change the engine oil while the engine is still warm.
- Remove the blanking plug in the sump pump spout (6mm Allen key). Note: Shire 50 has two oil drain pumps, it is the pump mounted up higher on the engine.
- Place a plastic tube over the spout and into a container. Operate the pump handle to empty the sump. Note: Remember to refit the blanking plug afterwards.
- Place a drip tray under the engine to catch the small amount of oil that will escape from the oil filter. Using the strap type oil filter removal tool supplied with the engine, slacken the filter from the engine block in an anti-clockwise direction. Remove the tool and spin off the filter.
- Lightly oil the new filter O ring seal and install the filter onto the engine. Spin it on in a clockwise direction and finally tighten by hand only as firmly as you can.
- Refill the sump using the yellow oil filler cap in the rocker cover on top of the engine.
- Oil level should be to the top mark on the dipstick.
- Run the engine for 5 minutes before checking the oil level with the dipstick and top up if required.
- Do not exceed the maximum oil level marker as this may cause damage to the internal

components of the engine.

## 2. Air Filter Check and Change

- Release the two spring clips. Pull off the end cover to reveal the filter element. The element simply pulls out.
- To fit the new element, slide the open end of the filter element into the main body. Gently push the element until fully seated. Refit the end cover.
- The air filter is constructed from pleated paper. Inspect it closely for dust or dirt. The air filter cannot be cleaned and must be replaced when dirty. The engine requires clean unrestricted air to run efficiently. Failure to maintain the air filter could result in smoke, increased fuel consumption and ultimately engine damage.

## 3. Gearbox Oil Change



**WARNING:**

**BURN HAZARD!** WAIT UNTIL THE GEARBOX COOLS SLIGHTLY BEFORE YOU DRAIN THE GEARBOX OIL. HOT OIL MAY SPLASH AND BURN YOU.



**Some engines will have a gearbox sump pump fitted. To change the oil in this circumstance, follow the same procedures as were outlined for changing the engine oil. For engines without a gearbox sump pump follow the procedure below.**

- Change the gearbox oil while it is still warm (Please refer to the gearbox manual for more information).
- Place a tray beneath the gearbox that will hold at least 2 litres.
- Remove the drain plug and allow 5 minutes for the oil to drain thoroughly.
- Replace the drain plug. Ensure that the sealing washer (if used) is still in place and in good condition before tightening. Fit a new washer if required.
- Refill the gearbox with oil to the upper mark on the dipstick. Screw the dipstick in fully, to establish level. Refer to the PRM owner manual for more details. **Section 6** in this manual contains details of oil specifications.
- Do not overfill the gearbox as this can damage the internal components.




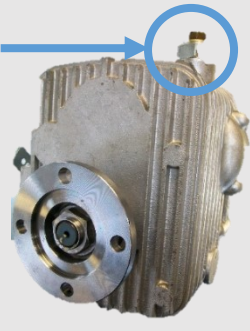
Gearbox Model	Location of Dipstick / Filler Plug / Drain Plug	
PRM 90 / 120	<p>Level dipstick &amp; Filler Plug</p> 	<p>Magnetic Drain Plug (viewed from underneath)</p> 
PRM 150	 <p>Level dipstick &amp; Filler Plug</p>	
PRM 280	 <p>Level dipstick &amp; Filler Plug</p>	

Figure 18: Location of Dipstick / Filler Plug / Drain Plug on Gearbox

#### 4. Disposal of Oil and Related Items

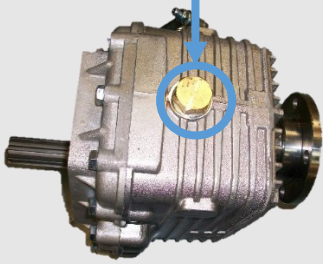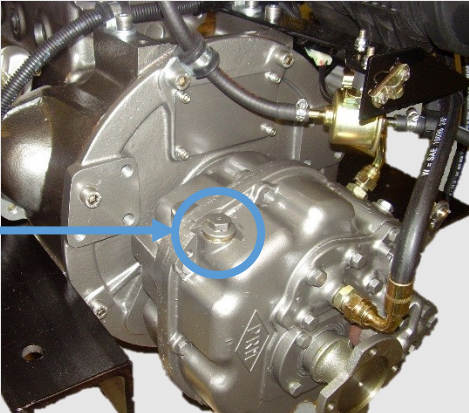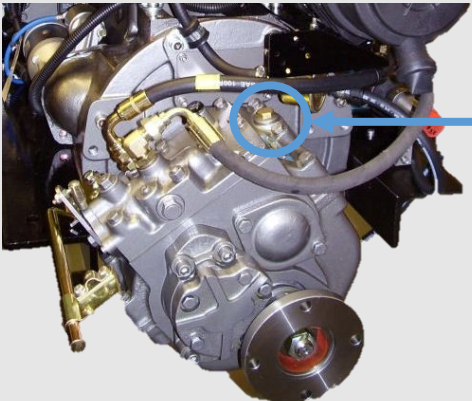

**NOTICE:**

ALWAYS BE ENVIRONMENTALLY RESPONSIBLE.

- Please dispose of used oil and oil filters safely with due regard for the environment and take to your local waste oil disposal point.



- Do not allow oil or contaminated parts to enter the inland water way system.

## 5. Primary Fuel Filter Drain



**WARNING:**

DIESEL FUEL IS FLAMMABLE AND EXPLOSIVE UNDER CERTAIN CONDITIONS.



**WARNING:**

DIESEL FUEL IS HARMFUL TO SKIN. MAKE SURE THE RELEVANT PERSONAL PROTECTION EQUIPMENT IS WORN.

- Place a small drain bowl under the primary fuel filter / water trap.
- Loosen the drain screw located in the bottom of the fuel filter / water trap (**Figure 19**)
- Drain off any water.
- Once the water has been drained, retighten the drain screw.
- It is unlikely the complete fuel system will require bleeding.
- Run for 5 minutes.
- Check that the drain union is tight and that there are no leaks.
- Do not over tighten the drain screw.



**The boat builder should have fitted an additional water trap in the fuel system. Ensure that this is drained regularly.**



**Figure 19: Primary Fuel Filter Drain Screw**

## 6. Primary and Secondary Fuel Filter Change



**DANGER:**

DIESEL FUEL IS FLAMMABLE AND EXPLOSIVE UNDER CERTAIN CONDITIONS.



**WARNING:**

DIESEL FUEL IS HARMFUL TO SKIN. MAKE SURE THE RELEVANT PERSONAL PROTECTION EQUIPMENT IS WORN.

- Ensure the fuel tank is at least  $\frac{3}{4}$  full prior to undertaking this procedure.
- Turn off the main boat fuel supply tap. This is located on or near the fuel tank.
- Place a small drip tray under the filter body.
- Remove the fuel filters using the filter strap wrench supplied. Unscrew them until loose then remove by hand.
- Primary fuel filter only: Retain the metal fuel filter drain screw from the old filter and reuse in the new filter. The part number for the drain screw is RDG9189022.
- Smear a small amount of clean fuel on all of the O ring seals that are supplied with the new filter element.
- Screw the new element back into the filter head. Tighten by hand only.
- Turn the main boat fuel supply tap back on.
- Ensure the system is correctly bled before attempting to start up.



The same procedure is used for both the primary and secondary fuel filter changes.

## 7. Fuel System Bleeding



**DANGER:**

DIESEL FUEL IS FLAMMABLE AND EXPLOSIVE UNDER CERTAIN CONDITIONS.



**WARNING:**

DIESEL FUEL IS HARMFUL TO SKIN. MAKE SURE THE RELEVANT PERSONAL PROTECTION EQUIPMENT IS WORN.

- Ensure the fuel tank is at least  $\frac{3}{4}$  full prior to undertaking this procedure.
- See the fuel paragraph in Section 3 of the Yanmar engine operation manual.

## 8. Cooling System



**DANGER:**

**SCALD HAZARD!** NEVER REMOVE THE COOLANT PRESSURE CAP IF THE ENGINE IS HOT. STEAM AND HOT COOLANT WILL SPURT OUT AND SERIOUSLY BURN YOU. TIGHTEN THE CAP SECURELY AFTER BEING REMOVED. STEAM CAN SPURT OUT DURING ENGINE OPERATION IF THE CAP IS LOOSE.



**WARNING:**

**BURN HAZARD!** WAIT UNTIL THE ENGINE COOLS BEFORE YOU DRAIN THE ENGINE COOLANT. HOT ENGINE COOLANT MAY SPLASH AND BURN YOU.

- To check the coolant level, ensure that the engine has been shut down for at least half an hour.
- The coolant level can be checked visually and should be between the two level marks formed on the front of the white plastic expansion tank.
- If required, top up the level with coolant (50% clean tap water and 50% ethylene glycol based anti-freeze) through the expansion tank filler cap.
- Do not use water only to top up as this weakens the coolant mix, reducing the level of frost protection and anti-corrosion protection of the coolant.

## 9. Belt Adjustment



**WARNING:**

**SEVERE HAZARD!** KEEP HANDS AND OTHER BODY PARTS AWAY FROM MOVING/ROTATING PARTS. WEAR TIGHT FITTING CLOTHING AND KEEP YOUR HAIR SHORT OR TIE BACK. REMOVE ALL JEWELLERY BEFORE COMMENCING WORK. CHECK BEFORE STARTING THE ENGINE THAT ANY TOOLS OR RAGS USED DURING MAINTENANCE HAVE BEEN REMOVED FROM THE AREA.

- Ensure the ignition key is removed before carrying out any adjustments.
- Turn the battery master switch to the off position before carrying out any adjustments.
- Depress the longest run of the drive belt to be checked. If the travel exceeds 15-20mm using hard finger pressure, the belt needs re-tensioning.
- Loosen the upper adjuster on the alternator. Loosen the lower mounting pivot nut and bolt. Pull out either using hand pressure or using the tensioning screw, depending on which alternator belt is to be tensioned.
- Pull the alternator away from the engine to tighten the belt.
- Hold the alternator in position and retighten all the bolts.



**If the belts are over tightened, alternator bearing failure will occur.**

## 10. Belt Maintenance



**WARNING:**

**SEVERE HAZARD!** KEEP HANDS AND OTHER BODY PARTS AWAY FROM MOVING/ROTATING PARTS. WEAR TIGHT FITTING CLOTHING AND KEEP YOUR HAIR SHORT OR TIE BACK. REMOVE ALL JEWELLERY BEFORE COMMENCING WORK. CHECK BEFORE STARTING THE ENGINE THAT ANY TOOLS OR RAGS USED DURING MAINTENANCE HAVE BEEN REMOVED FROM THE AREA.

- Ensure the ignition key is removed before carrying out any maintenance.
- Turn the battery master switch to the off position before carrying out any maintenance.

- Do not allow oil to contact the belt. Oil attacks the construction of the belt. This reduces the drive efficiency and will cause it to fail prematurely.
- Replace the belt if it cracks or splits and as the adjustment nears the limit of travel.



Some boat builders may remove one or more of the alternators during the installation of the engine. It is essential that when the alternators are refitted that the alignment is perfect or premature belt wear will occur.

## 11. Belt Replacement



### **WARNING:**

**SEVERE HAZARD!** KEEP HANDS AND OTHER BODY PARTS AWAY FROM MOVING/ROTATING PARTS. WEAR TIGHT FITTING CLOTHING AND KEEP YOUR HAIR SHORT OR TIE BACK. REMOVE ALL JEWELLERY BEFORE COMMENCING WORK. CHECK BEFORE STARTING THE ENGINE THAT ANY TOOLS OR RAGS USED DURING MAINTENANCE HAVE BEEN REMOVED FROM THE AREA.

- Ensure the ignition key is removed before replacing any belts.
- Turn the battery master switch to the off position before replacing any belts.
- Ensure that you have the correct replacement belts before starting this procedure. Some engines may have been fitted with non-standard optional alternators which may not use the belt sizes listed. Make a note of these belt sizes upon delivery.
- Loosen the top adjuster bolts and the lower mounting pivot nut and bolt.
- Push the alternator towards the engine to loosen the belt.
- Remove the belt.
- Hold the belt in position over the top alternator pulley. Rotate the engine if required by hand, to guide the new belt into the “vee”.
- Replace the seawater pump (if required).
- Re-tension the belt as above.

## 12. Control Panel Maintenance

**WARNING:**

REMOVE THE IGNITION KEY BEFORE WORKING IN ENGINE COMPARTMENT.  
TURN BATTERY ISOLATION SWITCHES OFF.

- **To replace an illumination bulb:** Release the panel from its mounting. The bulbs are accessible from the rear of the panel. Remove the wires, unscrew the nut and pull out the bulb housing from the panel. Remove the bulb and replace. Refit bulb housing, screw the nut back up and refit the wires.
- **To replace any gauge:** Release the panel from its mounting. The gauges are accessible from the rear of the panel. Unplug the wire connectors, unscrew and pull the gauge out of the panel. Replace the gauge and refit. Reattach the wiring connectors.



Periodically squirt a lubricant into the key switch slot when the key has been removed (see Section 8 – Service Schedule). A lubricant such as WD40 – with silicon, would be suitable. Other lubricants are available. Then with the battery master switch turned off, operate the key switch a couple of times. This will ensure the lubricant works into the mechanism.

## 13. Sacrificial Anode Change

- The anode is located in the “T” fitting on top of the engine at the front facing forward (**Figure 20**).

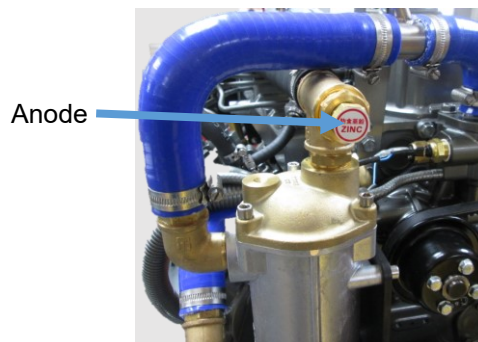


Figure 20: Work Boat Anode Location

#### **14. Raw Water Pump Impellor Change**

- The pump is located on the front of the engine. It is either fitted to the Power Take Off pulley camshaft drive or bolted to the front of the engine and driven by the crankshaft. Note: The crank driven pump is a standard item on engines fitted with the optional 150A or 240A Alternator. If the engine doesn't use these alternators the crank driven pump is an optional extra.
- Remove the pump cover plate.
- Remove the pump impeller (special tools are available from chandlerys to assist with this task).
- Note: Do not lever against the front of the pulley housing as it is easily damaged.
- Inspect the pump housing and front housing for damage or wear.
- Replace the impellor.
- Replace the cover plate gasket if damaged.
- Replace any other worn components as necessary.

#### **15. Engine Heat Exchanger Tube Stack Flushing**

- When the engine is cold, drain the water from the engine block. Remove the hose from the tap and drain.
- Drain water from the heat exchanger. The drain plug is in the bottom of the heat exchanger end cap.
- Disconnect the pipes and hoses from the engine heat exchanger.
- Remove the heat exchanger from the engine.
- Mark the position and remove the end caps from the heat exchanger.
- Carefully remove the tube stack from the centre of the heat exchanger.
- Fully flush between the tubes to remove any dirt or scum build up.
- Inspect the tube stack and replace if damaged.
- Reassemble and refit, checking the end cap "O" rings are in good condition.
- Ensure the end caps are fitted in the correct orientation. If they are not in the correct orientation, overheating will occur which will not be covered under the warranty.
- Refill the engine with coolant as described earlier.

#### **16. Winterization of Seawater Cooling System**

- To prevent frost damage to the seawater cooling circuit components due to water freezing, ensure all seawater or raw water is drained from the system.
- Alternatively, run neat antifreeze through the seawater pump inlet to protect the system.
- Ensure that the antifreeze is drained before starting the engine during the next season. This is to ensure that it does not get into the marine environment. Dispose of the antifreeze correctly.

## SECTION 8 – Service Schedule



**NOTICE:**

REFER TO THE YANMAR MANUAL PRIOR TO CARRYING OUT ANY SERVICE OR MAINTENANCE WORK.



**WARNING:**

PRIOR TO CARRYING OUT ANY SERVICE OR MAINTENANCE WORK MAKE SURE THE RELEVANT PERSONAL PROTECTION EQUIPMENT IS WORN.

### 1. Specifications and Capacities

Specification of Coolants and Lubricants to use:

Component	Lubricant
Engine	SAE 10W 40 API Class CD Oil
Coolant	50% Clean Water + 50% Ethylene Glycol Antifreeze
PRM 90 and 120 Gearbox	ATF (Automatic Transmission Fluid) Oil
PRM 150 and 280 Gearbox	Engine Oil

Engine Oil Capacity (with Filter):

Engine	Capacity (Litres)	Capacity (Pints)
40 & 50	7.4	13

Gearbox Oil Capacity (Excluding Cooler):

Gearbox	Capacity (Litres)	Capacity (Pints)
PRM 90	0.57	1.0
PRM 120	0.8	1.4
PRM 150	1.4	2.5
PRM 280	1.5	2.7



## 2. Service Intervals

	Check	Change	Notes
<b>Engine Oil &amp; Filter</b>	Daily (Level)	Every 350 Hours OR 12 Months*	First change after 50 hours
<b>Gearbox Oil</b>	Weekly (Level)	Every 350 Hours OR 12 Months*	First change after 25 hours
<b>Coolant Level</b>	Daily (Level)	Every 24 Months	-
<b>Primary Fuel Filter **</b>	50 Hours	At first 50 hour service and then every 350 hours OR 12 Months*	Drain water every 50 hours OR Monthly***
<b>Engine Fuel Filter **</b>	-	Every 700 Hours OR 12 Months*	If large quantities of dirt or water are found in the Primary Fuel Filter then change at 350 hours
<b>Air Filter Element</b>	175 Hours	Every 700 hours OR 24 Months*	Sooner if required
<b>Drive Belts</b>	Daily	As required	Adjust as necessary
<b>All Hoses</b>	50 Hours	As required	Check hoses for damage or leaks. Replace as necessary
<b>Key Switch</b>	Lubricate	Every 150 hours OR 12 Months*	As per instructions in Section 7 - Service Procedure
<b>Sacrificial Anodes</b>	250 Hours	Every 500 hours OR 12 Months*	Check and change more frequently if local conditions require it
<b>Raw Water Pump Impeller</b>	250 Hours	Every 500 hours OR 12 Months*	Change more frequently if operating in shallow or sandy waters
<b>Main Heat Exchanger</b>	500 Hours	-	Check and clean more frequently if local conditions require it


\* Whichever occurs first.

\*\* Only original filters which meet the Recreational Craft Directive/ Recreational Craft Regulation should be fitted to your engine.

\*\*\* If large quantities of water are found in the fuel when the filter is drained, increase the frequency of draining.

**SECTION 9 – Wiring Diagrams**

**1. Engine Wiring Diagram Shire 40, & 50**

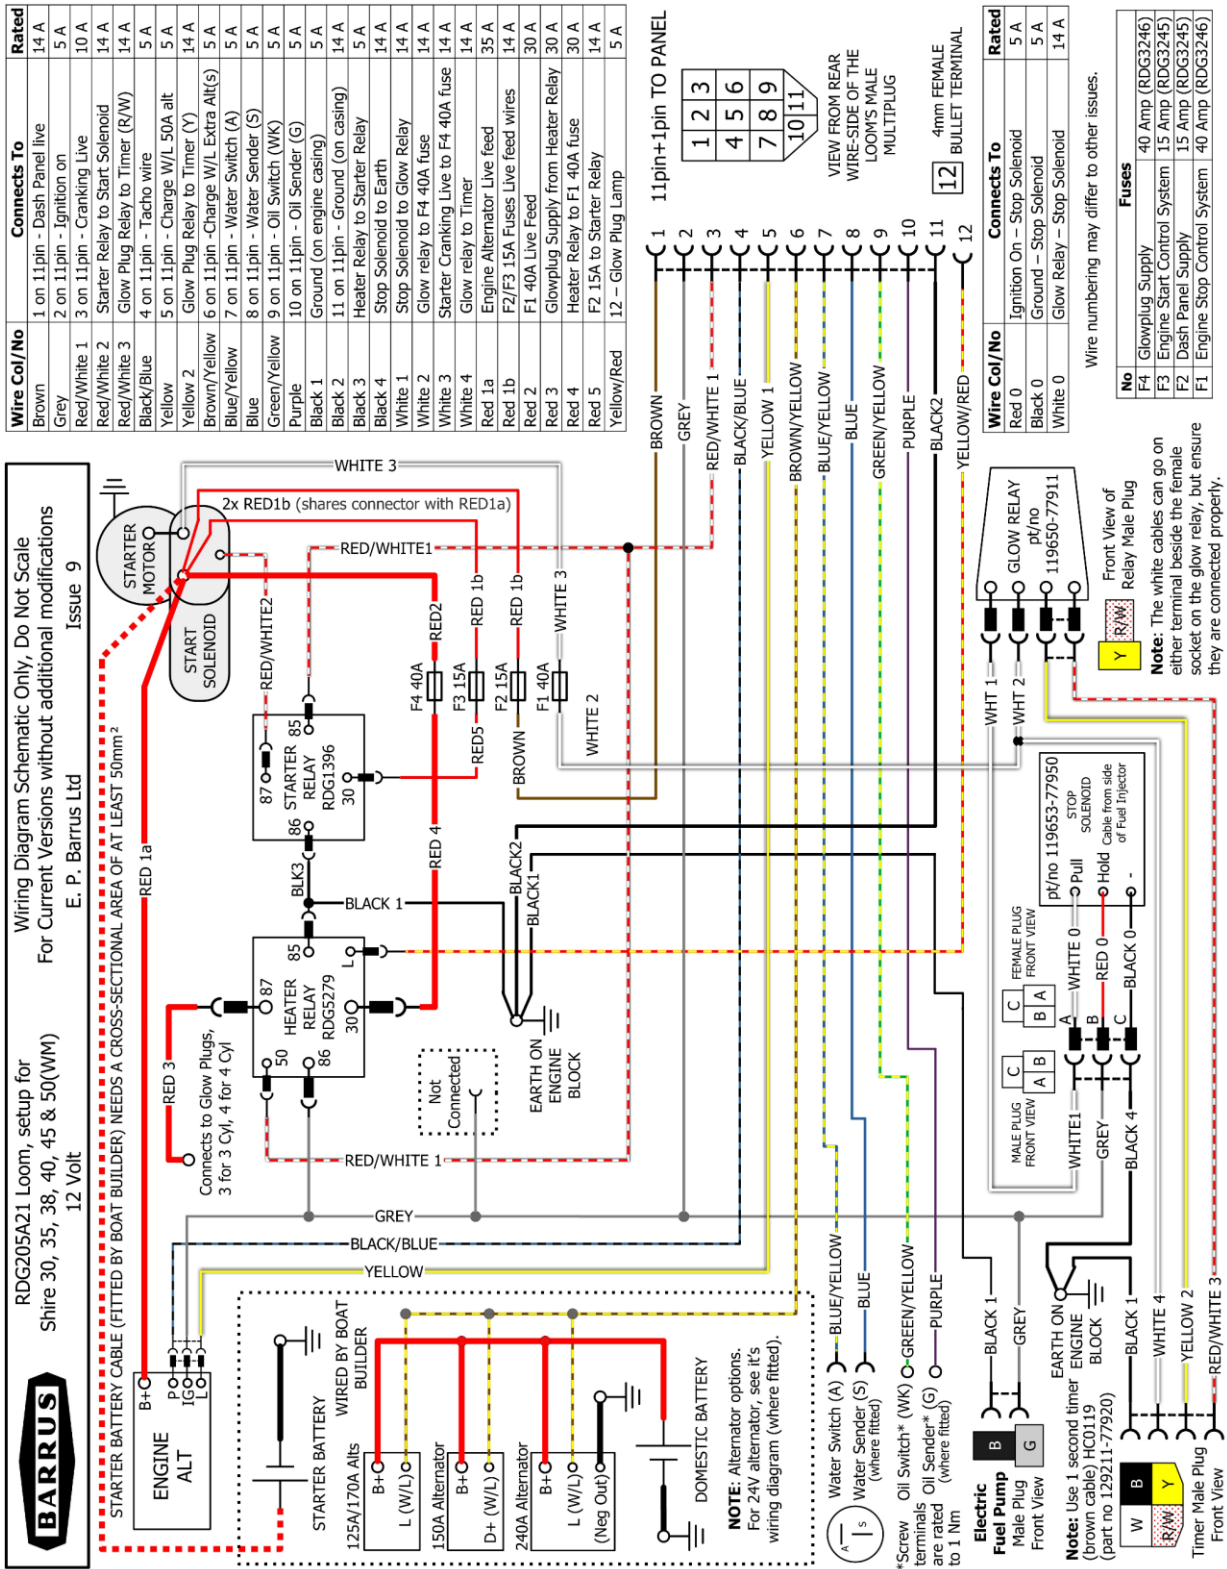

**Figure 21: Shire 40 & 50 Wiring Diagram**

2. Standard Control Panel Wiring Diagram

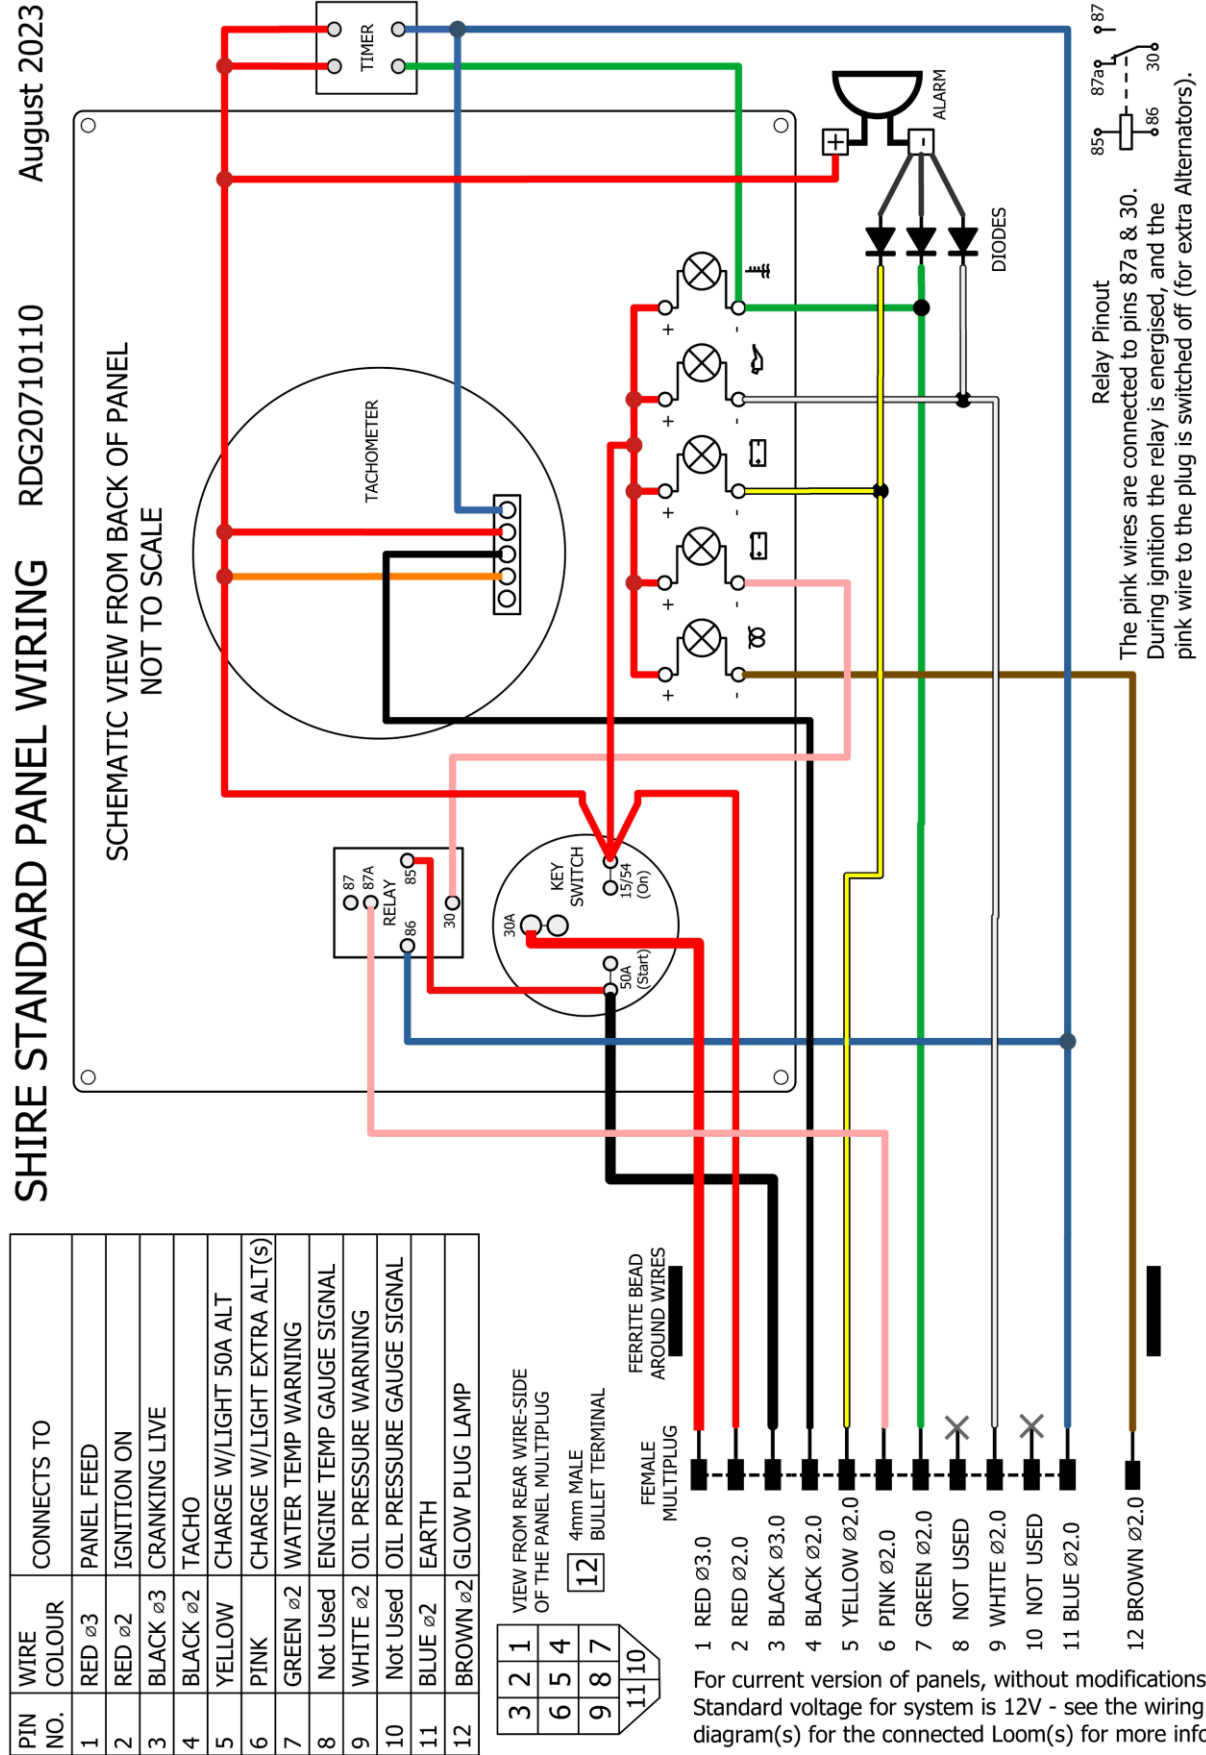


Figure 22: Standard Control Panel Wiring Diagram

3. Deluxe Control Panel Wiring Diagram

August 2022

RDG20710111

SHIRE DELUXE PANEL WIRING

PIN NO.	WIRE COLOUR	CONNECTS TO
1	RED ø3	PANEL FEED
2	RED ø2	IGNITION ON
3	BLACK ø3	CRANKING LIVE
4	BLACK ø2	TACHO
5	YELLOW	CHARGE W/LIGHT 50A ALT
6	PINK	CHARGE W/LIGHT EXTRA ALT(s)
7	GREEN ø2	WATER TEMP WARNING
8	BLACK ø2	ENGINE TEMP GAUGE SIGNAL
9	WHITE ø2	OIL PRESSURE WARNING
10	BLACK ø2	OIL PRESSURE GAUGE SIGNAL
11	BLUE ø2	EARTH
12	BROWN ø2	GLOW PLUG LAMP

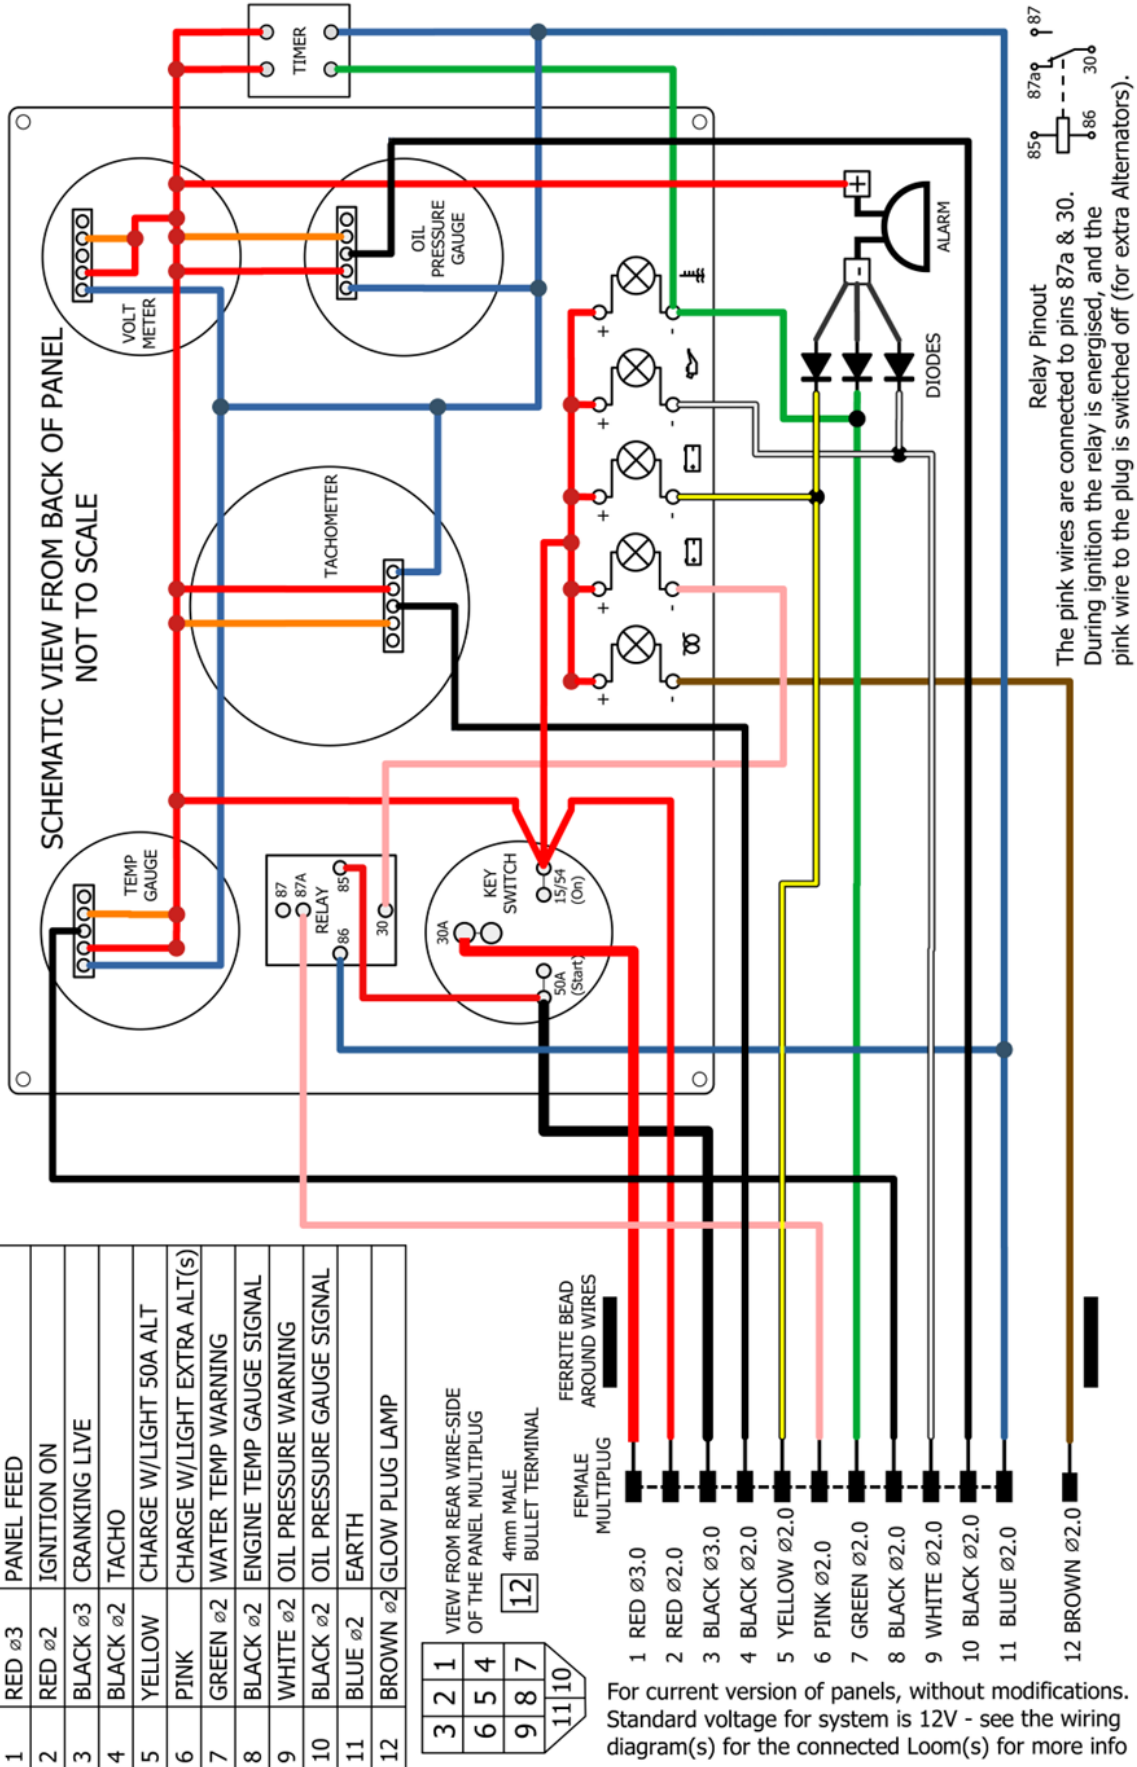


Figure 23: Deluxe Control Panel Wiring Diagram

#### 4. Prestolite 24 Volt 120 Amp Alternator Wiring Diagram

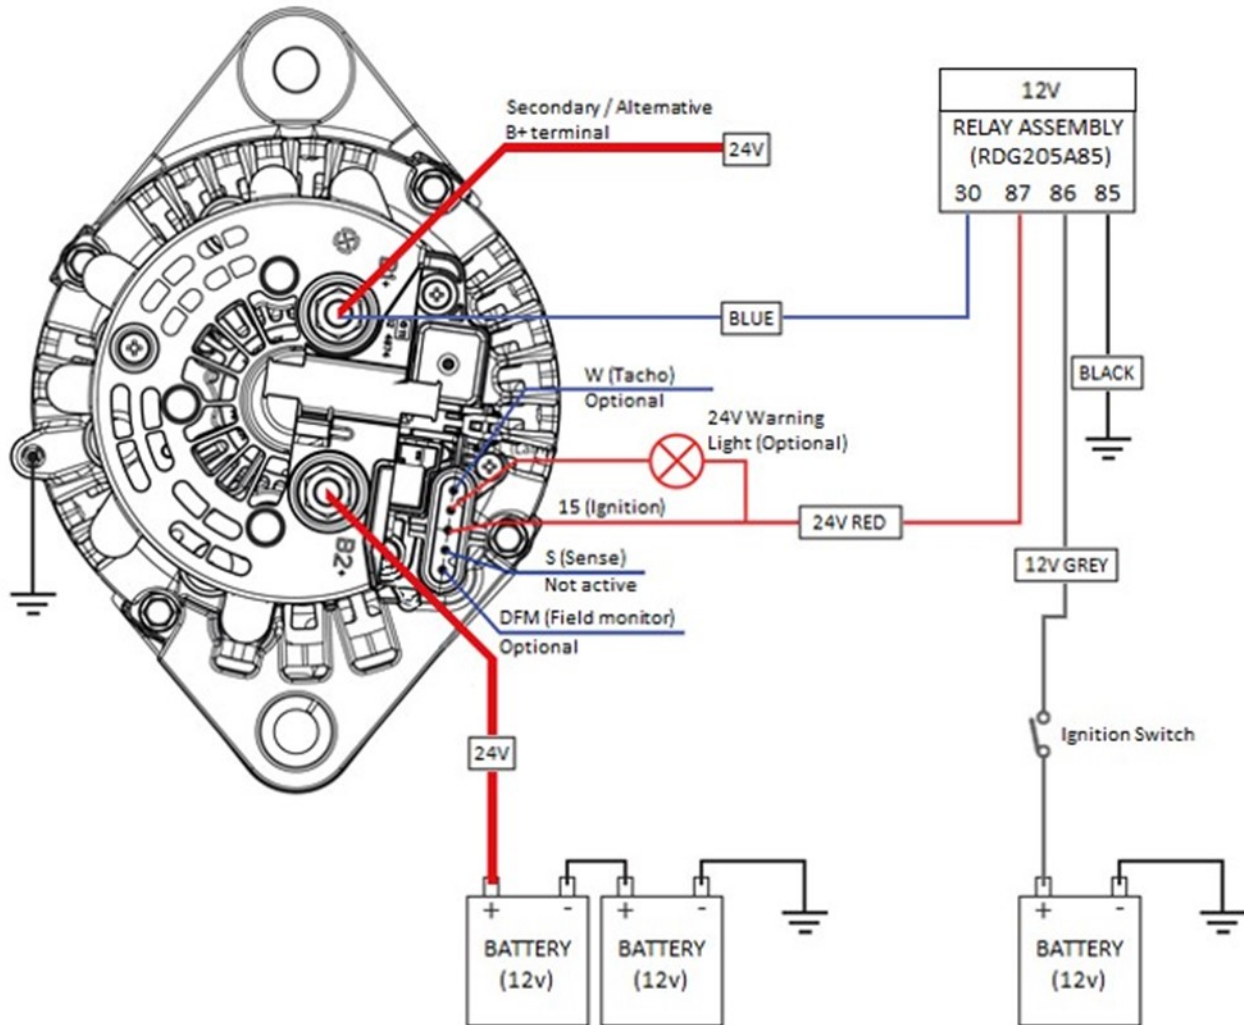


Figure 24: 24v 120A Alternator Wiring



**Before wiring the 24 Volt 120 Amp Alternator, please read the information below:**

- The S (Sense) terminal is not active on the AVI147J3110HD or AVI147J3113HD models so does not need connecting (on those two models).
- The W (Tacho) is an option (when a rev counter is fitted) and is not required for alternator functionality.
- The DFM (Field Monitor) usage is dependent on the engine and is not required for alternator functionality.
- The Terminal 15 (Ignition) provides excitation and **MUST** be connected.
- The L (Warning Lamp) is an option (when a warning lamp is fitted) and is not required for alternator functionality.
- The alternator is fitted with two B+ terminals. Either of the B+ terminals can be used.

- The alternator is earth return (grounded) Ensure there is a good earth connection to the engine.



**A 12v ignition operated relay may be required to switch on the 24v supply to Terminal 15 if the alternator is a stand-alone item fitted to a 12v engine.**

## SECTION 10 – Technical Data

### 1. Engine Data

<b>Engine Model</b>	<b>4TNV88 BDYED SH</b>	
<b>Type</b>	Vertical In-Line Diesel Engine	
<b>Combustion System</b>	Direct Injection	
<b>Aspiration</b>	Natural	
<b>Number of Cylinders</b>	4	
<b>Bore x Stroke</b>	88 x 90mm	
<b>Displacement</b>	2.190L	
<b>Rated Output/Speed</b>	<b>Shire 40</b> 30kW (40hp) at 2400rpm	<b>Shire 50</b> 37kW (50hp) at 3000rpm
<b>Low Idling</b>	850 - 875 rpm	
<b>High Idling</b>	3210 ±25 rpm	
<b>Direction of Rotation</b>	Counter clockwise Viewed from Flywheel End	
<b>Lubricating System</b>	Forced Lubrication with Trochoid Pump	
<b>Normal Oil Pressure at Rated Engine Speed</b>	0.39 – 0.54 MPa / 3.9 – 5.4 bar / 56 – 78 psi	
<b>Normal Oil Pressure at Low Idle Speed</b>	0.068 MPa / 0.68 bar / 10 psi	
<b>Electric Starting System</b>	Starter Motor: DC12V	
	Starter Capacity: 2.3kW	
	Minimum Recommended Start Battery Capacity: 12V 65Ah	
<b>Top Clearance (Piston to Head Clearance at tdc)</b>	0.73 ± 0.06mm	
<b>Valve Clearances (Exhaust and Inlet)</b>	0.15 – 0.25mm	

### 2. Return Diesel System

<b>Maximum Fuel Temp</b>	33°C
<b>Maximum Flow</b>	0.6 Litre / Min (3000 rpm)
<b>Flow at Idle</b>	0.5 Litre / Min

The flexible fuel lines used on the engine comply with ISO 7840.

### 3. Dry Weight of Engine Data

Dry Weight of Engine (Including Gearbox)*	
Model	Dry Weight (kg)
Shire 40	270kg
Shire 50	284kg

\* The dry weights stated are for the standard engine in each model range. If a different gearbox or additional alternators are ordered the weight will change accordingly.



## SECTION 11 – Dealer List

Area	Company	Telephone	Email
BERKSHIRE	Driveline Marine	0118 942 3877	tam@drivelinemarine.com
	Marcus Marine Engineering Ltd <i>(Servicing, Repairs &amp; Breakdowns only)</i>	07900890911	marcusmarine@icloud.com
BRISTOL	Advance Marine	01275 815910	phil@advancemarine.co.uk
CHESHIRE	Midland Chandlers	01928 751 800	preston.brook@midlandchandlers.co.uk
	Nantwich Canal Centre	01270 625122	info@nantwichcc.com
CORNWALL	Black Dog Marine	01503 265898	blackdogmarine@googlemail.com
	Cellar Marine	01326 280214	john@cellarmarine.com
	Smith's Boat Yard	01208 862815	info@smithsboatyard.co.uk
	Armada Engineering	01326 375566	sales@armadamh.co.uk
CUMBRIA	Windermere Aquatic Ltd	01539 442121	service@aquaticboatcentres.com
DERBYSHIRE	Midland Canal Centre	01283 701933	info@mccboats.co.uk
DEVON	Sleeman & Hawken Ltd	01626 778266	keith@sleeman-hawken.co.uk
	Tonto Marine	01803 844399	enquiries@tontomarine.co.uk
	Mobile Marine	01297 631821	mobilemarine@btconnect.com
	Darthaven Marina	01803 752242	admin@darthaven.co.uk
DORSET	Purbeck Marine	01202 686592	purbeckmarine@aol.com
	Rob Perry Marine	01297 631314	sales@robperrymarine.co.uk
EAST SUSSEX	Peter Leonard Marine	01273 515987	info@plmarine.com
ESSEX	French Marine Motors Ltd	01206 305233 01255 850303	info@frenchmarine.com
HAMPSHIRE	Marine Power Ltd	0238 0403918	info@marine-power.co.uk
HEREFORDSHIRE	Starline Marine	01684 593443	narrowboats@starline.demon.co.uk
HERTFORDSHIRE	Keypart Ltd	01923 276000	sales@keypart.com
	Lee Valley Marina	01920 870499 01920 293101	stansteadmarina@vibrantpartnerships.co.uk
	P & S Marine	01923 248372	pandsmarinellp@gmail.com
LEICESTERSHIRE	Foxtan Boat Services Ltd	01162 792285	tony@foxtan-boats.freemove.co.uk
LONDON	Lee Valley Marina	020 88061717	springfieldmarina@vibrantpartnerships.co.uk

MIDDLESEX	Lindon Lewis Marine	01932 247427	service@pushtheboatout.com
NORFOLK	French Marine Motors Ltd	01603 722079	info@frenchmarine.com
NORTHAMPTON	Grand Junction Boat Co.	01604 858043	grandjunco@talk21.com
	Midland Chandlers	01788 891401	braunston@midlandchandlers.co.uk
NOTTINGHAM	Farndon Marina	01636 705483	info@farndonmarina.co.uk
OXFORDSHIRE	Service Engine UK	01993 835157	info@serviceenginesuk.co.uk
SHROPSHIRE	Maestermyn (Marine) Ltd	01691 662424	enquiries@maestermyn.co.uk
STAFFORDSHIRE	JD Boat Services Ltd	01902 791811	jdboats@btinternet.com
	River Canal Rescue	01785 785680	enquiries@rivercanalrescue.co.uk
	Stone Boatbuilding Company	01785 785680	stonechandlery@aol.com
	Streethay Wharf	01543 414808	office@streethaywharf.co.uk
WARWICKSHIRE	Barry Hawkins Narrowboats	01827 711762	boats@hawkinsyard.freeserve.co.uk
	Onboard Energy	02476 393333	sales@onboardenergy.com
	Springwood Haven Leisure Ltd	0845 4566572	enquiries@springwoodhaven.co.uk
	Valley Boat Services Ltd	07990528123	enquiries@valleycruises.co.uk
WEST MIDLANDS	Stephen Goldsbrough Boats	01564 778210	andy@sgboats.com
WILTSHIRE	Devizes Marina	01380 725300	sales@devizesmarina.com
	Foxhangers Marine	01380 828795	info@foxhangers.co.uk
WORCESTERSHIRE	J L Pinder & Son	01527 876438	sales@jlpinderandsons.co.uk
	Starline Narrowboats	01684 874774	narrowboats@starline.demon.co.uk
	Starline Narrowboats	01531 632003	enquiries@starlinenarrowboats.co.uk
YORKSHIRE	Rodley Boat Centre	01132 576132	John.snowdenz@ntlworld.com
MONMOUTHSHIRE	Castle Narrowboats	01873 830001	castlenarrowboats@btinternet.com
SHETLAND	DH Marine (Shetland) Ltd	01595 690618	mail@dhmarine.co.uk
NORTHERN IRELAND	South Shore Marine	020 38341010	info@southshoremarine.co.uk
EIRE	Dun Laoghaire Marine Services	00353 12104776	info@dlms.ie
	O'Sullivans Marine	003536 67124524	brian@sulliansmarine.com
	Oysterhaven Boats	00353 214843626	sales@oysterhavenboats.com

## SECTION 12 – Shire Parts

Model	40	50
Primary Fuel Filter	RDG9188346	RDG9188346
Secondary Fuel Filter	119802-55801	119802-55801
Oil Filter	129150-35153	129150-35153
50A Alternator	129423-77200	129423-77200
50A Alternator Belt	RDG004A4	RDG004A4
70A Alternator (Option)	RDG5682	RDG5682
70A Alternator Belt (Option)	25132-003700	25132-003700
150A Alternator (Option)	RDG20110201	RDG20110201
150A Alternator Belt (Option)	RDG6076	RDG6076
240A Alternator (Option)	RDG2019682	RDG2019682
240A Alternator Belt (Option)	RDG0047498	RDG0047498
Air Filter Element	RDG5795	RDG5795
Zinc Anti Corrosive Anode	119574-44150	119574-44150
Zinc Sticker	124220-09340	124220-09340
Camshaft Mounted Seawater Pump (Standard)	RDG907A7	RDG907A7
Camshaft Mounted Seawater Pump Front Cover	RDG501A35	RDG501A35
Camshaft Mounted Seawater Pump Mechanical Seal	RDG007A7	RDG007A7
Camshaft Mounted Seawater Pump Retaining Circlip	RDG907A17	RDG907A17
Camshaft Mounted Seawater Pump End Plate O-Ring	RDG003A13	RDG003A13
Camshaft Mounted Seawater Pump End Plate	RDG501A35	RDG501A35
Raw Water Pump Impellor for front camshaft mounted pump (Standard)	RDG010A4	RDG010A4

Crank Mounted Seawater Pump (Option)	RDG9079564	RDG9079564
Raw Water Pump Impellor for front crank mounted pump (Option)	17.200.107 (or RDG0109627)	17.200.107 (or RDG0109627)

**Control Panel:**

Standard Control Panel	RDG20710110
Deluxe Control Panel	RDG20710111

**'E' Kit:**

3.5kW 'E' Kit Alternator Belt	RDG0047511
5kW 'E' Kit Alternator belt	RDG0047511

**Fuses & Relays**

The electrical system is fitted with three or four blade type fuses:

1	Engine Stop Control System Fuse	40amp	RDG3246
2	Control Panel Supply Fuse	15amp	RDG3245
3	Engine Start Control System Fuse	15amp	RDG3245
4	Glow Plug Fuse	40amp	RDG3246
5	Cold Start Relay	-	RDG5279
6	Starter Relay	-	RDG1396

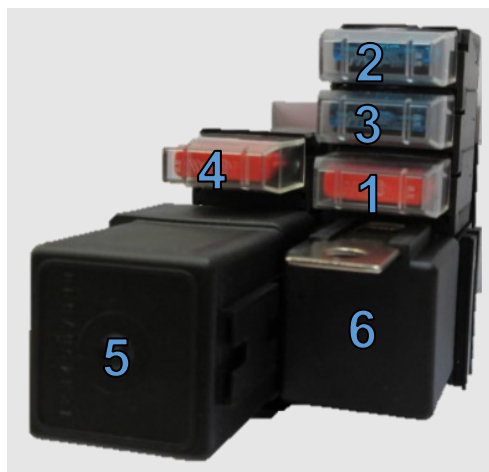


Figure 25: Fuses & Relays

**Engine Oil:**

Engine Oil is available from your Shire Dealer in convenient 5 litre containers (Part Number RDG6110).

**Diesel Fuel Additive:**

Diesel fuel additive is available from your Shire Dealer in a handy 500ml container (Part No RDG80210219).

**Shire Parts Book:**

On the E.P Barrus Website there is a Shire 40WB Parts Book and Shire 50WB Parts Book which has a more extensive list of parts available for your engine. To access the Shire Parts Books on the internet, type the following short link into your search engine:

<https://www.barrus.co.uk/divisions/marine/diesel/shire/downloads/shire-parts/?p=1>

## SECTION 13 – Afterlife Recycling

When it becomes necessary to dispose of your engine. This may be possible at recycling centre; however, it will likely require careful disassembly first before disposal. For further information please contact your local recycling centres for disposal advice to see what they will accept for disposal.

Engines are primarily made up of steel, cast iron and aluminium; and are are recyclable after removal of other parts. Larger components such as the engine block may only be handleable by a few centres, unlike say smaller plastic components.

Most of the other parts require special disposal as they include hazardous waste, and must be separated and declared upon disposal, including:


### Fluid Disposal

You must make sure that all unused oil, fuel and coolant is drained out carefully and disposed of correctly at a local recycling centre. Under NO circumstance must any oil, fuel or coolant be put down any drains or leaked into waterways or the environment.

Contact local recycling centres or garages, or check their websites to find out whether they take or recycle engine fluids. If they don't, they may be able to direct you to your nearest drop-off point depending on the volume. Recycle your coolant/oil/fuel in distinct well-sealed containers that are clearly labelled.

### Waste Electrical Electronic Equipment (WEEE) and Battery recycling

Parts contain WEEE waste or batteries should not be disposed of in your domestic waste. You should recycle WEEE or batteries in accordance with your local authority or recycling centre's directions. Batteries will need declaring separately for safety purposes.

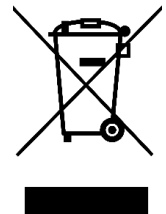

**Packaging materials** that are unwanted should be sorted, with cardboard, wood, and paper recycled where possible. Some Local Authorities and recycling centres may accept plastic bags, films and bubble wrap for recycling. Polystyrene is very rarely recycled and may have to be disposed of in general rubbish, inside bags.



Reduce, Reuse,  
Recycle

For further information about disposal please contact your Local Authority. You can also get more advice and guidance about recycling in your area at the following website <http://www.recycle-more.co.uk>.

## SECTION 14 - Declarations

### 1. Declaration of Conformity for Recreational Craft Propulsion Engine with the requirements of Directive 2013/53/EU.

Name of Engine Manufacturer: **E.P.Barrus LTD**

Name of Authorised Representative: **E.P.Barrus LTD**

Address: **E.P.Barrus LTD, Launton Road, Bicester, Oxon, OX26 4UR, England, United Kingdom**

Name of Notified Body for exhaust emission assessment: **HPi Verification Services (Ireland) Ltd**

Address: **HPi Verification Services (Ireland) Ltd, Clonross**

Town: **Dunshaughlin**

Post Code: **A85 XN59**

Country: **Ireland**

ID Number: **2810**

Conformity assessment module used for exhaust emissions:  B+C  B+D  B+E  B+F  G  H

Or engine type-approved according to: **Directive 2013/53/EU**

Other Community Directives applied:

#### Description of Engine(s) and Essential Requirements

**Engine Type:** Inboard Engine

**Fuel Type:** Diesel

**Combustion Cycle:** 4 Stroke

Identification of Engine(s) covered by this Declaration of Conformity

Engine Model	Engine Type	Engine Family code	Type Approval Certificate Number
Shire 40 / 50	4TNV 88 BDYED	G2YDXCL0164N3N	HPiVS-iR1105-T005-I-01-00

Essential Requirements	Standards	Other normative document/method.	Technical file	Specify in more detail * = Mandatory standard.
Annex 1.B- Exhaust Emissions				
B.1 Engine Identification	<input type="checkbox"/>	<input checked="" type="checkbox"/> RCD (II)	<input checked="" type="checkbox"/>	2013/53 EU
B.2 Exhaust emission requirements	<input checked="" type="checkbox"/> *	<input type="checkbox"/>	<input type="checkbox"/>	* EN ISO 8178-4:2017 Test Cycle 1
B.3 Durability	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	2013/53 EU
B.4 Owners Manual	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	ISO10240
Annex 1. C- Noise Emissions	See Declaration of Conformity of the craft in which the engine(s) has(have) been installed			

This declaration of conformity is issued under the sole responsibility of the manufacturer. I declare on behalf of the engine manufacturer that the engine(s) [is (are) in conformity with the type(s) for which above mentioned EC type-examination or type approval certificate(s) has (have) been issued and]<sup>1</sup> will meet the exhaust emission requirements of Directive 2013/53/EU when installed in a recreational craft, in accordance with the engine manufacturer's supplied instructions and that this (these) engine(s) must not be put into service until the recreational craft which it is (they are) to be installed has been declared in conformity with the relevant provisions of the above mentioned Directives.



Tim Hart

Sales Director

Signed: Bicester, UK

Date: 01/01/2021

## 2. Declaration of Conformity for Recreational Craft Propulsion Engine with the requirements of the Recreational Craft Regulations 2017 (UKCA Marking).

Name of Engine Manufacturer: <b>E.P.Barrus LTD</b>	
Name of Authorised Representative: <b>E.P.Barrus LTD</b>	
Address: <b>E.P.Barrus LTD, Launton Road, Bicester, Oxon, OX26 4UR, England, United Kingdom</b>	
Name of Notified Body for <u>exhaust emission assessment</u> : <b>HPi CEproof Ltd</b>	
Address: <b>HPi CEproof Ltd, The Manor House, Howbery Park</b>	
Town: <b>Wallingford</b>	Post Code: <b>OX10 8BA</b>
Country: <b>United Kingdom</b>	ID Number: <b>1521</b>
Conformity assessment module used for exhaust emissions: <input type="checkbox"/> B+C <input type="checkbox"/> B+D <input type="checkbox"/> B+E <input type="checkbox"/> B+F <input type="checkbox"/> G <input type="checkbox"/> H	
Or engine type-approved according to: <b>Directive 2013/53/EU</b>	
Other Community Directives applied:	

### Description of Engine(s) and Essential Requirements

**Engine Type:** Inboard Engine      **Fuel Type:** Diesel      **Combustion Cycle:** 4 Stroke  
**Identification of Engine(s) covered by this Declaration of Conformity**

Engine Model	Engine Type	Engine Family code	Type Approval Certificate Number
Shire 38 / 40 / 45 / 50	4TNV 88 BDYED	G2YDXCL0164N3N	HPiUK-R1105-T005-I-01-01
Shire 38 / 40 / 45 / 50	4TNV88BDYAID	G2YDXCL0164N3N	HPiUK-R1105-T005-I-01-01

Essential Requirements	Standards	Other normative document/method.	Technical file	Specify in more detail *= Mandatory standard.
<b>Annex 1.B- Exhaust Emissions</b>				
B.1 Engine Identification	<input type="checkbox"/>	<input checked="" type="checkbox"/> RCD (II)	<input checked="" type="checkbox"/>	2013/53 EU
B.2 Exhaust emission requirements	<input checked="" type="checkbox"/> *	<input type="checkbox"/>	<input type="checkbox"/>	* EN ISO 8178-4:2017 Test Cycle 1
B.3 Durability	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	2013/53 EU
B.4 Owner's Manual	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	ISO10240
<b>Annex 1. C- Noise Emissions</b>	See Declaration of Conformity of the craft in which the engine(s) has(have) been installed			

This declaration of conformity is issued under the sole responsibility of the manufacturer. I declare on behalf of the engine manufacturer that the engine(s) [is (are) in conformity with the type(s) for which above mentioned EC type-examination or type approval certificate(s) has (have) been issued and]¹ will meet the requirements of the Recreational Craft Regulations 2017 when installed in a recreational craft, in accordance with the engine manufacturer's supplied instructions and that this (these) engine(s) must not be put into service until the recreational craft which it is (they are) to be installed has been declared in conformity with the relevant provisions of the above mentioned Directives.




Tim Hart  
Sales Director  
Signed: Bicester, UK  
Date: 07/07/2021



### 3. Declaration of Incorporation of Partly Completed Machinery

(Original declaration according to Directive 2006/42/EC, Annex II, part 1B)

1. The manufacturer:	E. P. Barrus Limited Glen Way Launton Road Bicester OX26 4UR England United Kingdom			
2. Authorised Compiler of Relevant Technical Documentation:	Mr. Graeme Aldridge Glen Way Launton Road Bicester OX26 4UR England United Kingdom			
3. Partly Completed Machinery:	Designation:	Marine engines for propulsion of, and incorporation into, watercraft.		
	Description:		Serial No.:	
		Shire 38	XX-2400-X	
		Shire 40	XX-2400-X	
		Shire 45	XX-2400-X	
Shire 50	XX-2400-X	and their derivatives.		
Base Engine:	Yanmar 4TNV88 BDYED			
4. The essential health and safety requirements of the Directive 2006/42/EC, Annex I, relating to the design and construction of the engines have been applied and fulfilled as shown in Annex A of this Declaration. The relevant technical documentation is compiled in accordance with part B of Annex VII of the Directive. The engines also comply with Directive 2013/53/EU (Recreational Craft Directive), when installed in accordance with the installation instructions that accompany the engine.				
5. In case of a reasoned request by the national authority, we will supply the relevant technical information of the above named engines to the person in charge.				
6. This partly completed machinery must not be put into service until the final machinery into which it has been incorporated has been declared in conformity with the provisions of this directive, where appropriate.				
7. This declaration is made on 27 June 2018 in Bicester, Oxfordshire.				
 Tim Hart Sales Director E. P. Barrus Limited				

## ANNEX A

The essential health and safety requirements for machinery can only be made compliant partly by Barrus. Therefore Barrus recommends to double-check the paragraphs from Annex 1 of the Directive 2006/42/EC mentioned below for compliance with the Directive for your particular machine.


Chapter	Subject	Applied	Fulfilled	Remark
<b>1.1 GENERAL REMARKS</b>				
1.1.2	Principles Of safety Integration	Yes *1	Yes*1	Consult accompanying manuals for instructions on safe installation.
	*1 For the following principles mentioned in the Directive: (a) the design and construction is fit for function as a marine engine; (b) risks have been eliminated or reduced as far as possible; Principles (c), (d) and (e) require measures to be taken by the boat builder for compliance with the directive.			
1.1.3	Materials and Products	Yes *2	Yes *2	
	*2 The engine has been designed and built using materials which are not known to present a hazard to safety or health. Use recommended fluids and filling positions only. Refer to manual for further information. Other materials used during the installation are to be designed and assessed by the boat builder.			
1.1.4	Lighting	Not Applicable		By boat builder/installer.
1.1.5	Design of machinery to facilitate its handling	Yes	Yes	All engines have appropriate packaging and lifting eyes
1.1.6	Ergonomics	Not Applicable		By boat builder/installer.
1.1.7	Operating Positions			
1.1.8	Seating			
<b>1.2 CONTROL SYSTEMS</b>				
1.2.1	Safety and reliability of control systems	Yes *3	No *3	
	*3 The control systems are designed and constructed to withstand the intended operating stresses and external influences. A fault in the hardware or software of the control system, errors in the control system logic, or reasonably foreseen human error during operation does not lead to hazardous situations. The operation of the control systems is to be designed and implemented by the boat builder. Contact Barrus for advice if required.			
1.2.2	Control devices	Yes *4	No *4	
	*4 The engine is fitted with the basic required control devices. The location and operation of these, and other, control systems is to be designed and implemented by the boat builder. Contact Barrus for advice if required.			
1.2.3	Starting	Yes *5	No *5	Starter motor installed
	*5 The operation of the starting system is controlled by a key switch on the panel. Contact Barrus for advice if required. The location and operation of this, and other, control systems is to be designed and implemented by the boat builder. Contact Barrus for advice if required.			
1.2.4.1	Normal stop	Yes *6	No *6	
	*6 The operation of the starting system is controlled by a key switch on the panel. The engine is fitted with a control device (energized to run stop solenoid) whereby it can be brought safely to a complete stop. The location and operation of this, and other, control systems is to be designed and implemented by the boat builder. Contact Barrus for advice if required.			
1.2.4.2	Operational stop	Not applicable		By boat builder/installer.
1.2.4.3	Emergency stop			
1.2.4.4	Assembly of machinery			
1.2.5	Selection of control or operating modes			
1.2.6	Failure of power supply			

1.3 PROTECTION AGAINST MECHANICAL HAZARDS				
1.3.1	Risk of loss of stability	Yes <sup>*7</sup>	Yes <sup>*7</sup>	
	<sup>*7</sup> Lifting eyes are provided on the engine. The secure and stable installation of engine is to be carried out by the boat builder/installer.			
1.3.2	Risk of break-up during operation	Yes <sup>*8</sup>	Yes <sup>*8</sup>	
	<sup>*8</sup> Instructions to indicate the type and frequency of inspections and maintenance required for safety reasons are in the accompanying manual. The mounting, positioning and/or guarding of parts where a risk of rupture or disintegration remains (in particular V-belts and pulleys), are to be made compliant by the boat builder/installer.			
1.3.3	Risks due to falling or ejected objects	Not applicable		
1.3.4	Risks due to surface edges or angles	Yes	Yes	
1.3.5	Risks related to combined machinery	Not applicable		By boat builder/installer.
1.3.6	Risks related to variations in operating conditions			
1.3.7	Risks related to moving parts	No	No	By boat builder/installer.
1.3.8	Choice of protection against risks arising from moving parts	No	No	
1.3.8.1	Moving transmission parts	No	No	
1.3.8.2	Moving parts involved in the process	Not applicable		By boat builder
1.3.9	Risks of uncontrolled movements			
1.4 REQUIRED CHARACTERISTICS OF GUARDS AND PROTECTIVE DEVICES				
1.4.1	General requirements	No	No	Guards to be specified and fitted by the boat builder/installer.
1.4.2.1	Fixed guards	No	No	
1.4.2.2	Interlocking movable guards	Not applicable		By boat builder/installer.
1.4.2.3	Adjustable guards restricting access			
1.4.3	Special requirements for protective devices			
1.5 RISKS DUE TO OTHER HAZARDS				
1.5.1	Electricity supply	Not applicable		By boat builder
1.5.2	Static electricity	Not applicable		By boat builder
1.5.3	Energy supply other than electricity	Yes <sup>*9</sup>	Yes <sup>*9</sup>	This concerns the fuel injection system and gearbox hydraulic system where fitted.
	<sup>*9</sup> For the fuel filter, fuel injection pump, fuel injection nozzles, high pressure fuel injection pipes and fuel hoses supplied and installed on the engine by Barrus. Any other fuel system parts connected to the engine to be made compliant by the boat builder/installer.			
1.5.4	Errors of fitting	No	No	Fitting or refitting should only be done by trained and skilled personnel.
1.5.5	Extreme temperatures	Yes <sup>*10</sup>	Yes <sup>*10</sup>	Protection or warnings to be made by the boat builder
	<sup>*10</sup> 'Hot Surface' warning stickers are affixed to the rocker cover and/or the twin thermostat housing. All other protection or warnings to be made by the boat builder			
1.5.6	Fire	No	No	By boat builder
1.5.7	Explosion	No	No	

1.5.8	Noise	No	No	
1.5.9	Vibrations	No	No	
1.5.10	Radiation	No	No	
1.5.11	External radiation	Yes	Yes	
1.5.12	Laser radiation	Not applicable		
1.5.13	Emissions of hazardous materials and substances	Yes <sup>*11</sup>	Yes <sup>*11</sup>	
*11 Except for the exhaust, fuel, and cooling water system which needs to be properly connected by the boat builder or installer according to the Shire Manual.				
1.5.14	Risk of being trapped in a machine	Not applicable		By boat builder/installer.
1.5.15	Risk of slipping, tripping or falling			
1.5.16	Lighting			
<b>1.6 MAINTENANCE</b>				
1.6.1	Machinery maintenance	Yes	Yes	
1.6.2	Access to operating positions and servicing points	Not applicable		By boat builder/installer.
1.6.3	Isolation of energy sources			
1.6.4	Operator intervention			
1.6.5	Cleaning of internal parts	Yes	Yes	
<b>1.7 INFORMATION</b>				
1.7.1	Information and warnings on the machinery	Yes <sup>*12</sup>	Yes <sup>*12</sup>	
*12 A 'Refer to manual before carrying out engine installation, operation and maintenance' label is fitted to the engine. 'Hot Surface' warning stickers are fitted on surfaces that may become hot during operation. All other protection or warnings to be made by the boat builder/installer.				
1.7.1.1	Information and information devices	Yes <sup>*13</sup>	Yes <sup>*13</sup>	
*13 The control panel is simple to understand and use. Other control measures and information on the use of the machinery is to be carried out by the boat builder/installer.				
1.7.1.2	Warning devices	Yes <sup>*14</sup>	Yes <sup>*14</sup>	
*14 The control panel provides warnings. The location and installation of the control panel is to be carried out by the boat builder/installer.				
1.7.2	Warning of residual risks	No	No	By boat builder/installer.
1.7.3	Marking of machinery	Yes <sup>*15</sup>	No <sup>*15</sup>	
*15 The engine is CE marked with a brand, model designation and serial number. Full CE compliance to be carried out by the boat builder/installer.				
1.7.4	Instructions	Yes	Yes	
1.7.4.1	General principles for the drafting of instructions	Yes <sup>*16</sup>	Yes <sup>*16</sup>	
*16 For (a) and (b). The boat builder/installer to comply with (c) and (d) for the total machine and use of it				
1.7.4.2	Contents of the instructions	Yes <sup>*17</sup>	Yes <sup>*17</sup>	
*17 For (a), (b), (d), (e), (g), (h), (i), (k), (p), (r), (s), (t). The boat builder/installer to comply with (c), (d), (f), (g), (h), (i), (j), (l), (m), (n), (o), (q), (u), (v).				
1.7.4.3	Sales literature	Yes	Yes	

#### 4. EU Declaration of Conformity with the Exhaust Emissions Requirements of Directive 2013/53/EU

(Original declaration according to Directive 2013/53/EU)

1. The manufacturer:	E. P. Barrus Limited Glen Way Launton Road Bicester OX26 4UR		
2. Authorised Compiler of Relevant Technical Documentation:	Mr. Graeme Aldridge Glen Way Launton Road Bicester OX26 4UR		
3. Partly Completed Machinery:	Designation:	Marine engines for propulsion of, and incorporation into, watercraft.	
	Description:	Serial No.:	and their derivatives.
	Shire 38	XX-2400-X	
	Shire 40	XX-2400-X	
	Shire 45	XX-2400-X	
	Shire 50	XX-2400-X	
	Base Engine:	Yanmar 4TNV88 BDYED	
4. The essential health and safety requirements of the Directive 2006/42/EC, Annex I, relating to the design and construction of the engines have been applied and fulfilled as shown in Annex A of this Declaration. The relevant technical documentation is compiled in accordance with part B of Annex VII of the Directive. The engines also comply with Directive 2013/53/EU (Recreational Craft Directive), when installed in accordance with the installation instructions that accompany the engine.			
5. In case of a reasoned request by the national authority, we will supply the relevant technical information of the above named engines to the person in charge.			
6. This partly completed machinery must not be put into service until the final machinery into which it has been incorporated has been declared in conformity with the provisions of this directive, where appropriate.			
7. This declaration is made on 27 June 2018 in Bicester, Oxfordshire.			
			
Tim Hart Sales Director E. P. Barrus Limited			

## SECTION 15 – Lubricant Safety Data Sheets

### 1. Golden Film Running In Oil

#### SAFETY DATA SHEET Golden Film Running in oil

#### SECTION 1: IDENTIFICATION OF THE SUBSTANCE/MIXTURE AND OF THE COMPANY/UNDERTAKING

##### 1.1. Product identifier

Product name	Golden Film Running in oil
Product No.	7265-000
Internal Id	10751
REACH Registration number	n/a Mixture

##### 1.2. Relevant identified uses of the substance or mixture and uses advised against

Identified uses Engine oil.

##### 1.3. Details of the supplier of the safety data sheet

Supplier	Morris Lubricants Castle Foregate Shrewsbury SY1 2EL 08.45 - 17.00 GMT T: (+44)(0)1743 232200 F: (+44)(0)1743 353584 sds@morris-lubricants.co.uk
----------	---

##### 1.4. Emergency telephone number

+44 (0)1743 232200 (08.45 - 17.00 hrs GMT)

#### SECTION 2: HAZARDS IDENTIFICATION

##### 2.1. Classification of the substance or mixture

Classification (1999/45/EEC) Not classified.

##### 2.2. Label elements

Risk Phrases	NC	Not classified.
Safety Phrases	P13 P14	Safety data sheet available for professional user on request. Contains Calcium long chain alkaryl sulphonate . May produce an allergic reaction.

##### 2.3. Other hazards

This product does not contain any PBT or vPvB substances.

#### SECTION 3: COMPOSITION/INFORMATION ON INGREDIENTS

##### 3.2. Mixtures

Solvent refined mineral oil		60-100%
CAS-No.: 64742-65-0	EC No.: 265-169-7	Registration Number 01-2119471299-27
Classification (EC 1272/2008) Not classified.	Classification (67/548/EEC) Not classified.	

Distillates (petroleum) solvent-dewaxed heavy paraffinic		10-30%
CAS-No.: 64742-65-0 A petroleum product. DMSO extract < 3 % weight ( IP 346 )	EC No.: 265-169-7	Registration Number: 01-2119471299-27
Classification (EC 1272/2008) Not classified.	Classification (67/548/EEC) Not classified.	
Phosphorodithioic acid, O,O-di-C1-14-alkyl esters, zinc salts		< 1%
CAS-No.: 68649-42-3	EC No.: 272-028-3	Registration Number: 01-2119657973-23-xxxx
Classification (EC 1272/2008) Eye Dam. 1 - H318 Aquatic Chronic 2 - H411	Classification (67/548/EEC) Xi;R41. N;R51/53.	
Calcium long chain alkaryl sulphonate		< 1%
CAS-No.: 2906-36-7	EC No.: 271-877-7	Registration Number: 01-2119657986-16
Classification (EC 1272/2008) Skin Sens. 1 - H317 Aquatic Chronic 4 - H413	Classification (67/548/EEC) R53,R43.	

The Full Text for all R-Phrases and Hazard Statements are Displayed in Section 16.

REACH Registration number n/a Mixture  
 Ingredient notes  
 A petroleum product. DMSO extract < 3 % weight ( IP 346 )  
 Composition Comments  
 The data shown are in accordance with the latest EC Directives.

## SECTION 4: FIRST AID MEASURES

### **4.1. Description of first aid measures**

General information

Get medical attention if any discomfort continues.

Inhalation

In case of inhalation of spray mist: Move person into fresh air and keep at rest. Get medical attention if any discomfort continues.

Ingestion

Get medical attention if any discomfort continues. Do not induce vomiting.

Skin contact

Remove contaminated clothing immediately and wash skin with soap and water.

Eye contact

Immediately flush with plenty of water for up to 15 minutes. Remove any contact lenses and open eyes wide apart. Get medical attention promptly if symptoms occur after washing.

### **4.2. Most important symptoms and effects, both acute and delayed**

General information

If aspiration into the lungs is suspected, eg when vomiting, admit to hospital immediately.

Inhalation

Upper respiratory irritation.

Ingestion

May cause discomfort if swallowed. The product contains mineral oil, which if aspirated into the lungs through vomiting after ingestion, may result in chemical pneumonia.

Skin contact

Prolonged contact may cause redness, irritation and dry skin.

Eye contact

Irritation of eyes and mucous membranes.

### **4.3. Indication of any immediate medical attention and special treatment needed**

Treat Symptomatically.

---

## **SECTION 5: FIREFIGHTING MEASURES**

---

### **5.1. Extinguishing media**

Extinguishing media  
Extinguish with foam, carbon dioxide, dry powder or water fog.  
Unsuitable extinguishing media  
Do not use water jet as an extinguisher, as this will spread the fire.

### **5.2. Special hazards arising from the substance or mixture**

Hazardous combustion products  
In case of fire, toxic gases (CO, CO<sub>2</sub>, NO<sub>x</sub>) may be formed. Fire may also create other unidentified organic gases some of which may be toxic.  
Unusual Fire & Explosion Hazards  
Heat from fire could result in drums bursting

### **5.3. Advice for firefighters**

Special Fire Fighting Procedures  
Keep run-off water out of sewers and water sources. Dike for water control.  
Protective equipment for fire-fighters  
Self-contained breathing apparatus.

---

## **SECTION 6: ACCIDENTAL RELEASE MEASURES**

---

### **6.1. Personal precautions, protective equipment and emergency procedures**

For personal protection, see section 8. In case of spills, beware of slippery floors and surfaces.

### **6.2. Environmental precautions**

Contain spillage with sand or earth. Do not allow to enter drains, sewers or watercourses. The product is insoluble in water and will spread on the water surface.

### **6.3. Methods and material for containment and cleaning up**

Contain spillage with sand or earth. Use sealed containers for reclamation or dispose of at a licenced hazardous waste collection point. Avoid contact with water. Spillages or uncontrolled discharges into watercourses must be IMMEDIATELY alerted to the Environmental Agency or other appropriate regulatory body. In case of spillage on water prevent the spread by use of suitable barrier equipment

### **6.4. Reference to other sections**

For personal protection, see section 8. See section 11 for additional information on health hazards. For waste disposal, see section 13.

---

## **SECTION 7: HANDLING AND STORAGE**

---

### **7.1. Precautions for safe handling**

Avoid spilling, skin and eye contact. Always remove oil with soap and water or skin cleaning agent, never use organic solvents. Do not use oil-contaminated clothing or shoes, and do not put rags moistened with oil into pockets.

### **7.2. Conditions for safe storage, including any incompatibilities**

Store in tightly closed original container in a dry, cool and well-ventilated place.  
Storage Class  
Miscellaneous hazardous material storage.

### **7.3. Specific end use(s)**

The identified uses for this product are detailed in Section 1.2.



## SECTION 8: EXPOSURE CONTROLS/PERSONAL PROTECTION

### 8.1. Control parameters

Name	STD	TWA - 8 Hrs		STEL - 15 Min		Notes
Distillates (petroleum) solvent-dewaxed heavy paraffinic	ACGIH		5 mg/m <sup>3</sup>		10 mg/m <sup>3</sup>	
Solvent refined mineral oil	ACGIH		5 mg/m <sup>3</sup>		10 mg/m <sup>3</sup>	

ACGIH = American Conference of Governmental Industrial Hygienists.

### 8.2. Exposure controls

#### Protective equipment



#### Process conditions

Use engineering controls to reduce air contamination to permissible exposure level.

#### Engineering measures

Provide adequate ventilation, including appropriate local extraction, to ensure that the defined occupational exposure limit is not exceeded.

#### Respiratory equipment

No specific recommendation made, but respiratory protection must be used if the general level exceeds the recommended occupational exposure limit.

#### Hand protection

The most suitable glove must be chosen in consultation with the gloves supplier, who can inform about the breakthrough time of the glove material.

#### Eye protection

If risk of splashing, wear safety goggles or face shield.

#### Other Protection

Use barrier creams to prevent skin contact.

#### Hygiene measures

Wash promptly with soap & water if skin becomes contaminated.

#### Thermal hazards

Not anticipated under normal conditions of use. The product is combustible if heated excessively and an ignition source is applied.

#### Environmental Exposure Controls

Do not allow product to contaminate land.

## SECTION 9: PHYSICAL AND CHEMICAL PROPERTIES

### 9.1. Information on basic physical and chemical properties

Appearance	Liquid
Colour	Amber. to Brown.
Odour	Characteristic. Oil smell.
Solubility	Insoluble in water Soluble in: Organic solvents.
Initial boiling point and boiling range (°C)	>320°C
Melting point (°C)	<-20
Relative density	0.882 15
Vapour density (air=1)	>1
Vapour pressure	Air = 1
Viscosity	<0.1 kPa @ 20°C
	92 cSt 40
	Not water soluble.
Decomposition temperature (°C)	
Not determined	
Flash point (°C)	>200 PM Closed cup.
Auto Ignition Temperature (°C)	Not determined
Flammability Limit - Lower(%)	
Not known.	
Flammability Limit - Upper(%)	
Not known.	
Partition Coefficient (N-Octanol/Water)	Not determined. log Kow > 6
	The above figure is typical of mineral oil.
Explosive properties	
	This product is not considered explosive.

**Other Flammability**

Product is not flammable but on excessive heating may become combustible.  
Material is considered non-oxidizing.

**9.2. Other information****Volatility Description**

Not considered volatile. Vapours may be emitted on excessive heating.  
The product is a complex mixture, the majority of which would not be classed as a VOC. However it cannot be discounted that trace or low levels of VOC's may be present.

**SECTION 10: STABILITY AND REACTIVITY****10.1. Reactivity**

No specific reactivity hazards associated with this product.

**10.2. Chemical stability**

Stable under normal temperature conditions and recommended use.

**10.3. Possibility of hazardous reactions**

Unlikely to occur under normal conditions of use.  
Hazardous Polymerisation  
Unlikely to occur.

**10.4. Conditions to avoid**

Avoid heat, flames and other sources of ignition.

**10.5. Incompatible materials**

Materials To Avoid  
Strong oxidising substances.

**10.6. Hazardous decomposition products**

Thermal decomposition or combustion may liberate carbon oxides and other toxic gases or vapours.

**SECTION 11: TOXICOLOGICAL INFORMATION****11.1. Information on toxicological effects****Acute toxicity:**

Acute Toxicity (Oral LD50)

> 2000 mg/kg Rat

Not expected to be highly toxic based on information of ingredients. Based on available data the classification criteria are not met.

Acute Toxicity (Dermal LD50)

> 2000 mg/kg Rabbit

Not expected to be highly toxic based on information of ingredients. Based on available data the classification criteria are not met.

Acute Toxicity (Inhalation LC50)

Not determined.

The product is unlikely to present any significant inhalation hazard at ambient temperatures and under normal conditions of use.

**Skin Corrosion/Irritation:**

The classification criteria are not met. May cause mild skin irritation. Prolonged or repeated skin contact eg. from clothing wet with lubricant may cause dermatitis. Symptoms may include redness, edema, drying, and cracking skin.

**Serious eye damage/irritation:**

May cause mild, short lasting discomfort to eyes.

**Respiratory or skin sensitisation:**

No evidence to suggest the product will be a respiratory sensitizer. Repeated exposure to oil mists may cause respiratory damage.

Not expected to be a skin sensitizer based on information on components.

**Carcinogenicity:**

This product contains mineral oils which are considered to be severely refined and not considered to be carcinogenic under IARC. All of the oils in this product have been demonstrated to contain less than 3% extractables by the IP346 test

**Reproductive Toxicity:**

No data available to suggest the product will cause reproductive toxicity.

Aspiration hazard:

Viscosity  
Kinematic viscosity > 20.5 mm<sup>2</sup>/s.

The product viscosity is greater than the upper limit assigned for classification. The product contains mineral oil. If aspirated into the lungs e.g. through vomiting after ingestion admit to hospital immediately.

General information

This product has low toxicity. Only large volumes may have adverse impact on human health.

Inhalation

Unlikely to be hazardous by inhalation because of the low vapour pressure of the substance at ambient temperature.

Ingestion

No harmful effects expected in amounts likely to be ingested by accident.

Skin contact

Skin irritation is not anticipated when used normally. Repeated exposure may cause skin dryness or cracking.

Eye contact

May cause temporary eye irritation.

Specific effects

Prolonged or repeated contact with used oil may cause serious skin diseases, such as dermatitis and skin cancer.

---

**SECTION 12: ECOLOGICAL INFORMATION**

---

Ecotoxicity

Based on available data the classification criteria are not met. Not regarded as dangerous for the environment.

**12.1. Toxicity**

Acute Fish Toxicity

Based on available data the classification criteria are not met. Not considered toxic to fish.

Based on available data the classification criteria are not met.

**12.2. Persistence and degradability**

The product contains mineral oil which has limited biodegradability in CEC test methods but will biodegrade slowly in aerobic water and sediments and is considered ultimately biodegradable.

Degradability

The product is not readily biodegradable.

The product is based on highly refined mineral oils that are considered stable to hydrolysis.

The product is not considered readily biodegradable, albeit the major constituents are expected to ultimately biodegrade.

Biological Oxygen Demand

Not determined.

Chemical Oxygen Demand

Not determined.

**12.3. Bioaccumulative potential**

Bioaccumulative potential

Bioaccumulation is unlikely to be significant because of the low water solubility of this product.

Bioaccumulation factor

Not known.

Partition coefficient

Not determined.

log Kow > 6

The above figure is typical of mineral oil.

**12.4. Mobility in soil**

Mobility:

The product is non-volatile. The product is insoluble in water and will spread on the water surface.

Henry's Law Constant

Not determined.

**12.5. Results of PBT and vPvB assessment**

This product does not contain any PBT or vPvB substances.

**12.6. Other adverse effects**

None known.

---

## **SECTION 13: DISPOSAL CONSIDERATIONS**

---

General information

Waste to be treated as controlled waste. Disposal to licensed waste disposal site in accordance with local Waste Disposal Authority.

### **13.1. Waste treatment methods**

Dispose of waste and residues in accordance with local authority requirements.

---

## **SECTION 14: TRANSPORT INFORMATION**

---

General                                      The product is not covered by international regulation on the transport of dangerous goods (IMDG, IATA, ADR/RID).

### **14.1. UN number**

Not applicable.

### **14.2. UN proper shipping name**

Not applicable.

### **14.3. Transport hazard class(es)**

Not applicable.

### **14.4. Packing group**

Not applicable.

### **14.5. Environmental hazards**

Environmentally Hazardous Substance/Marine Pollutant  
No.

### **14.6. Special precautions for user**

Not applicable.

### **14.7. Transport in bulk according to Annex II of MARPOL73/78 and the IBC Code**

Not applicable.

---

## **SECTION 15: REGULATORY INFORMATION**

---

### **15.1. Safety, health and environmental regulations/legislation specific for the substance or mixture**

Uk Regulatory References

Health and Safety at Work Act 1974.

Environmental Listing

The Pollution Prevention and Control Act 1999. Special Waste regulations 1996. Control of Pollution (Oil Storage) (England) Regulations 2001

Statutory Instruments

The Chemicals (Hazard Information and Packaging for Supply) Regulations 2009 (S.I 2009 No. 716).

Approved Code Of Practice

Safety Data Sheets for Substances and Preparations.

Guidance Notes

Workplace Exposure Limits EH40.

EU Legislation

Dangerous Preparations Directive 1999/45/EC. Dangerous Substance Directive 67/548/EEC. Regulation (EC) No 1907/2006 of the European Parliament and of the Council of 18 December 2006 concerning the Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH), establishing a European Chemicals Agency, amending Directive 1999/45/EC and repealing Council Regulation (EEC) No 793/93 and Commission Regulation (EC) No 1488/94 as well as Council Directive 76/769/EEC and Commission Directives 91/155/EEC, 93/67/EEC, 93/105/EC and 2000/21/EC, including amendments. Regulation (EC) No 1272/2008 of the European Parliament and of the Council of 16 December 2008 on classification, labelling and packaging of substances and mixtures, amending and repealing Directives 67/548/EEC and 1999/45/EC, and amending Regulation (EC) No 1907/2006 with amendments.

### **15.2. Chemical Safety Assessment**

No chemical safety assessment has been carried out.

---

**SECTION 16: OTHER INFORMATION**

---

## Revision Comments

NOTE: Lines within the margin indicate significant changes from the previous revision.

Revision Date 21/05/2015

Revision 2

Supersedes date 23/08/2010

## Risk Phrases In Full

R53 May cause long-term adverse effects in the aquatic environment.

R43 May cause sensitisation by skin contact.

NC Not classified.

R41 Risk of serious damage to eyes.

R51/53 Toxic to aquatic organisms, may cause long-term adverse effects in the aquatic environment.

## Hazard Statements In Full

H318 Causes serious eye damage.

H317 May cause an allergic skin reaction.

H413 May cause long lasting harmful effects to aquatic life.

H411 Toxic to aquatic life with long lasting effects.

## 2. Ground Force 10W-40

### SAFETY DATA SHEET Ground Force 10W-40

---

#### SECTION 1: Identification of the substance/mixture and of the company/undertaking

---

##### 1.1. Product identifier

Product name		Ground Force 10W-40
Product number	7450	
Internal identification		GHS21580
REACH registration number		n/a Mixture

##### 1.2. Relevant identified uses of the substance or mixture and uses advised against

Identified uses	Engine oil.
Uses advised against	Non specified unless otherwise stated within this MSDS

##### 1.3. Details of the supplier of the safety data sheet

Supplier	Morris Lubricants Castle Foregate Shrewsbury SY1 2EL  08.45 - 17.00 GMT T: (+44)(0)1743 232200 F: (+44)(0)1743 353584 sds@morris-lubricants.co.uk
----------	---

##### 1.4. Emergency telephone number

Emergency telephone +44 (0)1743 232200 (08.45 - 17.00 hrs GMT)

---

#### SECTION 2: Hazards identification

---

##### 2.1. Classification of the substance or mixture

###### Classification

Physical hazards	Not Classified
Health hazards	Not Classified
Environmental hazards	Not Classified
Classification (67/548/EEC or 1999/45/EC)	Not Classified

##### 2.2. Label elements

Hazard statements	NC Not Classified
Supplemental label Information	EUH210 Safety data sheet available on request.

##### 2.3. Other hazards

This product does not contain any substances classified as PBT or vPvB.

## SECTION 3: Composition/information on ingredients

### 3.2. Mixtures

Distillates (petroleum) solvent-dewaxed heavy paraffinic	30-60%
CAS-No.: 64742-65-0	EC No.: 265-169-7
REACH registration number: 01-2119471299-27-XXXX	
A petroleum product. DMSO extract < 3 % weight ( IP 346 )	
Classification Not classified.	Classification (67/548/EEC or 1999/45/EC) -
Distillates,hydrotreated heavy paraffinic	10-30%
CAS number: 64742-54-7	EC number: 265-157-1
REACH registration number: 01-2119484627-25-0014	
Classification Asp. Tox. 1 - H304	Classification (67/548/EEC or 1999/45/EC) -
Highly refined mineral oil (C15 - C50)	1-5%
CAS number: -	EC number: 276-738-4
REACH registration number: 01-2119474889-13-XXXX	
Classification Asp. Tox. 1 - H304	Classification (67/548/EEC or 1999/45/EC) -

The Full Text for all R-Phrases and Hazard Statements are Displayed in Section 16.

**Composition comments** If REACH registration numbers do not appear the substance is either exempt from registration, does not meet the minimum volume threshold for registration, the registration date has not yet come due or this information is proprietary.

## SECTION 4: First aid measures

### 4.1. Description of first aid measures

<b>General information</b>	Get medical attention if any discomfort continues.
<b>Inhalation</b>	If spray/mist has been inhaled, proceed as follows. Move affected person to fresh air and keep warm and at rest in a position comfortable for breathing. Get medical attention if any discomfort continues.
<b>Ingestion</b>	Get medical attention if any discomfort continues. Do not induce vomiting.
<b>Skin contact</b>	Remove contaminated clothing immediately and wash skin with soap and water.
<b>Eye contact</b>	Rinse immediately with plenty of water. Remove any contact lenses and open eyelids wide apart. Continue to rinse for at least 15 minutes. Get medical attention promptly if symptoms occur after washing.

### 4.2. Most important symptoms and effects, both acute and delayed

<b>General information</b>	If aspiration into the lungs is suspected, eg when vomiting, admit to hospital immediately.
<b>Inhalation</b>	Upper respiratory irritation.
<b>Ingestion</b>	May cause discomfort if swallowed. The product contains mineral oil, which if aspirated into the lungs through vomiting after ingestion, may result in chemical pneumonia.
<b>Skin contact</b>	Prolonged contact may cause redness, irritation and dry skin.
<b>Eye contact</b>	Irritation of eyes and mucous membranes.

### 4.3. Indication of any immediate medical attention and special treatment needed

**Notes for the doctor** Treat symptomatically.

---

**SECTION 5: Firefighting measures**

---

**5.1. Extinguishing media**

<b>Suitable extinguishing media</b>	Extinguish with foam, carbon dioxide, dry powder or water fog.
<b>Unsuitable extinguishing Media</b>	Do not use water jet as an extinguisher, as this will spread the fire.

**5.2. Special hazards arising from the substance or mixture**

<b>Specific hazards</b>	Heat from fire could result in drums bursting
<b>Hazardous combustion Products</b>	Protection against nuisance dust must be used when the airborne concentration exceeds 10 mg/m <sup>3</sup> . Oxides of carbon. Oxides of nitrogen. Fire may also create other unidentified organic gases some of which may be toxic.

**5.3. Advice for firefighters**

<b>Protective actions during Firefighting</b>	Control run-off water by containing and keeping it out of sewers and watercourses.
<b>Special protective equipment for firefighters</b>	Wear self-contained breathing apparatus.

---

**SECTION 6: Accidental release measures**

---

**6.1. Personal precautions, protective equipment and emergency procedures**

<b>Personal precautions</b>	For personal protection, see Section 8. In case of spills, beware of slippery floors and surfaces.
-----------------------------	--

**6.2. Environmental precautions**

<b>Environmental precautions</b>	Contain spillage with sand or earth. Avoid the spillage or runoff entering drains, sewers or watercourses. The product is insoluble in water and will spread on the water surface.
----------------------------------	--

**6.3. Methods and material for containment and cleaning up**

<b>Methods for cleaning up</b>	Contain spillage with sand or earth. Collect spillage for reclamation or disposal in sealed containers via a licensed waste contractor. Avoid water contacting spilled material or leaking containers. Spillages or uncontrolled discharges into watercourses must be reported immediately to the Environmental Agency or other appropriate regulatory body. In case of spillage on water prevent the spread by use of suitable barrier equipment
--------------------------------	---

**6.4. Reference to other sections**

<b>Reference to other sections</b>	For personal protection, see Section 8. See Section 11 for additional information on health hazards. For waste disposal, see section 13.
------------------------------------	--

---

**SECTION 7: Handling and storage**

---

**7.1. Precautions for safe handling**

<b>Usage precautions</b>	Avoid spilling. Always remove oil with soap and water or skin cleaning agent, never use organic solvents. Do not use oil-contaminated clothing or shoes, and do not put rags moistened with oil into pockets.
--------------------------	---

**7.2. Conditions for safe storage, including any incompatibilities**

<b>Storage precautions</b>	Store in tightly-closed, original container in a dry, cool and well-ventilated place.
<b>Storage class</b>	Miscellaneous hazardous material storage.

**7.3. Specific end use(s)**

<b>Specific end use(s)</b>	The identified uses for this product are detailed in Section 1.2.
----------------------------	---



## SECTION 8: Exposure Controls/personal protection

### 8.1. Control parameters

#### Occupational exposure limits

##### **Distillates (petroleum) solvent-dewaxed heavy paraffinic**

Long-term exposure limit (8-hour TWA): ACGIH 5 mg/m<sup>3</sup>  
 Short-term exposure limit (15-minute): ACGIH 10 mg/m<sup>3</sup>

##### **Distillates,hydrotreated heavy paraffinic**

Long-term exposure limit (8-hour TWA): ACGIH 5  
 Short-term exposure limit (15-minute): ACGIH 10 mg/m<sup>3</sup>

##### **Highly refined mineral oil (C15 - C50)**

Long-term exposure limit (8-hour TWA): ACGIH 5 ppm  
 Short-term exposure limit (15-minute): ACGIH 10 ppm

##### **Zinc bis[O-(6-methylheptyl)]bis[O-(sec-butyl)]bis(dithiophosphate)**

Short-term exposure limit (15-minute): 10 mg/m<sup>3</sup> mist

ACGIH = American Conference of Governmental Industrial Hygienists.

#### Bis(nonylphenyl)amine

**DNEL** Industry - Dermal; Long term systemic effects: 0.62 mg/kg  
 Industry - Inhalation; Long term systemic effects: 4.37 mg/m<sup>3</sup>  
 Consumer - Dermal; Long term systemic effects: 0.31 mg/kg  
 Consumer - Inhalation; Long term systemic effects: 1.09 mg/m<sup>3</sup>  
 Consumer - Oral; Long term systemic effects: 0.31 mg/kg

**PNEC** - Marine water; 0.01 mg/l  
 - Sediment (Freshwater); 132000 mg/kg  
 - Sediment (Marinewater); 13200 mg/kg  
 - Soil; 263000 mg/kg  
 - Fresh water; 0.1 mg/l

#### Phenol, dodecyl-,sulfurized, carbonates, calcium salts, overbased

**DNEL** Industry - Dermal; Short term systemic effects: 80 mg/kg/day  
 Industry - Inhalation; Short term systemic effects: 167 mg/m<sup>3</sup>  
 Industry - Dermal; Long term systemic effects: 20.8 mg/kg/day  
 Industry - Inhalation; Long term systemic effects: 70.52 mg/m<sup>3</sup>  
 Consumer - Dermal; Short term systemic effects: 40 mg/kg/day  
 Consumer - Oral; Short term systemic effects: 50 mg/m<sup>3</sup>  
 Consumer - Oral; Long term systemic effects: 5 mg/kg/day  
 Consumer - Dermal; Long term systemic effects: 10.42 mg/kg/day  
 Consumer - Inhalation; Long term systemic effects: 52.6 mg/m

**PNEC** - Fresh water; 0.1 mg/l  
 - Marine water; 0.01 mg/l  
 - Sediment (Freshwater); 132000 mg/kg  
 - Sediment (Freshwater); 13200 mg/kg  
 - Soil; 263000 mg/kg

#### Reaction mass of isomers of: C7-9-alkyl 3-(3,5-di-tert-butyl-4-hydroxyphenyl)propionate

**DNEL** Industry - Dermal; Short term systemic effects: 20 mg/kg  
 Industry - Dermal; Short term local effects: 1 mg/cm<sup>2</sup>  
 Industry - Dermal; Long term systemic effects: 0.22 mg/kg  
 Industry - Dermal; Long term local effects: 0.006 mg/cm<sup>2</sup>

**PNEC** - Fresh water; 0.0043 mg/l  
 - Marine water; 0.00043 mg/l  
 - Sediment (Freshwater); 233 mg/kg  
 - Sediment (Marinewater); 23.3 mg/kg  
 - Soil; 189 mg/kg

## 8.2. Exposure controls

### Protective equipment



### Appropriate engineering controls

Provide adequate general and local exhaust ventilation. Observe any occupational exposure limits for the product or ingredients.

### Eye/face protection

Eyewear complying with an approved standard should be worn if a risk assessment indicates eye contact is possible. The following protection should be worn: Chemical splash goggles or face shield.

### Hand protection

The most suitable glove should be chosen in consultation with the glove supplier/manufacturer, who can provide information about the breakthrough time of the glove material.

### Other skin and body Protection

Use barrier creams to prevent skin contact.

### Hygiene measures

Use engineering controls to reduce air contamination to permissible exposure level. Wash promptly with soap and water if skin becomes contaminated.

### Respiratory protection

No specific recommendations. Respiratory protection must be used if the airborne contamination exceeds the recommended occupational exposure limit.

### Thermal hazards

Not anticipated under normal conditions of use. The product is combustible if heated excessively and an ignition source is applied.

### Environmental exposure Controls

Do not allow product to contaminate land.

## SECTION 9: Physical and Chemical Properties

### 9.1. Information on basic physical and chemical properties

Appearance	Liquid.
Colour	Pale Amber
Odour	Characteristic. Oil-like.
Odour threshold	Not known.
pH	Not applicable.
Melting point	-39°C Pour point
Initial boiling point and range	>320°C @ 101.3 kPa
Flash point	208°C PMCC (Pensky-Martens closed cup).
Evaporation rate	Not relevant.
Upper/lower flammability or explosive limits	Not known.
Other flammability	Product is not flammable but on excessive heating may become combustible.
Vapour pressure	<0.1 kPa @ 20°C
Vapour density	Not determined.
Relative density	0.870 @ 15.6°C
Solubility(ies)	Insoluble in water. Soluble in the following materials: Organic solvents.
Partition coefficient	Not determined. log Kow: > 7 The above figure is typical of mineral oil.
Auto-ignition temperature	No specific test data are available.

<b>Decomposition Temperature</b>	Not determined.
<b>Viscosity</b>	89.4 cSt @ 40°C
<b>Explosive properties</b>	Not considered to be explosive.
<b>Explosive under the influence of a flame</b>	Not considered to be explosive.
<b>Oxidising properties</b>	The mixture itself has not been tested but none of the ingredient substances meet the criteria for classification as oxidising.

## **9.2. Other information**

Volatile organic compound The product is a complex mixture, the majority of which would not be classed as a VOC. However it cannot be discounted that trace or low levels of VOC's may be present.

## **SECTION 10: Stability and reactivity**

### **10.1. Reactivity**

Reactivity There are no known reactivity hazards associated with this product.

### **10.2. Chemical stability**

Stability Stable at normal ambient temperatures and when used as recommended.

### **10.3. Possibility of hazardous reactions**

**Possibility of hazardous reactions** Unlikely to occur under normal conditions of use. Unlikely to occur.

### **10.4. Conditions to avoid**

**Conditions to avoid** Avoid heat, flames and other sources of ignition.

### **10.5. Incompatible materials**

**Materials to avoid** Strong oxidising agents.

### **10.6. Hazardous decomposition products**

**Hazardous decomposition Products** Oxides of carbon. Oxides of nitrogen.

## **SECTION 11: Toxicological information**

### **11.1. Information on toxicological effects**

#### **Acute toxicity – oral** **Notes (oral LD<sub>50</sub>)**

Not expected to be highly toxic based on information of ingredients. Based on available data the classification criteria are not met.

#### **Acute toxicity – dermal** **Notes (dermal LD<sub>50</sub>)**

Not expected to be highly toxic based on information of ingredients. Based on available data the classification criteria are not met.

#### **Acute toxicity – inhalation** **Notes (inhalation LC<sub>50</sub>)**

Not determined. The product is unlikely to present any significant inhalation hazard at ambient temperatures and under normal conditions of use.

#### **Serious eye damage/irritation** **Serious eye damage/irritation**

May cause mild, short lasting discomfort to eyes.

#### **Respiratory sensitisation** **Respiratory sensitisation**

No evidence to suggest the product will be a respiratory sensitiser. Repeated exposure to oil mists may cause respiratory damage.

#### **Skin sensitisation** **Skin sensitisation**

Not expected to be a skin sensitizer based on information on components.

**Carcinogenicity**

**Carcinogenicity**

This product contains mineral oils which are considered to be severely refined and not considered to be carcinogenic under IARC. All of the oils in this product have been demonstrated to contain less than 3% extractables by the IP346 test

**Reproductive toxicity**

**Reproductive toxicity - fertility**

No data available to suggest the product will cause reproductive toxicity.

**Specific target organ toxicity - single exposure**

**STOT - single exposure**

Based on available data the classification criteria are not met.

**Specific target organ toxicity - repeated exposure**

**STOT - repeated exposure**

Based on available data the classification criteria are not met.

**Aspiration hazard**

**Aspiration hazard**

Kinematic viscosity > 20.5 mm<sup>2</sup>/s. The product viscosity is greater than the upper limit assigned for classification. The product contains mineral oil. If aspirated into the lungs e.g. through vomiting after ingestion admit to hospital immediately.

**General information**

This product has low toxicity. Only large quantities are likely to have adverse effects on human health.

**Inhalation**

Unlikely to be hazardous by inhalation because of the low vapour pressure of the product at ambient temperature.

**Ingestion**

No harmful effects expected from quantities likely to be ingested by accident.

**Skin contact**

Skin irritation should not occur when used as recommended. Repeated exposure may cause skin dryness or cracking.

**Eye contact**

May cause temporary eye irritation.

**Acute and chronic health Hazards**

Prolonged or repeated contact with used oil may cause serious skin diseases, such as dermatitis and skin cancer.

**SECTION 12: Ecological Information**

**Ecotoxicity**

Based on available data the classification criteria are not met. Not regarded as dangerous for the environment.

**12.1. Toxicity**

**Toxicity**

Based on available data the classification criteria are not met. Not considered toxic to fish.

**Acute toxicity – aquatic Invertebrates**

Based on available data the classification criteria are not met.

**12.2. Persistence and degradability**

**Persistence and degradability**

The product contains mineral oil which has limited biodegradability in CEC test methods but will biodegrade slowly in aerobic water and sediments and is considered ultimately biodegradable.

**Stability (hydrolysis)**

The product is based on highly refined mineral oils that are considered stable to hydrolysis.

**Biodegradation**

The product is not considered readily biodegradeable, albeit the major constituents are expected to ultimately biodegrade.

**Biological oxygen demand  
Chemical oxygen demand**

Not determined.  
Not determined.

**12.3. Bioaccumulative potential**

**Bioaccumulative potential  
Partition coefficient**

Bioaccumulation is unlikely to be significant because of the low water-solubility of this product. Not determined. log Kow: > 7 The above figure is typical of mineral oil.

**12.4. Mobility in soil**

**Mobility**

The product is non-volatile. The product is insoluble in water and will spread on the water surface.

**Henry's law constant**

Not determined.

### **12.5. Results of PBT and vPvB assessment**

**Results of PBT and vPvB assessment** This product does not contain any substances classified as PBT or vPvB.

### **12.6. Other adverse effects**

**Other adverse effects** None known.

## **SECTION 13: Disposal considerations**

### **13.1. Waste treatment methods**

**General information** This material and its container must be disposed of as hazardous waste. Dispose of waste via a licensed waste disposal contractor.

**Disposal methods** Waste, residues, empty containers, discarded work clothes and contaminated cleaning materials should be collected in designated containers, labelled with their contents. Dispose of waste via a licensed waste disposal contractor.

**Waste class** European waste catalogue (EWC) number = 13 02 08\* (other engine, gear and lubricating oil)

## **SECTION 14: Transport information**

**General** The product is not covered by international regulations on the transport of dangerous goods (IMDG, IATA, ADR/RID).

### **14.1. UN number**

Not applicable.

### **14.2. UN proper shipping name**

Not applicable.

### **14.3. Transport hazard class(es)**

No transport warning sign required.

### **14.4. Packing group**

Not applicable.

### **14.5. Environmental hazards**

Environmentally hazardous substance/marine pollutant

### **14.6. Special precautions for user**

Not applicable.

### **14.7. Transport in bulk according to Annex II of MARPOL73/78 and the IBC Code**

**Transport in bulk according to Annex II of MARPOL 73/78 and the IBC Code** Not applicable.

## **SECTION 15: Regulatory information**

### **15.1. Safety, health and environmental regulations/legislation specific for the substance or mixture**

**National regulations** Health and Safety at Work etc. Act 1974 (as amended).  
The Chemicals (Hazard Information and Packaging for Supply) Regulations 2009 (SI 2009 No. 716).  
Control of Substances Hazardous to Health Regulations 2002 (as amended).  
The Carriage of Dangerous Goods and Use of Transportable Pressure Equipment Regulations 2009 (SI 2009 No. 1348) (as amended) ["CDG 2009"].

**EU legislation** Dangerous Preparations Directive 1999/45/EC.  
Dangerous Substances Directive 67/548/EEC.  
Regulation (EC) No 1907/2006 of the European Parliament and of the Council of 18 December 2006 concerning the Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) (as amended).  
Regulation (EC) No 1272/2008 of the European Parliament and of the Council of 16 December 2008 on classification, labelling and packaging of substances and mixtures (as amended).

**Guidance** Workplace Exposure Limits EH40.  
Safety Data Sheets for Substances and Preparations.

## **15.2. Chemical safety assessment**

No chemical safety assessment has been carried out.

### **Inventories**

#### **Canada - DSL/NDSL**

All the ingredients are listed or exempt.

#### **US - TSCA**

All the ingredients are listed or exempt.

#### **Australia - AICS**

All the ingredients are listed or exempt.

#### **Korea - KECI**

All the ingredients are listed or exempt.

#### **China - IECSC**

All the ingredients are listed or exempt.

#### **Philippines – PICCS**

All the ingredients are listed or exempt.

#### **New Zealand - NZIOC**

All the ingredients are listed or exempt.

---

## **SECTION 16: Other information**

---

<b>Revision comments</b>	NOTE: Lines within the margin indicate significant changes from the previous revision.
<b>Revision date</b>	11/11/2015
<b>Revision</b>	1
<b>SDS number</b>	21580
<b>Hazard statements in full</b>	H304 May be fatal if swallowed and enters airways.

### 3. Liquimatic Super ATF

## SAFETY DATA SHEET Liquimatic Super ATF

### SECTION 1: Identification of the substance/mixture and of the company/undertaking

#### 1.1. Product identifier

Product name	Liquimatic Super ATF
Product number	7290
Internal identification	GHS21439
REACH registration number	n/a Mixture

#### 1.2. Relevant identified uses of the substance or mixture and uses advised against

Identified uses	Transmission fluid
Uses advised against	Non specified unless otherwise stated within this MSDS

#### 1.3. Details of the supplier of the safety data sheet

Supplier	Morris Lubricants Castle Foregate Shrewsbury SY1 2EL 08.45 - 17.00 GMT T: (+44)(0)1743 232200 F: (+44)(0)1743 353584 sds@morris-lubricants.co.uk
----------	---

#### 1.4. Emergency telephone number

Emergency telephone	+44 (0)1743 232200 (08.45 - 17.00 hrs GMT)
---------------------	--

### SECTION 2: Hazards identification

#### 2.1. Classification of the substance or mixture

##### Classification

Physical hazards	Not Classified
Health hazards	Not Classified
Environmental hazards	Not Classified
Classification (67/548/EEC or 1999/45/EC)	Not Classified

#### 2.2. Label elements

Hazard statements	NC Not Classified
Supplemental label Information	EUH210 Safety data sheet available on request.
Contains	Distillates (petroleum), solvent-dewaxed heavy paraffinic

#### 2.3. Other hazards

This product does not contain any substances classified as PBT or vPvB.

### SECTION 3: Composition/information on ingredients

#### 3.2. Mixtures

Distillates (petroleum) solvent-dewaxed heavy paraffinic		60-100%
CAS-No.: 64742-65-0	EC No.: 265-169-7	REACH registration number: 01-2119471299-27-XXXX
Classification Asp. Tox. 1 - H304	Classification (67/548/EEC or 1999/45/EC) -	
Lubricating oil (petroleum) C20-C50,hydrotreated,neutral oil based		10-30%
CAS number: 72623-87-1	EC number: 276-738-4	REACH registration number: 01-2119474889-13-0000
Classification Asp. Tox. 1 - H304	Classification (67/548/EEC or 1999/45/EC) -	
Methacrylate copolymer		1-5%
CAS number: —		
Classification Eye Irrit. 2 - H319		

The Full Text for all R-Phrases and Hazard Statements are Displayed in Section 16.

**Composition comments** If REACH registration numbers do not appear the substance is either exempt from registration, does not meet the minimum volume threshold for registration, the registration date has not yet come due or this information is proprietary.

### SECTION 4: First aid measures

#### 4.1. Description of first aid measures

<b>General information</b>	Get medical attention if any discomfort continues.
<b>Inhalation</b>	If spray/mist has been inhaled, proceed as follows. Move affected person to fresh air and keep warm and at rest in a position comfortable for breathing. Get medical attention if any discomfort continues.
<b>Ingestion</b>	Get medical attention if any discomfort continues. Do not induce vomiting.
<b>Skin contact</b>	Remove contaminated clothing immediately and wash skin with soap and water.
<b>Eye contact</b>	Rinse immediately with plenty of water. Remove any contact lenses and open eyelids wide apart. Continue to rinse for at least 15 minutes. Get medical attention promptly if symptoms occur after washing.

#### 4.2. Most important symptoms and effects, both acute and delayed

<b>General information</b>	If aspiration into the lungs is suspected, eg when vomiting, admit to hospital immediately.
<b>Inhalation</b>	Upper respiratory irritation.
<b>Ingestion</b>	May cause discomfort if swallowed. The product contains mineral oil, which if aspirated into the lungs through vomiting after ingestion, may result in chemical pneumonia.
<b>Skin contact</b>	Prolonged contact may cause redness, irritation and dry skin.
<b>Eye contact</b>	Irritation of eyes and mucous membranes.

#### 4.3. Indication of any immediate medical attention and special treatment needed

**Notes for the doctor** Treat symptomatically.



---

## SECTION 5: Firefighting measures

---

### 5.1. Extinguishing media

<b>Suitable extinguishing media</b>	Extinguish with foam, carbon dioxide, dry powder or water fog.
<b>Unsuitable extinguishing Media</b>	Do not use water jet as an extinguisher, as this will spread the fire.

### 5.2. Special hazards arising from the substance or mixture

<b>Specific hazards</b>	Heat from fire could result in drums bursting
<b>Hazardous combustion products</b>	Protection against nuisance dust must be used when the airborne concentration exceeds 10 mg/m <sup>3</sup> . Oxides of carbon. Oxides of nitrogen. Fire may also create other unidentified organic gases some of which may be toxic.

### 5.3. Advice for firefighters

<b>Protective actions during firefighting</b>	Control run-off water by containing and keeping it out of sewers and watercourses.
<b>Special protective equipment for firefighters</b>	Wear self-contained breathing apparatus.

---

## SECTION 6: Accidental release measures

---

### 6.1. Personal precautions, protective equipment and emergency procedures

<b>Personal precautions</b>	For personal protection, see Section 8. In case of spills, beware of slippery floors and surfaces.
-----------------------------	--

### 6.2. Environmental precautions

<b>Environmental precautions</b>	Contain spillage with sand or earth. Avoid the spillage or runoff entering drains, sewers or watercourses. The product is insoluble in water and will spread on the water surface.
----------------------------------	--

### 6.3. Methods and material for containment and cleaning up

<b>Methods for cleaning up</b>	Contain spillage with sand or earth. Collect spillage for reclamation or disposal in sealed containers via a licensed waste contractor. Avoid water contacting spilled material or leaking containers. Spillages or uncontrolled discharges into watercourses must be reported immediately to the Environmental Agency or other appropriate regulatory body. In case of spillage on water prevent the spread by use of suitable barrier equipment
--------------------------------	---

### 6.4. Reference to other sections

<b>Reference to other sections</b>	For personal protection, see Section 8. See Section 11 for additional information on health hazards. For waste disposal, see section 13.
------------------------------------	--

---

## SECTION 7: Handling and storage

---

### 7.1. Precautions for safe handling

<b>Usage precautions</b>	Avoid spilling. Always remove oil with soap and water or skin cleaning agent, never use organic solvents. Do not use oil-contaminated clothing or shoes, and do not put rags moistened with oil into pockets.
--------------------------	---

### 7.2. Conditions for safe storage, including any incompatibilities

<b>Storage precautions</b>	Store in tightly-closed, original container in a dry, cool and well-ventilated place.
<b>Storage class</b>	Miscellaneous hazardous material storage.

### 7.3. Specific end use(s)

<b>Specific end use(s)</b>	The identified uses for this product are detailed in Section 1.2.
----------------------------	---

---

## SECTION 8: Exposure Controls/personal protection

### 8.1. Control parameters

#### Occupational exposure limits

##### Distillates (petroleum), solvent-dewaxed heavy paraffinic

Long-term exposure limit (8-hour TWA): ACGIH 5 mg/m<sup>3</sup>  
 Short-term exposure limit (15-minute): ACGIH 10 mg/m<sup>3</sup>

##### Lubricating oil (petroleum) C20-C50,hydrotreated,neutral oil based

Long-term exposure limit (8-hour TWA): ACGIH 5 mg/m<sup>3</sup>  
 Short-term exposure limit (15-minute): ACGIH 10 mg/m<sup>3</sup>

##### Distillates (petroleum), hydrotreated light naphthenic

Long-term exposure limit (8-hour TWA): ACGIH 5 mg/m<sup>3</sup>

ACGIH = American Conference of Governmental Industrial Hygienists.

#### Distillates (petroleum), solvent-dewaxed heavy paraffinic (CAS: 64742-65-0)

**DNEL** - Inhalation; : 5.4 mg/m<sup>3</sup>

**PNEC** - ; 9.33 mg/kg

### 8.2. Exposure controls

#### Protective equipment



#### Appropriate engineering Controls

Provide adequate general and local exhaust ventilation. Observe any occupational exposure limits for the product or ingredients.

#### Eye/face protection

Eyewear complying with an approved standard should be worn if a risk assessment indicates eye contact is possible. The following protection should be worn: Chemical splash goggles or face shield.

#### Hand protection

The most suitable glove should be chosen in consultation with the glove supplier/manufacturer, who can provide information about the breakthrough time of the glove material.

#### Other skin and body Protection

Use barrier creams to prevent skin contact.

#### Hygiene measures

Use engineering controls to reduce air contamination to permissible exposure level. Wash

#### Respiratory protection

No specific recommendations. Respiratory protection must be used if the airborne contamination exceeds the recommended occupational exposure limit.

#### Thermal hazards

Not anticipated under normal conditions of use. The product is combustible if heated excessively and an ignition source is applied.

#### Environmental exposure Controls

Do not allow product to contaminate land.

---

## SECTION 9: Physical and Chemical Properties

### 9.1. Information on basic physical and chemical properties

<b>Appearance</b>	Liquid.
<b>Colour</b>	Red.
<b>Odour</b>	Characteristic. Oil-like.
<b>Odour threshold</b>	Not known.

<b>pH</b>	Not applicable.
<b>Melting point</b>	-40°C Pour point
<b>Initial boiling point and range</b>	>320°C @ 101.3 kPa
<b>Flash point</b>	196°C PMCC (Pensky-Martens closed cup).
<b>Evaporation rate</b>	Not relevant.
<b>Upper/lower flammability or explosive limits</b>	Not known.
<b>Other flammability</b>	Product is not flammable but on excessive heating may become combustible.
<b>Vapour pressure</b>	<0.1 kPa @ 20°C
<b>Vapour density</b>	Not determined.
<b>Relative density</b>	0.864 @ 15.6°C
<b>Solubility(ies)</b>	Insoluble in water. Soluble in the following materials: Organic solvents.
<b>Partition coefficient</b>	Not determined. log Kow: > 7 The above figure is typical of mineral oil.
<b>Auto-ignition temperature</b>	No specific test data are available.
<b>Decomposition Temperature</b>	Not determined.
<b>Viscosity</b>	34.6 cSt @ 40°C
<b>Explosive properties</b>	Not considered to be explosive.
<b>Explosive under the influence of a flame</b>	Not considered to be explosive.
<b>Oxidising properties</b>	The mixture itself has not been tested but none of the ingredient substances meet the criteria for classification as oxidising.

## **9.2. Other information**

<b>Volatile organic compound</b>	The product is a complex mixture, the majority of which would not be classed as a VOC. However it cannot be discounted that trace or low levels of VOC's may be present.
----------------------------------	--

## **SECTION 10: Stability and reactivity**

### **10.1. Reactivity**

<b>Reactivity</b>	There are no known reactivity hazards associated with this product.
-------------------	---

### **10.2. Chemical stability**

<b>Stability</b>	Stable at normal ambient temperatures and when used as recommended.
------------------	---

### **10.3. Possibility of hazardous reactions**

<b>Possibility of hazardous reactions</b>	Unlikely to occur under normal conditions of use. Unlikely to occur.
---	--

### **10.4. Conditions to avoid**

<b>Conditions to avoid</b>	Avoid heat, flames and other sources of ignition.
----------------------------	---

### **10.5. Incompatible materials**

<b>Materials to avoid</b>	Strong oxidising agents.
---------------------------	--------------------------

### **10.6. Hazardous decomposition products**

<b>Hazardous decomposition Products</b>	Oxides of carbon. Protection against nuisance dust must be used when the airborne concentration exceeds 10 mg/m <sup>3</sup> .
---	--

## SECTION 11: Toxicological information

### 11.1. Information on toxicological effects

#### Acute toxicity - oral

Acute toxicity oral (LD<sub>50</sub>  
mg/kg) 2,000.0

Species Rat

Notes (oral LD<sub>50</sub>) Not expected to be highly toxic based on information of ingredients. Based on available data the classification criteria are not met.

#### Acute toxicity - dermal

Acute toxicity dermal (LD<sub>50</sub>  
mg/kg) 2,000.0

Species Rabbit

Notes (dermal LD<sub>50</sub>) Not expected to be highly toxic based on information of ingredients. Based on available data the classification criteria are not met.

#### Acute toxicity - inhalation

Notes (inhalation LC<sub>50</sub>) Not determined. The product is unlikely to present any significant inhalation hazard at ambient temperatures and under normal conditions of use.

#### Serious eye damage/irritation

Serious eye damage/irritation May cause mild, short lasting discomfort to eyes.

#### Respiratory sensitisation

Respiratory sensitisation No evidence to suggest the product will be a respiratory sensitiser. Repeated exposure to oil mists may cause respiratory damage.

#### Skin sensitisation

Skin sensitisation Not expected to be a skin sensitizer based on information on components.

#### Carcinogenicity

Carcinogenicity This product contains mineral oils which are considered to be severely refined and not considered to be carcinogenic under IARC. All of the oils in this product have been demonstrated to contain less than 3% extractables by the IP346 test

#### Reproductive toxicity

Reproductive toxicity - fertility No data available to suggest the product will cause reproductive toxicity.

#### Specific target organ toxicity - single exposure

STOT - single exposure Based on available data the classification criteria are not met.

#### Specific target organ toxicity - repeated exposure

STOT - repeated exposure Based on available data the classification criteria are not met.

#### Aspiration hazard

Aspiration hazard Kinematic viscosity > 20.5 mm<sup>2</sup>/s. The product viscosity is greater than the upper limit assigned for classification. The product contains mineral oil. If aspirated into the lungs e.g. through vomiting after ingestion admit to hospital immediately.

#### General information

This product has low toxicity. Only large quantities are likely to have adverse effects on human health.

#### Inhalation

Unlikely to be hazardous by inhalation because of the low vapour pressure of the product at ambient temperature.

#### Ingestion

No harmful effects expected from quantities likely to be ingested by accident.

#### Skin contact

Skin irritation should not occur when used as recommended. Repeated exposure may cause skin dryness or cracking.

#### Eye contact

May cause temporary eye irritation.

#### Acute and chronic health hazards

Prolonged or repeated contact with used oil may cause serious skin diseases, such as dermatitis and skin cancer.

---

**SECTION 12: Ecological Information**


---

**Ecotoxicity** Based on available data the classification criteria are not met. Not regarded as dangerous for the environment.

**12.1. Toxicity**

**Toxicity** Based on available data the classification criteria are not met. Not considered toxic to fish.

**Acute toxicity – aquatic Invertebrates** Based on available data the classification criteria are not met.

**12.2. Persistence and degradability**

**Persistence and degradability** The product contains mineral oil which has limited biodegradability in CEC test methods but will biodegrade slowly in aerobic water and sediments and is considered ultimately biodegradable. The product is not readily biodegradable.

**Stability (hydrolysis)** The product is based on highly refined mineral oils that are considered stable to hydrolysis.

**Biodegradation** The product is not considered readily biodegradeable, albeit the major constituents are expected to ultimately biodegrade.

**Biological oxygen demand** Not determined.

**Chemical oxygen demand** Not determined.

**12.3. Bioaccumulative potential**

**Bioaccumulative potential** Bioaccumulation is unlikely to be significant because of the low water-solubility of this product.

**Partition coefficient** Not determined. log Kow: > 7 The above figure is typical of mineral oil.

**12.4. Mobility in soil**

**Mobility** The product is non-volatile. The product is insoluble in water and will spread on the water surface.

**Henry's law constant** Not determined.

**12.5. Results of PBT and vPvB assessment**

**Results of PBT and vPvB Assessment** This product does not contain any substances classified as PBT or vPvB.

**12.6. Other adverse effects**

**Other adverse effects** None known.

---

**SECTION 13: Disposal considerations**


---

**13.1. Waste treatment methods**

**General information** Waste should be treated as controlled waste. Dispose of waste to licensed waste disposal site in accordance with the requirements of the local Waste Disposal Authority.

**Disposal methods** Dispose of waste to licensed waste disposal site in accordance with the requirements of the local Waste Disposal Authority.

**Waste class** European Waste Catalogue = 13 03 10\*

---

**SECTION 14: Transport information**


---

**General** The product is not covered by international regulations on the transport of dangerous goods (IMDG, IATA, ADR/RID).

**14.1. UN number**

Not applicable.

**14.2. UN proper shipping name**

Not applicable.

### **14.3. Transport hazard class(es)**

No transport warning sign required.

### **14.4. Packing group**

Not applicable.

### **14.5. Environmental hazards**

Environmentally hazardous substance/marine pollutant

### **14.6. Special precautions for user**

Not applicable.

### **14.7. Transport in bulk according to Annex II of MARPOL73/78 and the IBC Code**

Transport in bulk according to Annex II of MARPOL 73/78 and the IBC Code	Not applicable.
--	-----------------

---

## **SECTION 15: Regulatory information**

---

### **15.1. Safety, health and environmental regulations/legislation specific for the substance or mixture**

<b>National regulations</b>	Health and Safety at Work etc. Act 1974 (as amended). The Pollution Prevention and Control Act 1999. Special Waste regulations 1996. Control of Pollution (Oil Storage) (England) Regulations 2001 The Chemicals (Hazard Information and Packaging for Supply) Regulations 2009 (SI 2009 No. 716).
<b>EU legislation</b>	Dangerous Preparations Directive 1999/45/EC. Dangerous Substances Directive 67/548/EEC. Regulation (EC) No 1907/2006 of the European Parliament and of the Council of 18 December 2006 concerning the Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) (as amended). Regulation (EC) No 1272/2008 of the European Parliament and of the Council of 16 December 2008 on classification, labelling and packaging of substances and mixtures (as amended).
<b>Guidance</b>	Workplace Exposure Limits EH40. Safety Data Sheets for Substances and Preparations.

### **15.2. Chemical safety assessment**

No chemical safety assessment has been carried out.

#### **Inventories**

##### **Canada - DSL/NDSL**

All the ingredients are listed or exempt.

##### **US - TSCA**

All the ingredients are listed or exempt.

##### **Australia - AICS**

All the ingredients are listed or exempt.

##### **Korea - KECI**

All the ingredients are listed or exempt.

##### **China - IECSC**

All the ingredients are listed or exempt.

##### **Philippines – PICCS**

All the ingredients are listed or exempt.

##### **New Zealand - NZIOC**

All the ingredients are listed or exempt.

---

**SECTION 16: Other information**

---

<b>Revision comments</b>	NOTE: Lines within the margin indicate significant changes from the previous revision.
<b>Issued by</b>	Regulatory Affairs
<b>Revision date</b>	26/10/2015
<b>Revision</b>	2
<b>SDS number</b>	21439
<b>Hazard statements in full</b>	H304 May be fatal if swallowed and enters airways. H319 Causes serious eye irritation.

**SECTION 16 – Shire Service Record Card**



# SERVICE RECORD CARD

<b>Model:</b> ..... <b>Engine No:</b> .....	
Carried out by E.P.Barrus <b>Print Name:</b>  <b>Actual Hours:</b> PDI  <b>Signed:</b>	<b>Boat Builder Stamp:</b> Commission of Boat and Hand Over to Customer. (Refer to the Installation Check List Page in this Manual). <b>Date:</b> <b>Signed:</b>
<b>Dealer Stamp:</b>  <b>Actual Hours:</b> 1st  <b>Signed:</b>	<b>Dealer Stamp:</b>  <b>Actual Hours:</b> 2nd  <b>Signed:</b>
<b>Dealer Stamp:</b>  <b>Actual Hours:</b> 3rd  <b>Signed:</b>	<b>Dealer Stamp:</b>  <b>Actual Hours:</b> 4th  <b>Signed:</b>
<b>Dealer Stamp:</b>  <b>Actual Hours:</b> 5th  <b>Signed:</b>	<b>Dealer Stamp:</b>  <b>Actual Hours:</b> 6th  <b>Signed:</b>

**Please refer to Owner’s Manual for service intervals**